


МОНБЛАН


ДИВАН-КРОВАТЬ 2.30

MONBLAN

SOFA BED 2.30

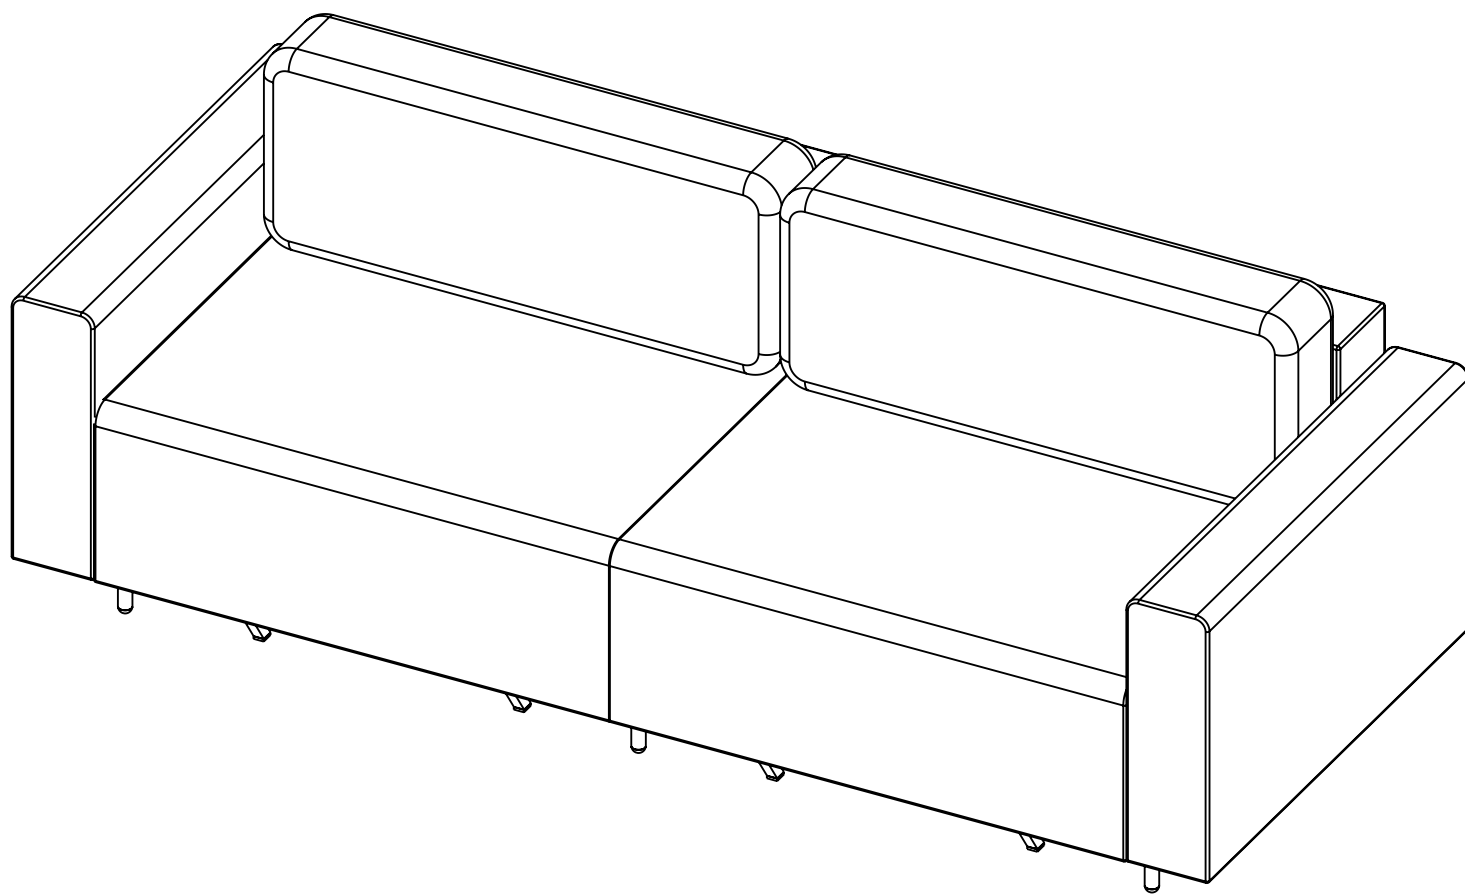



Общая схема

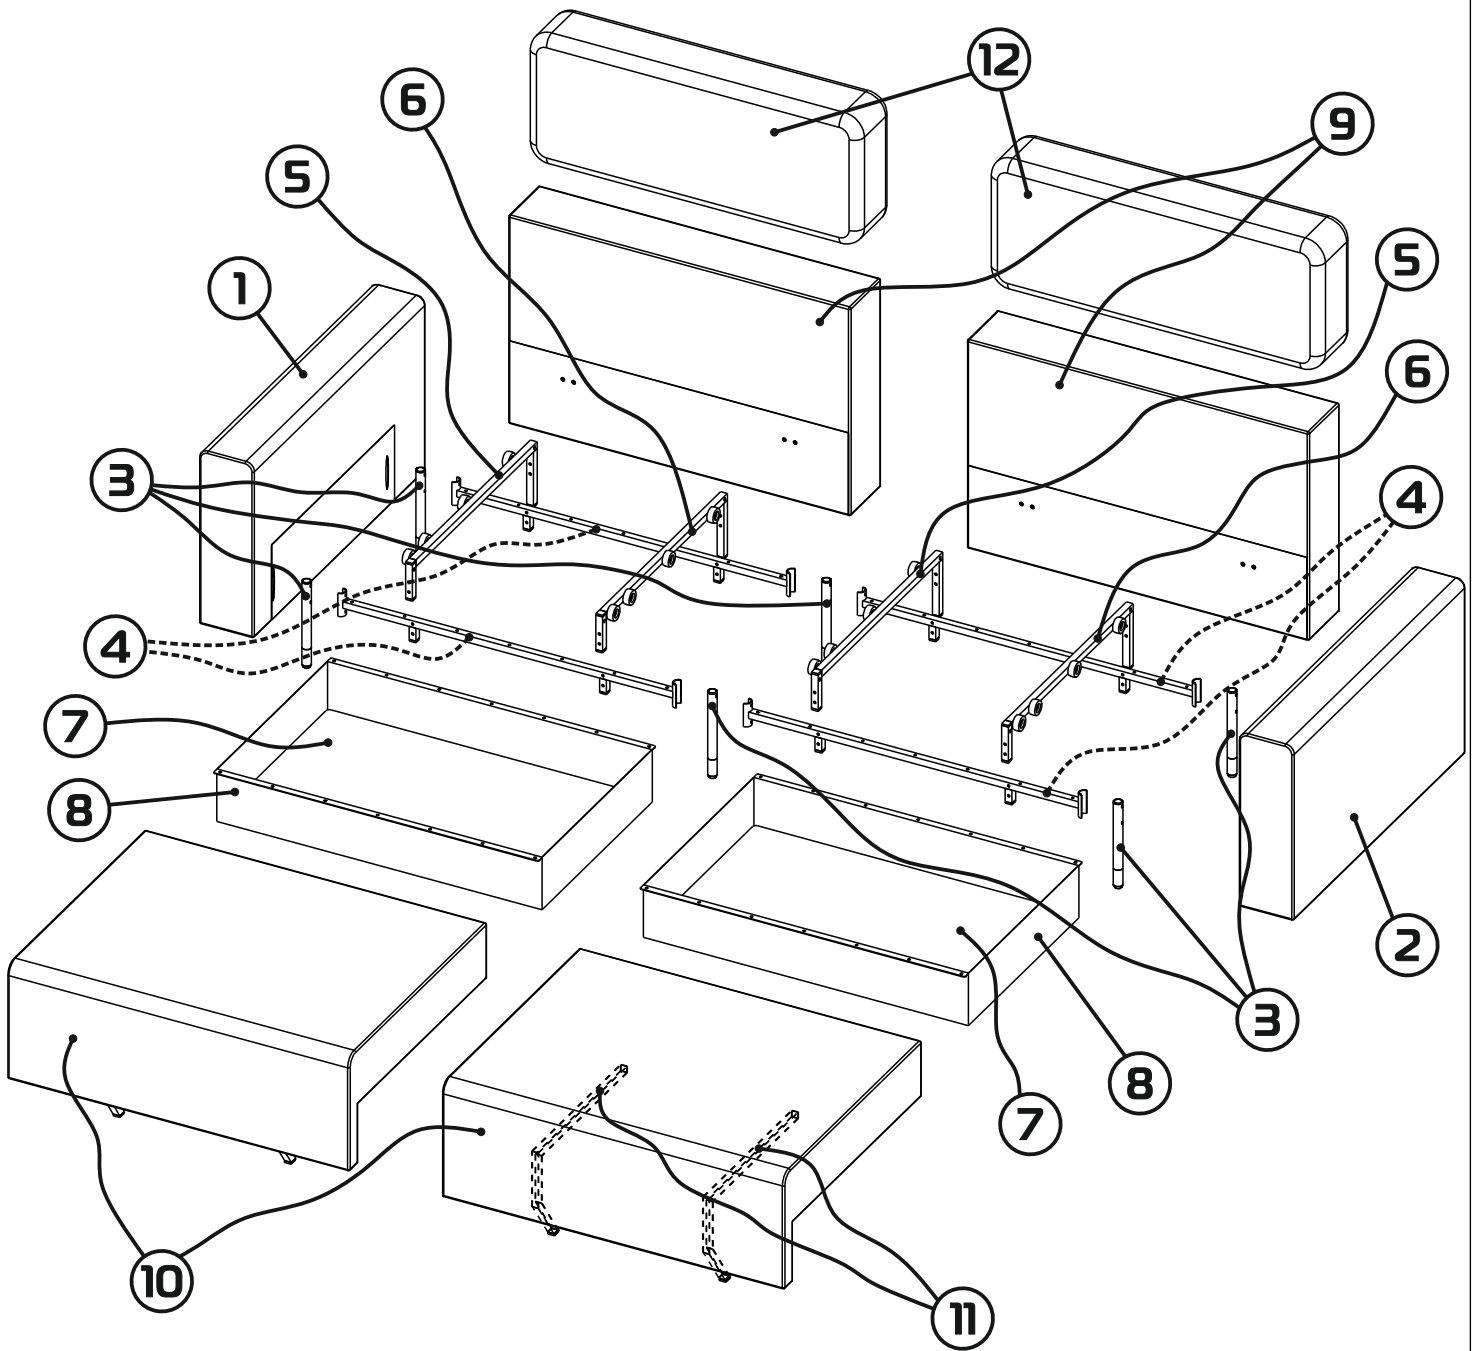

Номера деталей:


1 1 шт	5 2 шт	9 2 шт
2 1 шт	6 2 шт	10 2 шт
3 6 шт	7 2 шт	11 4 шт
4 4 шт	8 2 шт	12 2 шт

Список фурнитуры:

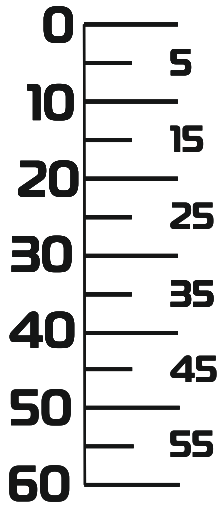


M6x18

8 ШТ



M6x35

12 ШТ




M6x40

4 ШТ





M6x45

16 ШТ




M6x60

8 ШТ

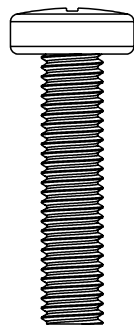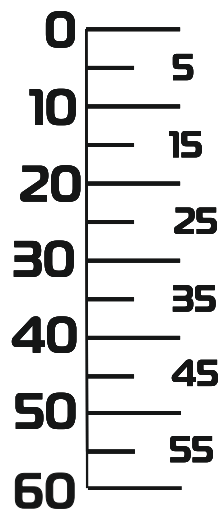


M8x35

20 ШТ

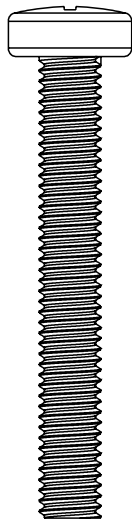

M8x60

4 ШТ

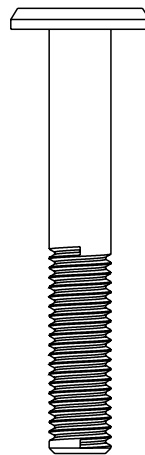


M8x55

8 ШТ




M6

20 ШТ





M8

12 ШТ



M8

4 ШТ

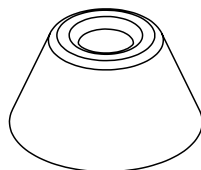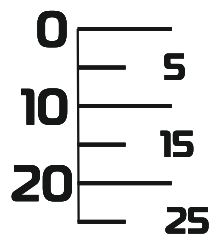


4 ШТ



3,9x16

4 ШТ

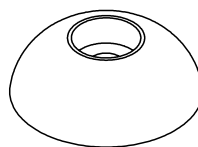


4 ШТ





3,5x16


4 ШТ

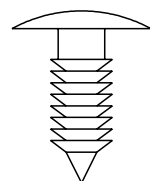


30 ШТ

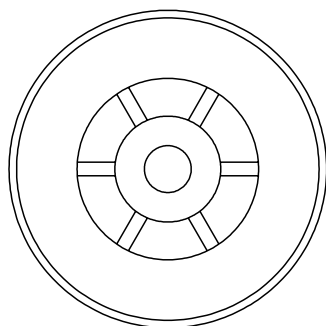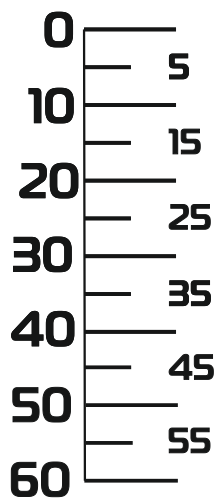


16 шт

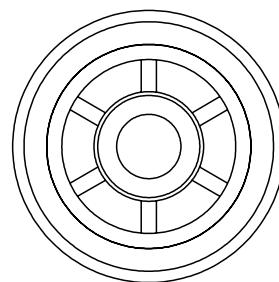


8 шт

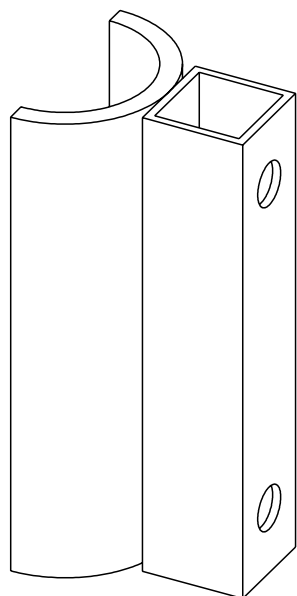



4 шт

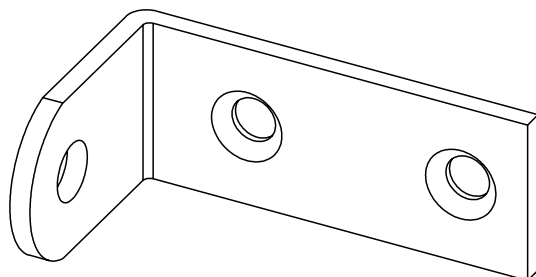


4 шт

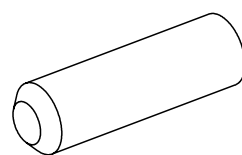


4 шт

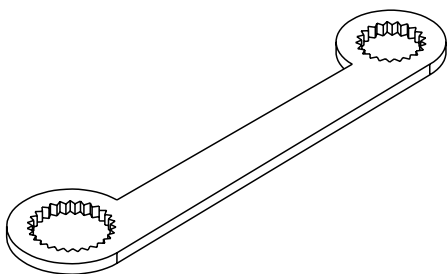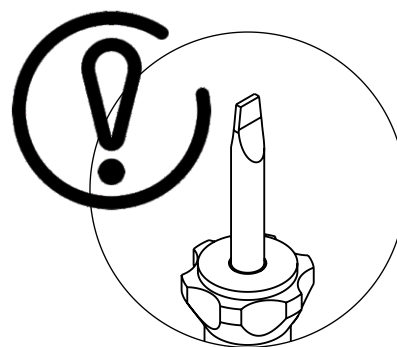


1 шт

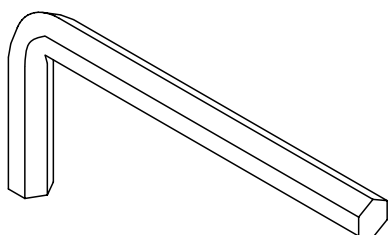



1 шт

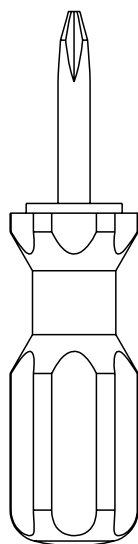


1 шт

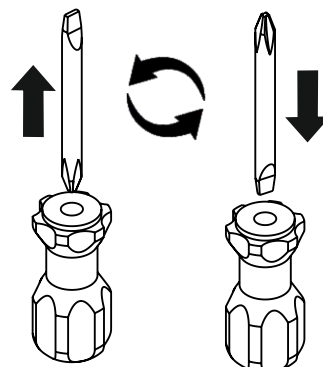


ШАГ 1

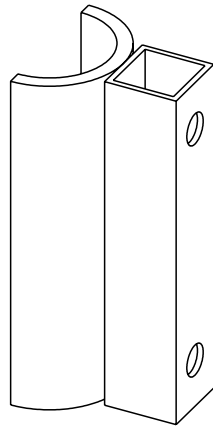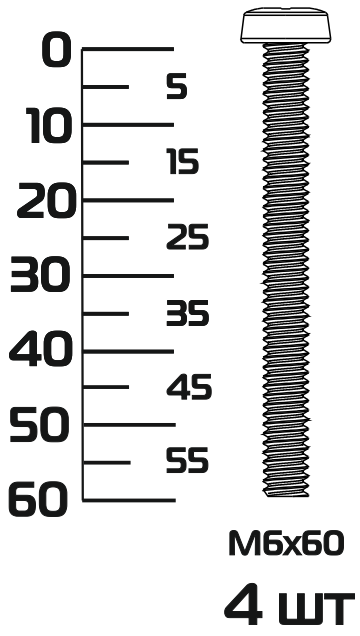

2 ШТ

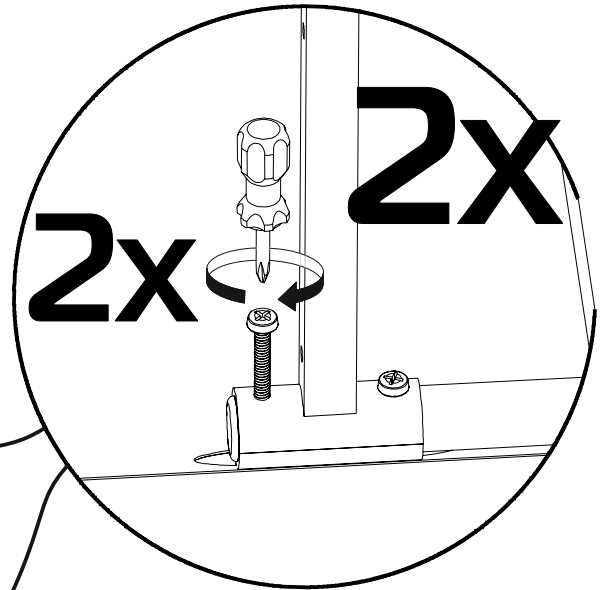




деталь 1

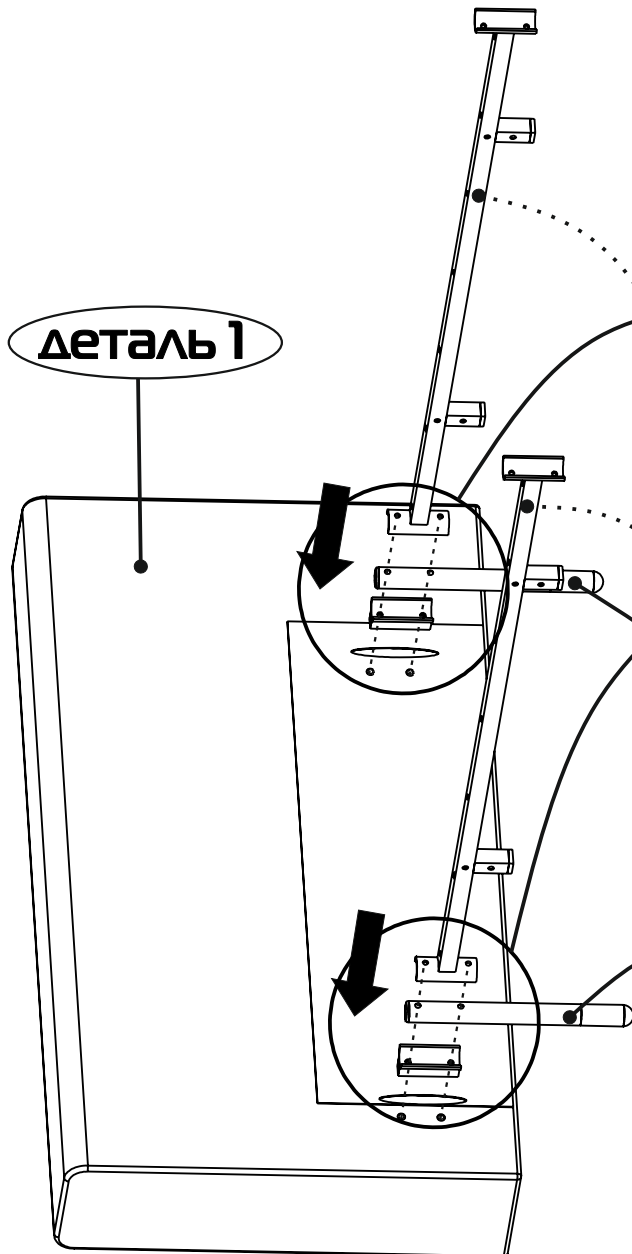


деталь 4

деталь 3

ШАГ 2

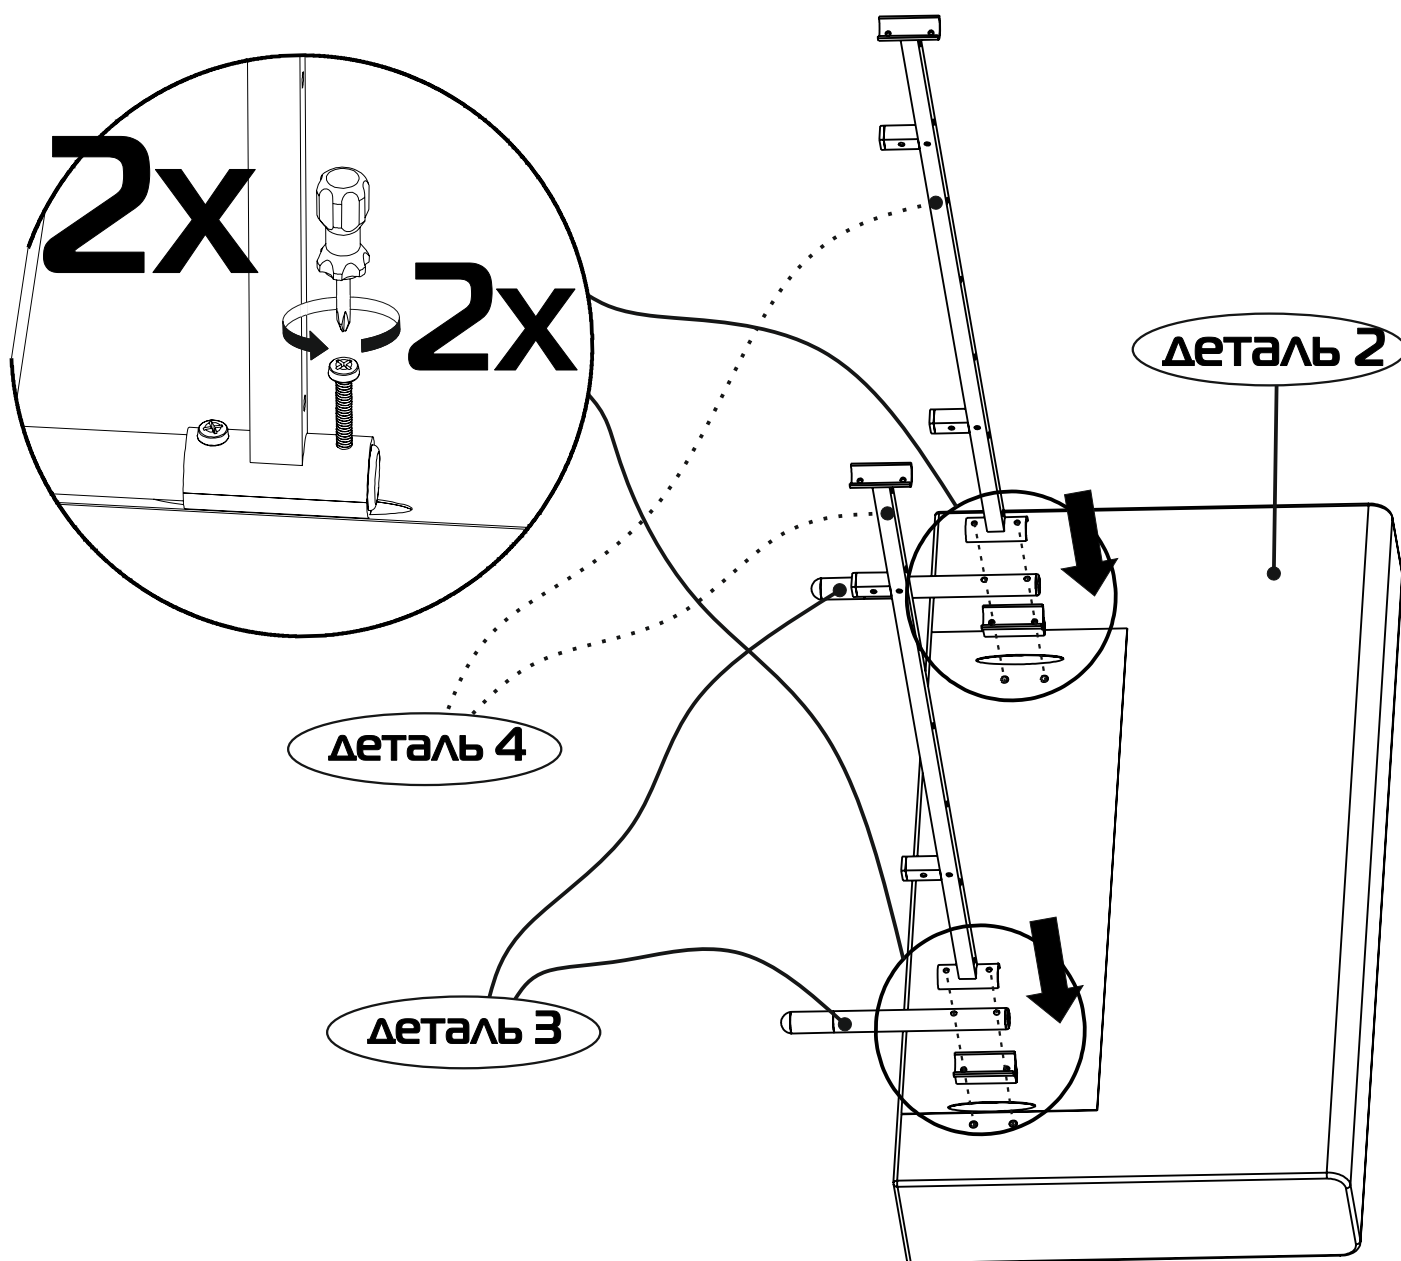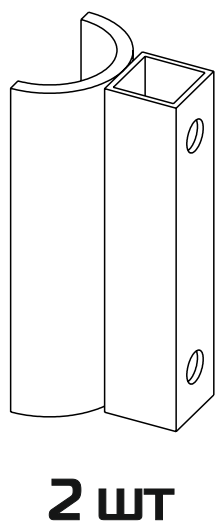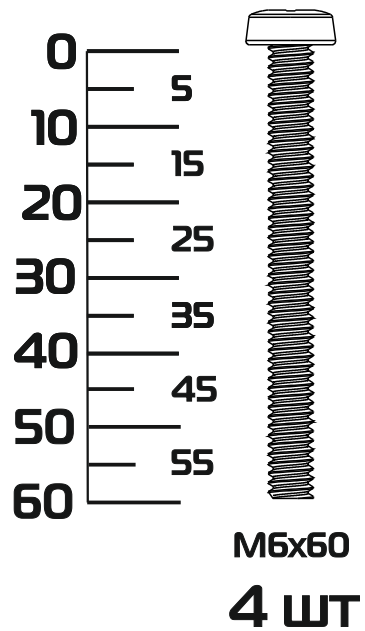




ШАГ 3

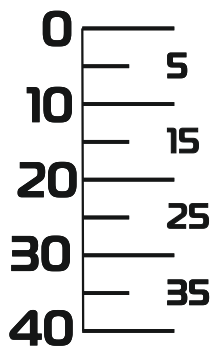



M6
4 ШТ

M6x40

4 ШТ

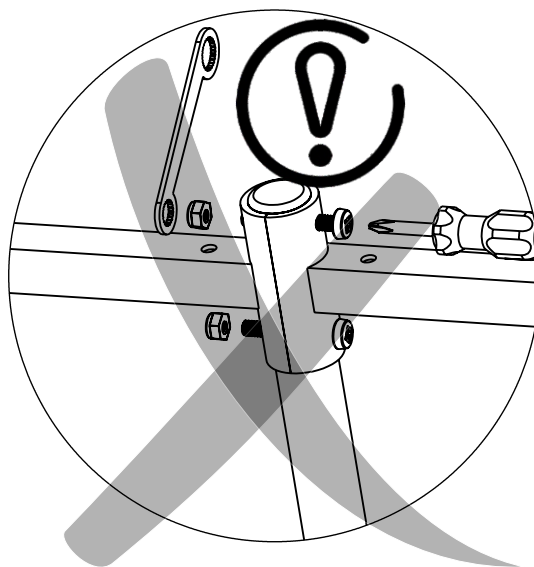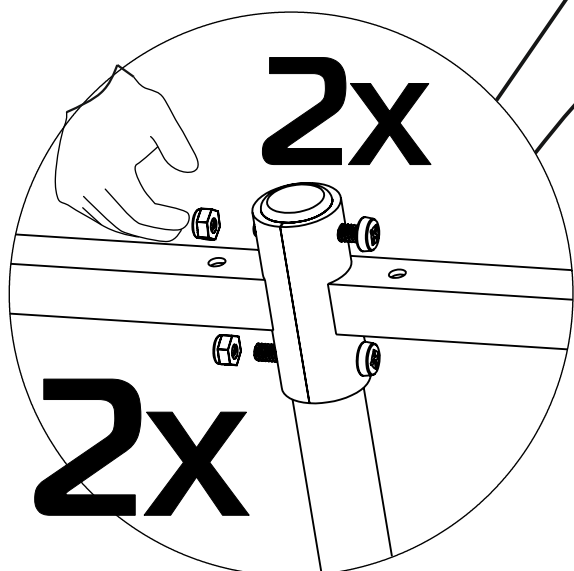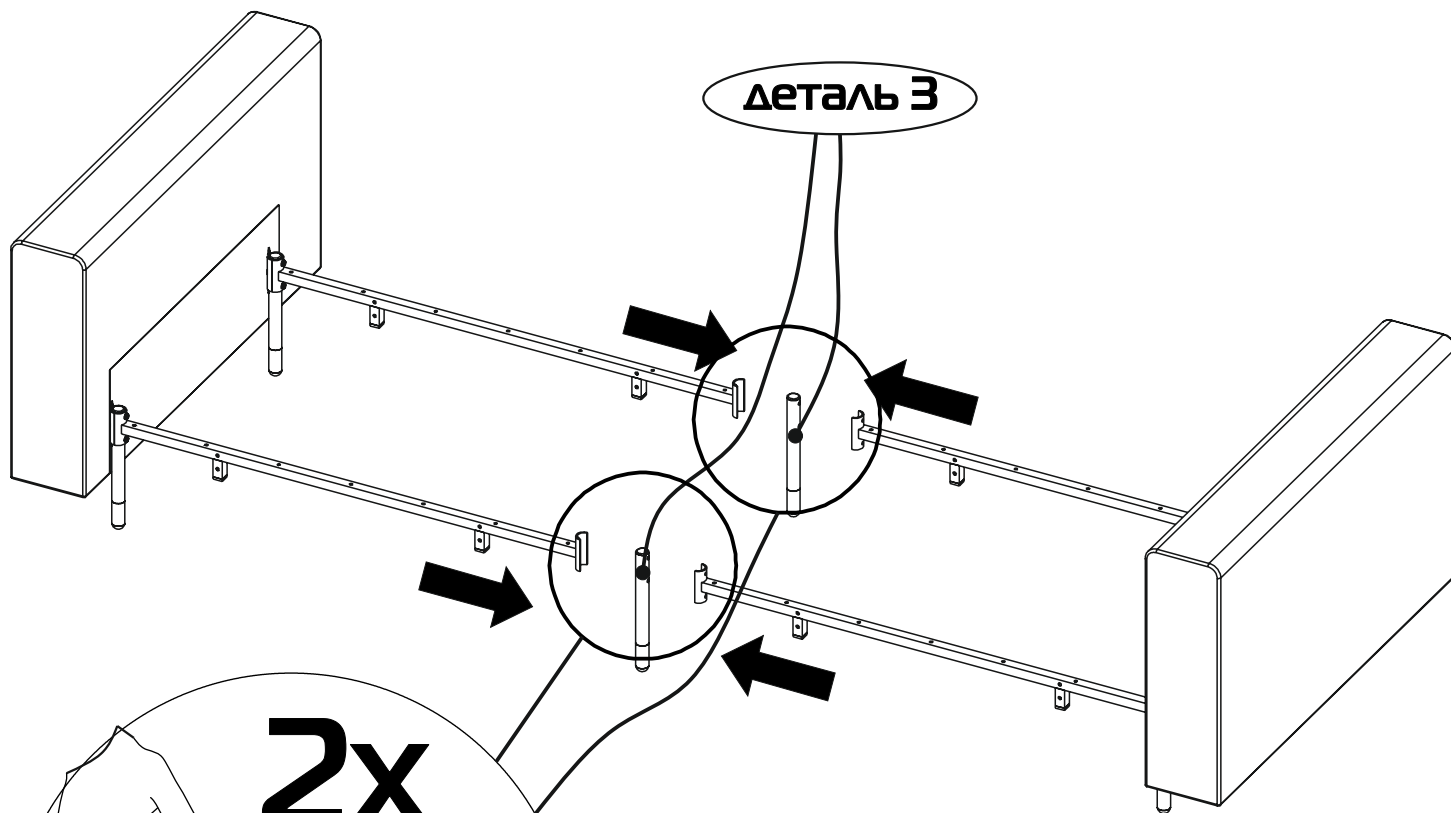


ШАГ 4

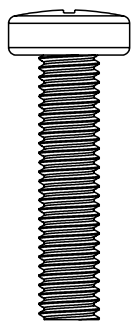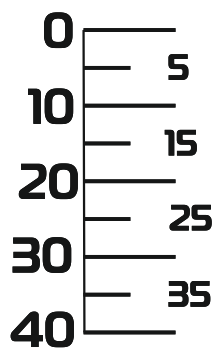



M8x35

16 ШТ

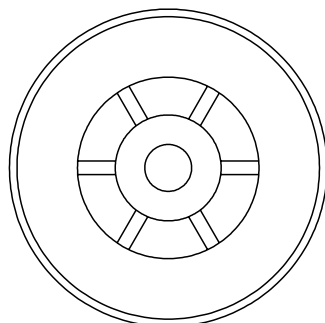

16 ШТ

деталь 6

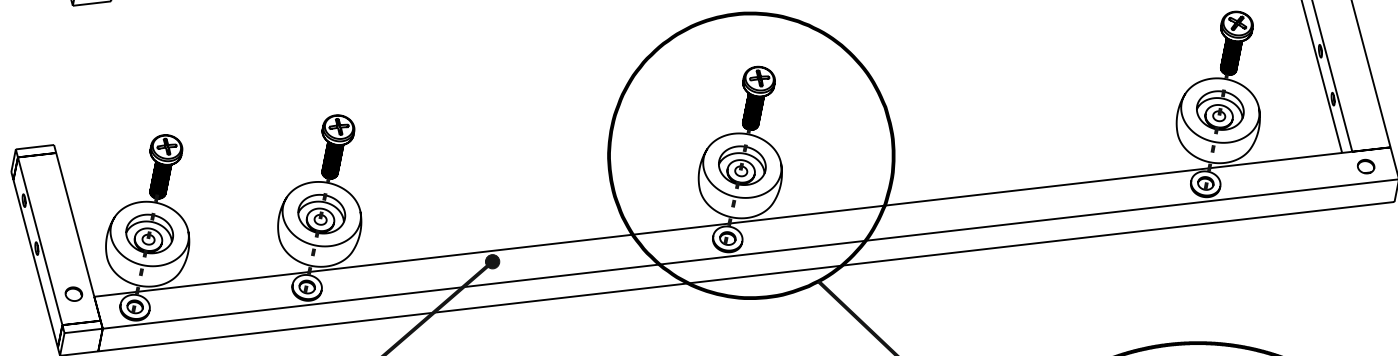
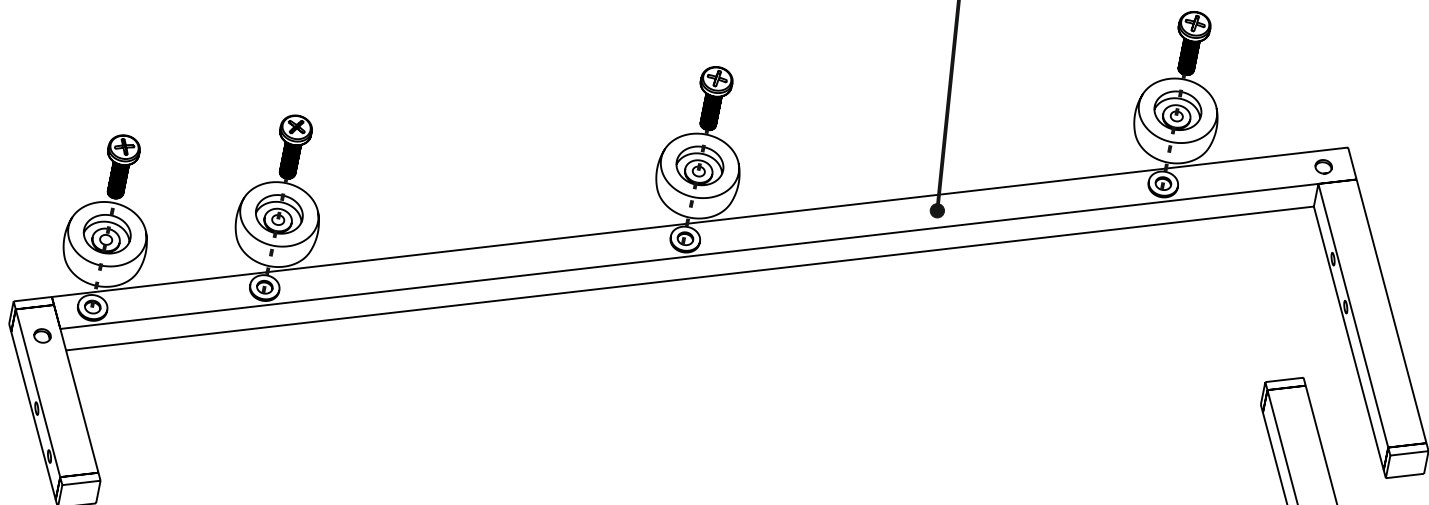


деталь 5


2x

8x


ШАГ 5

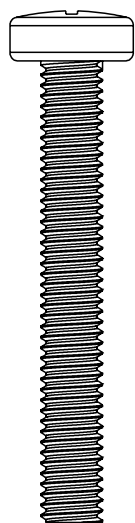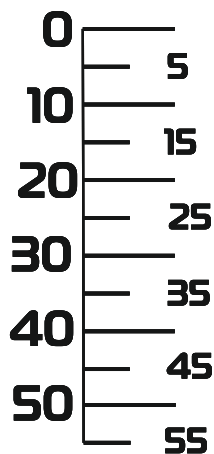

M8x60
4 ШТ



M8
4 ШТ



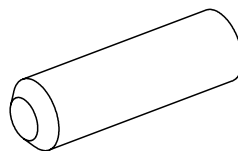


4 ШТ


деталь 5

деталь 6

2x

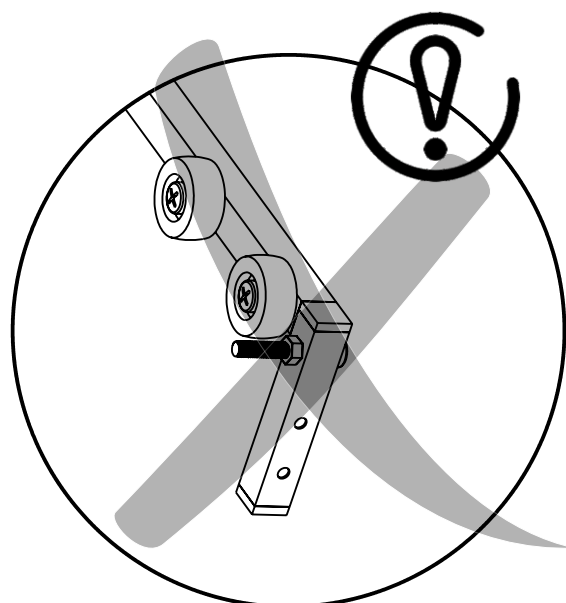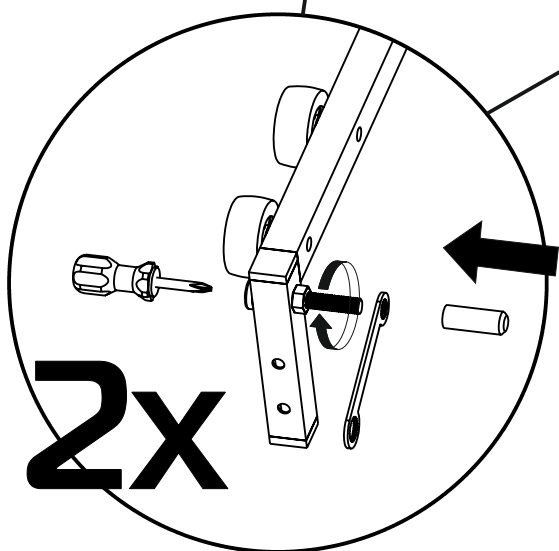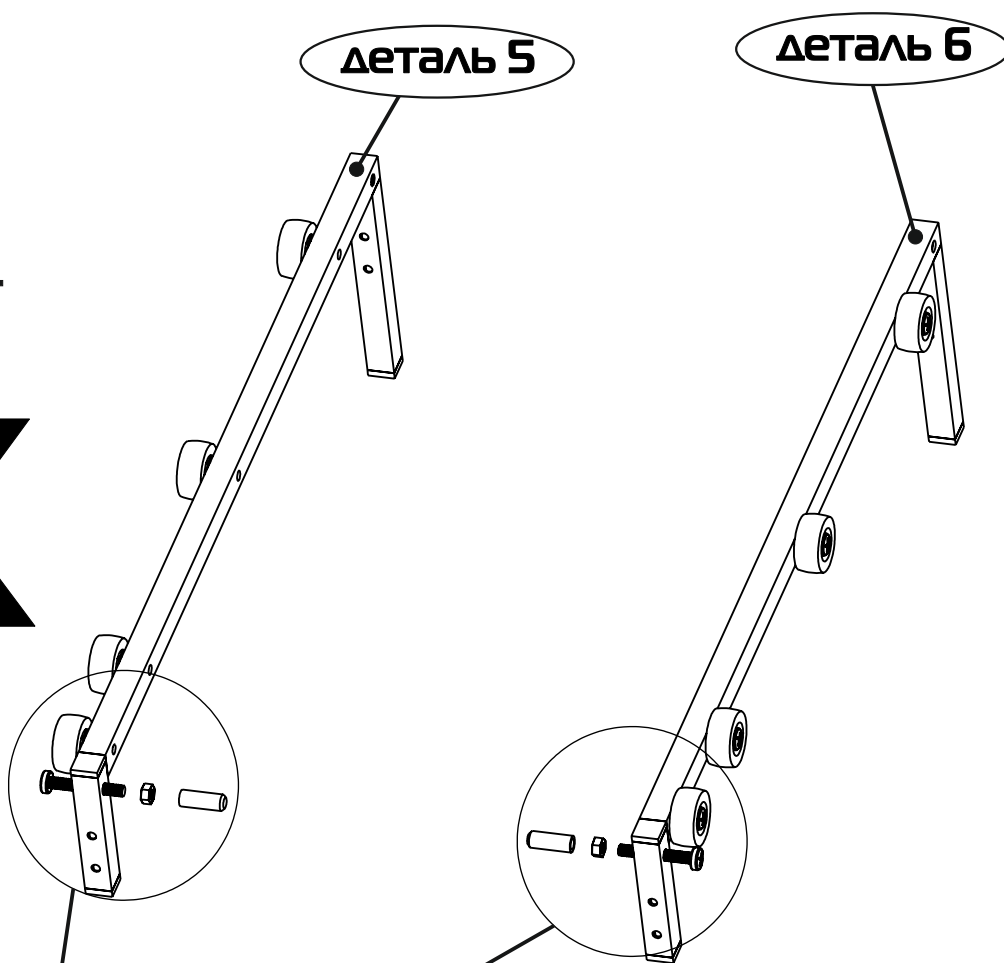


ШАГ 6

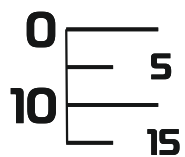




3,9x16

4 ШТ

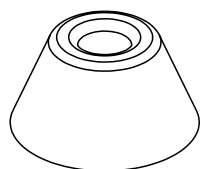


4 ШТ




4x

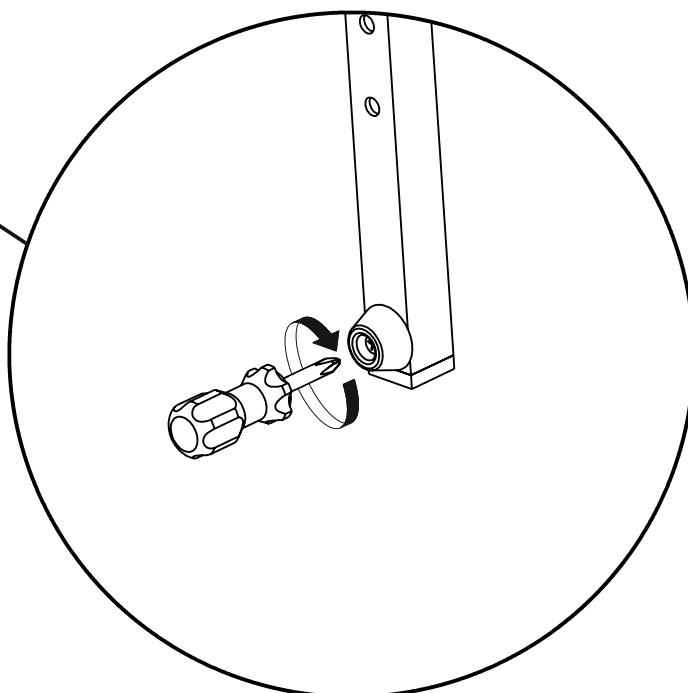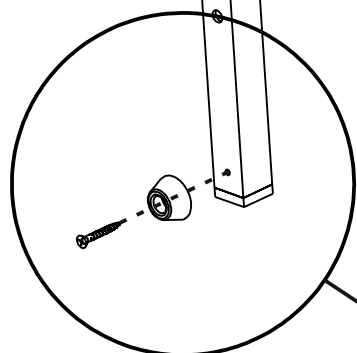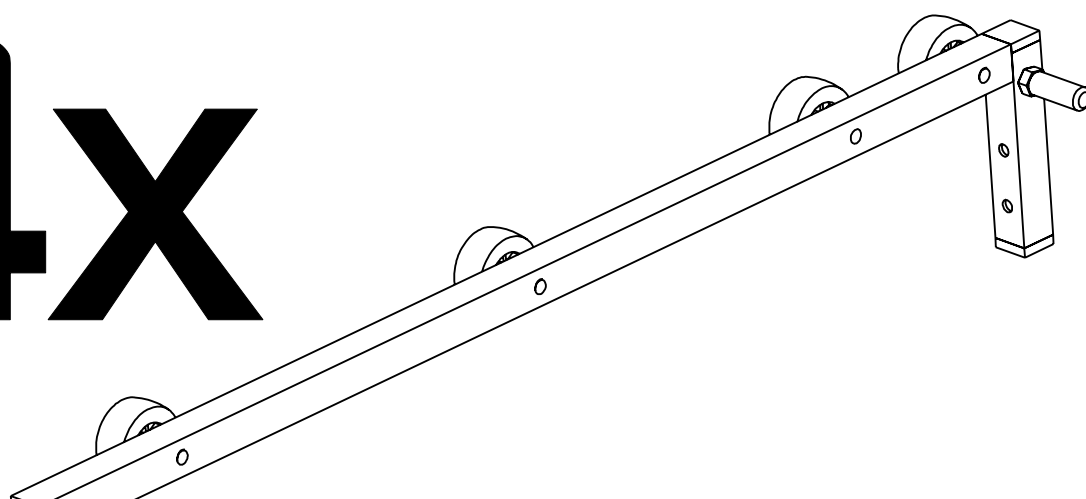


ШАГ 7

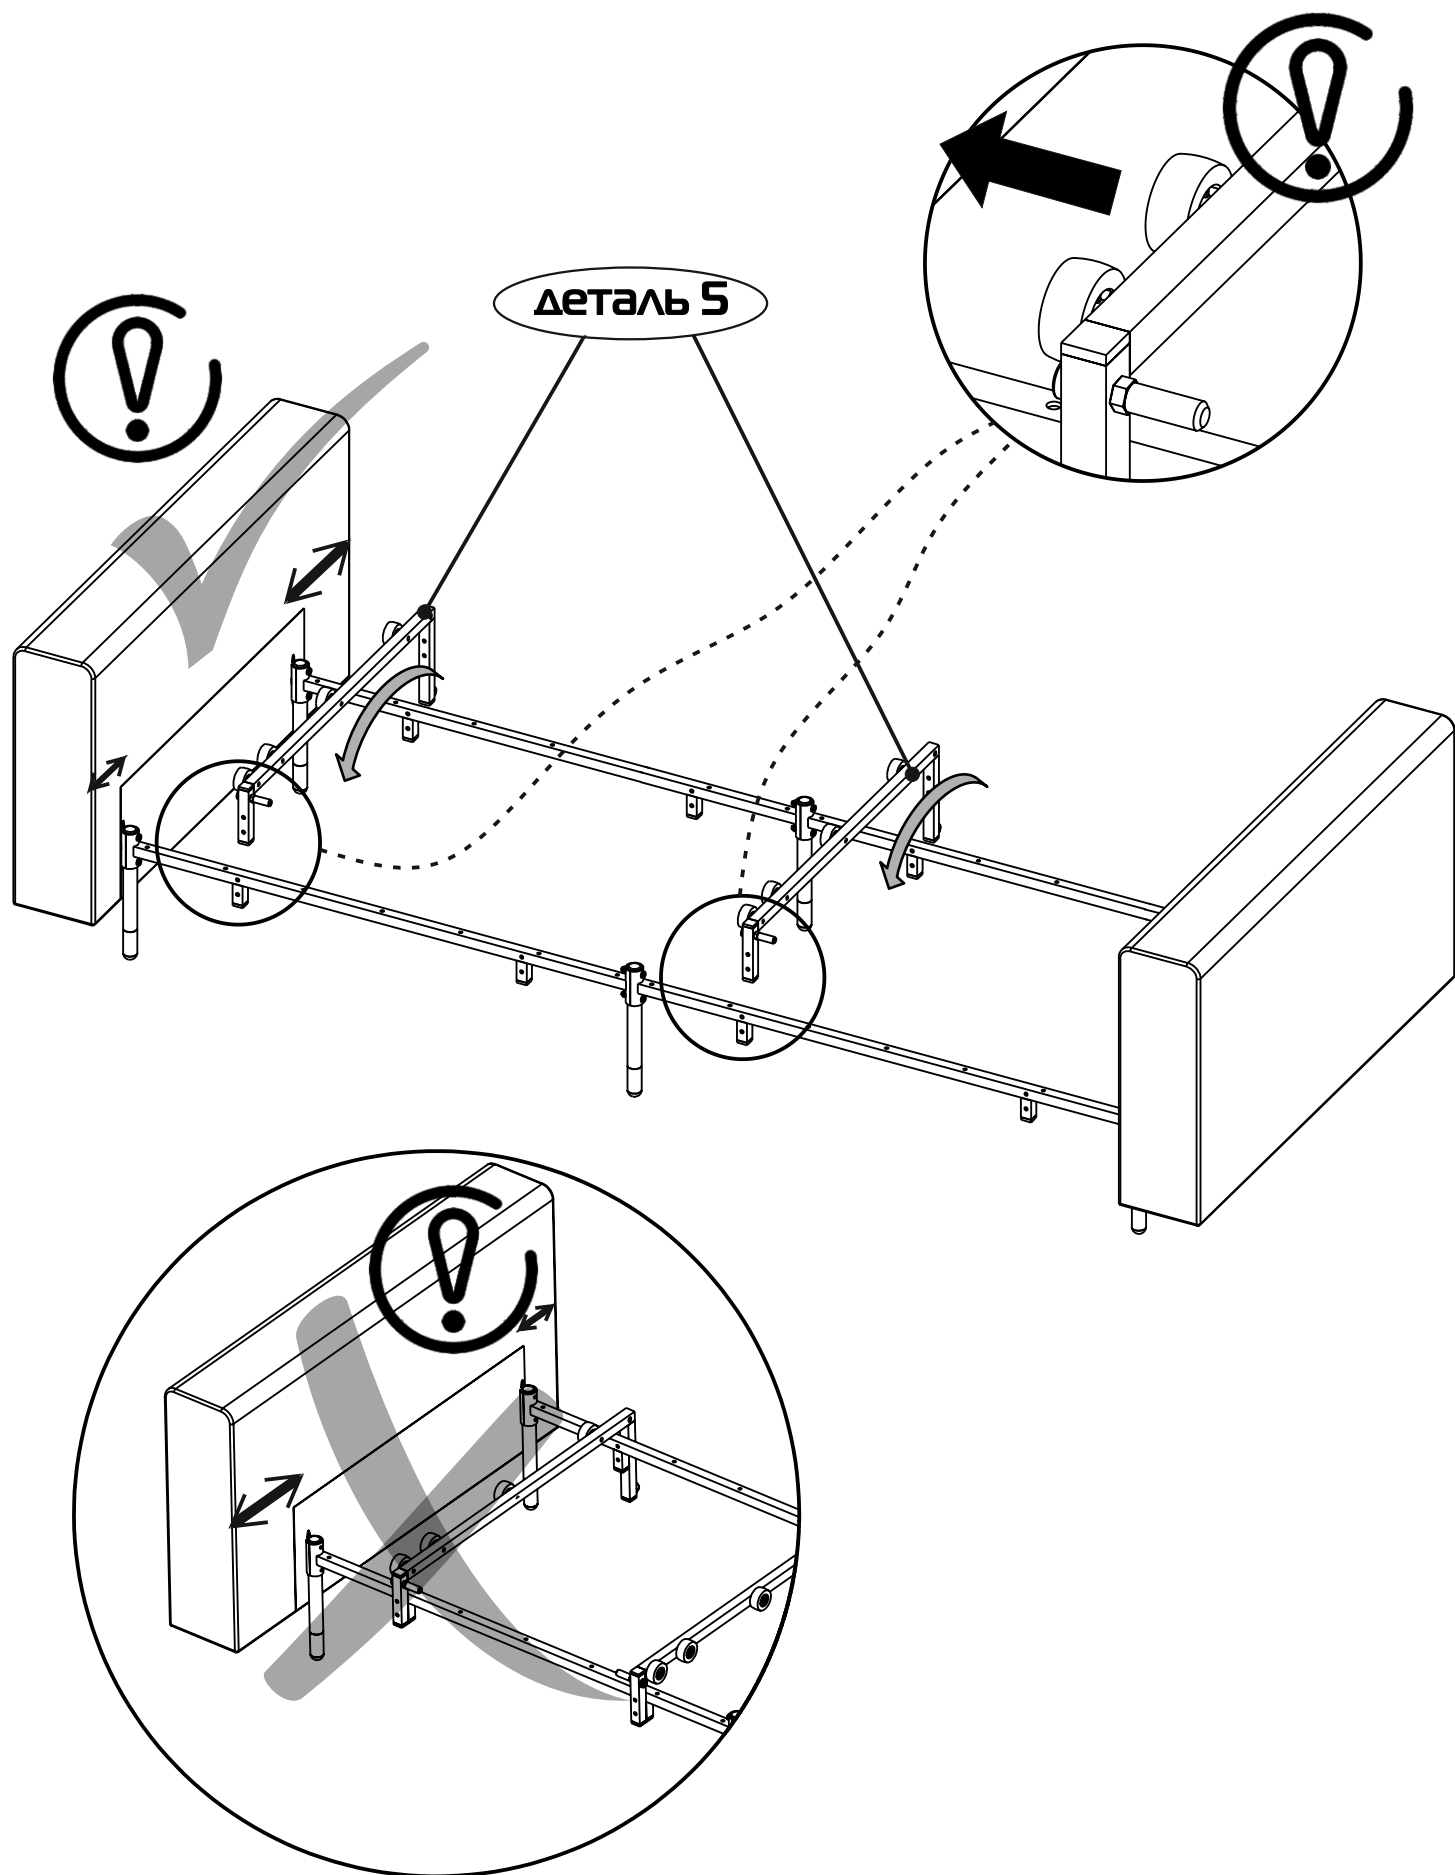

ШАГ 8

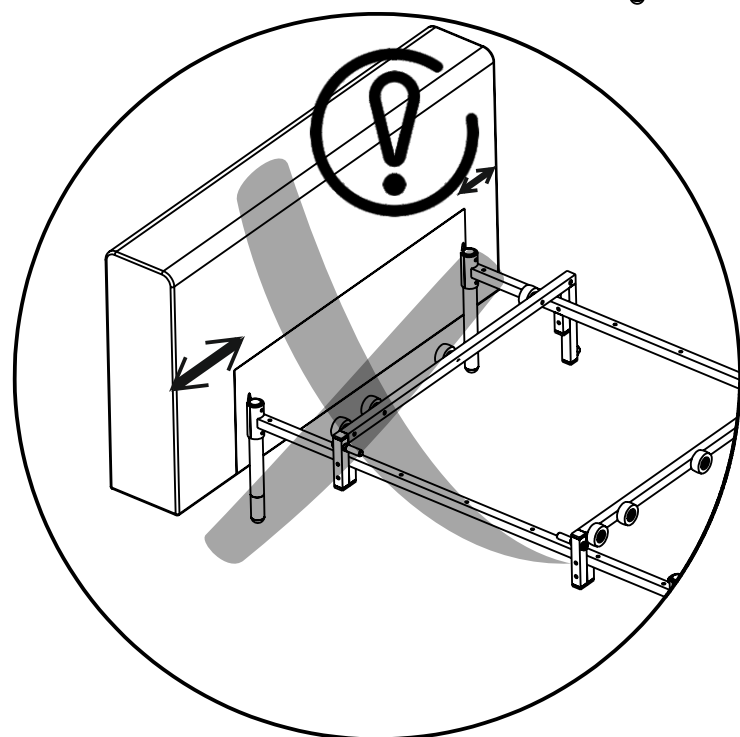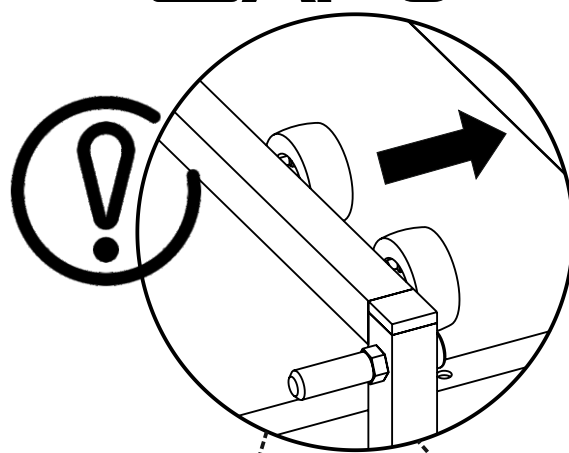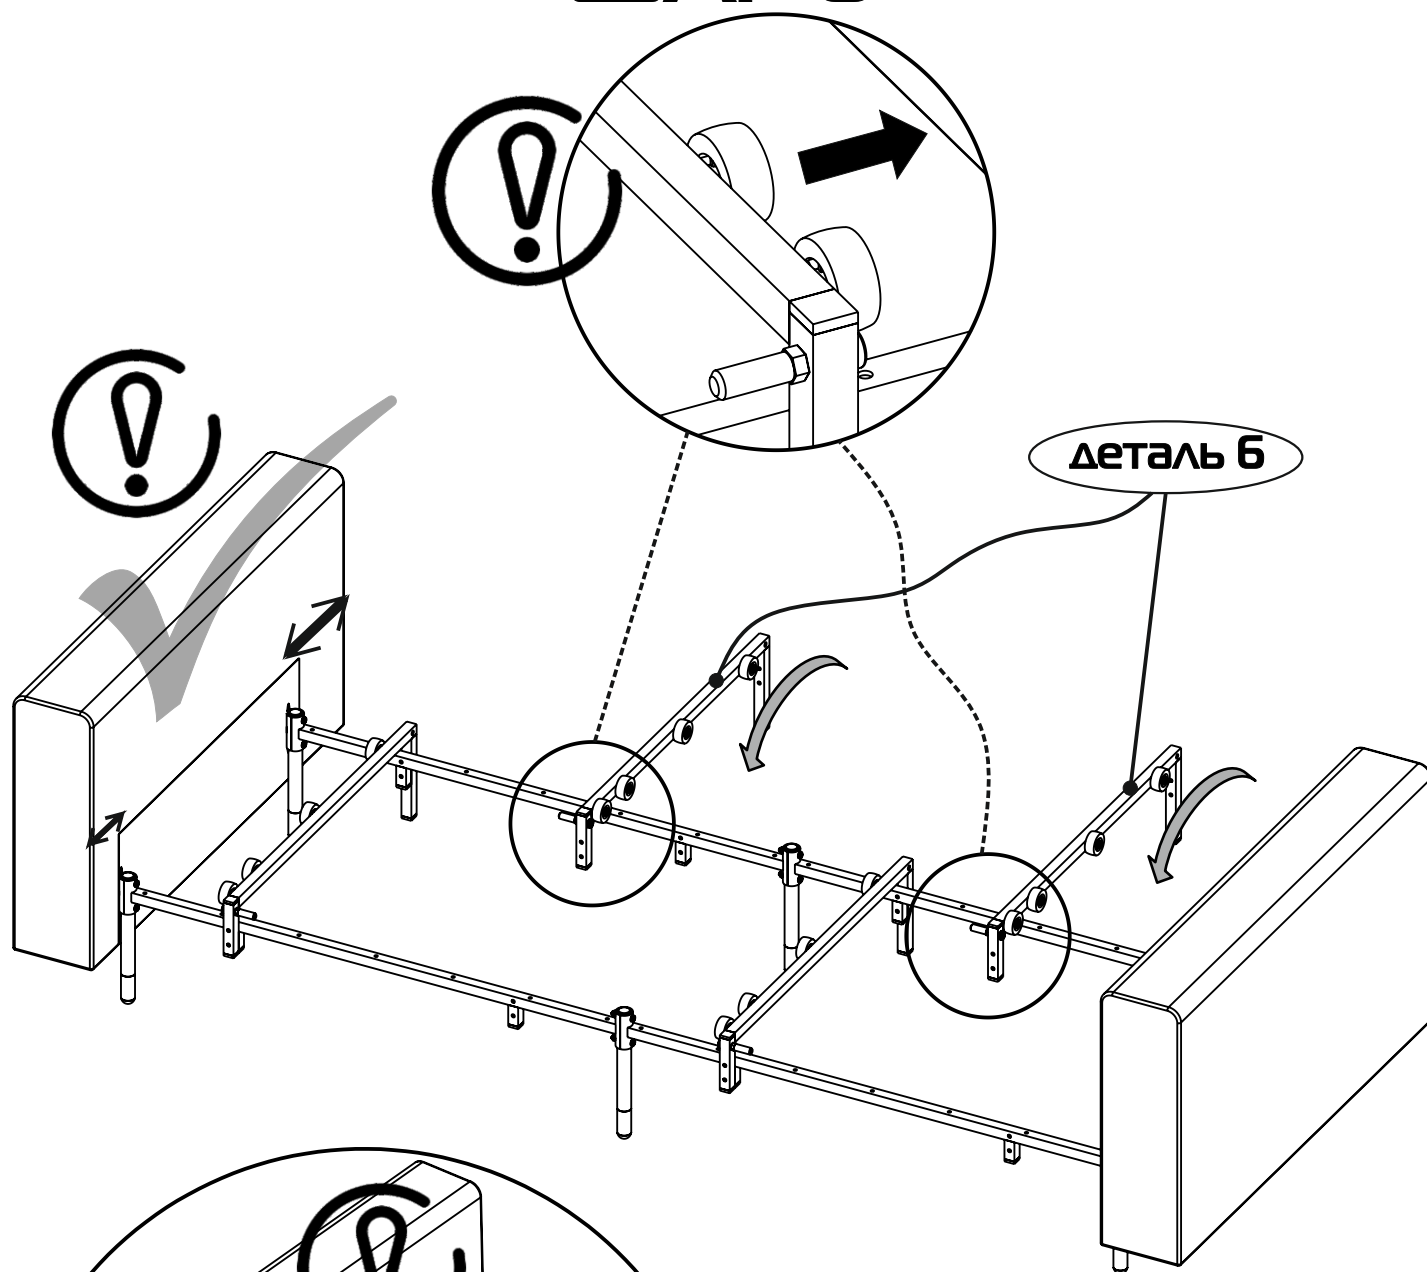

ШАГ 9

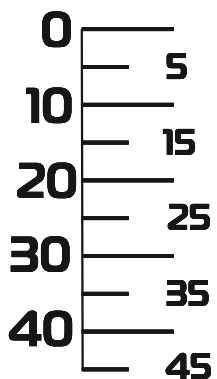





M6x45
16 шт




M6
16 шт

2x

2x

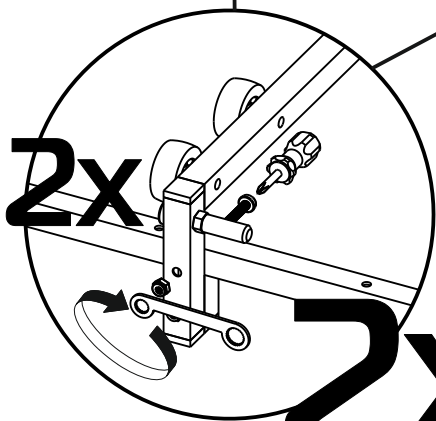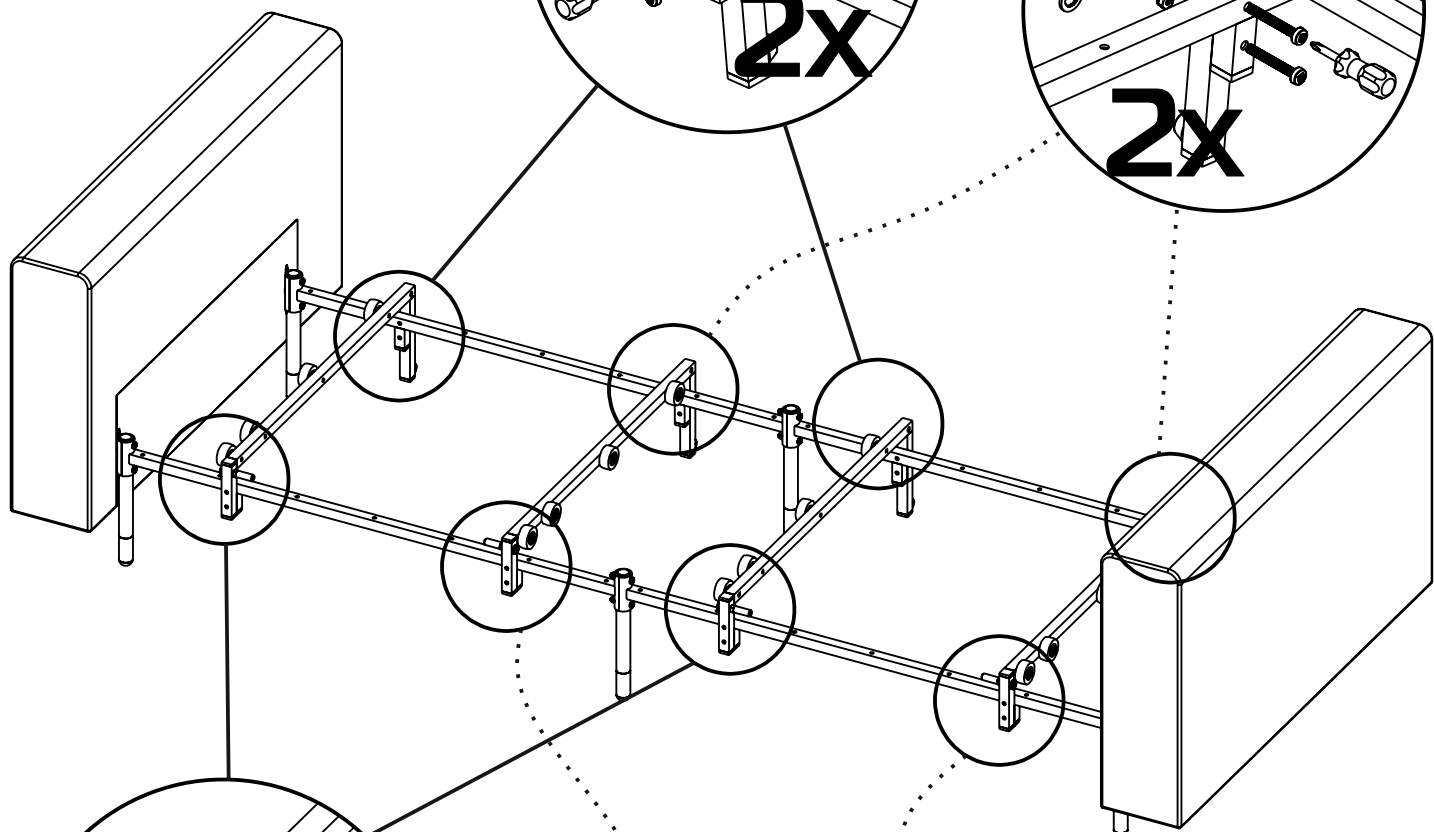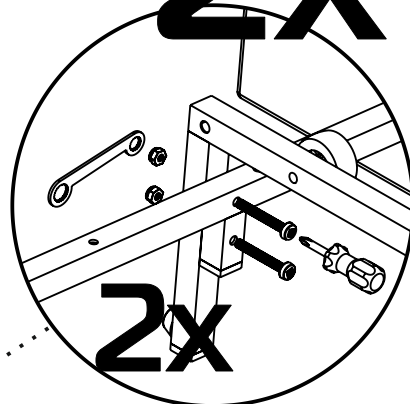
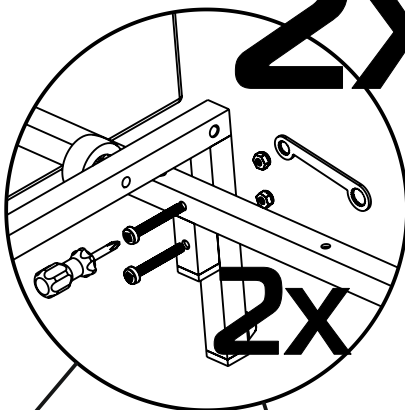


2x

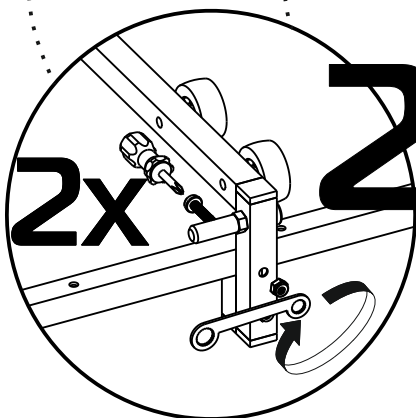


2x

ШАГ 10

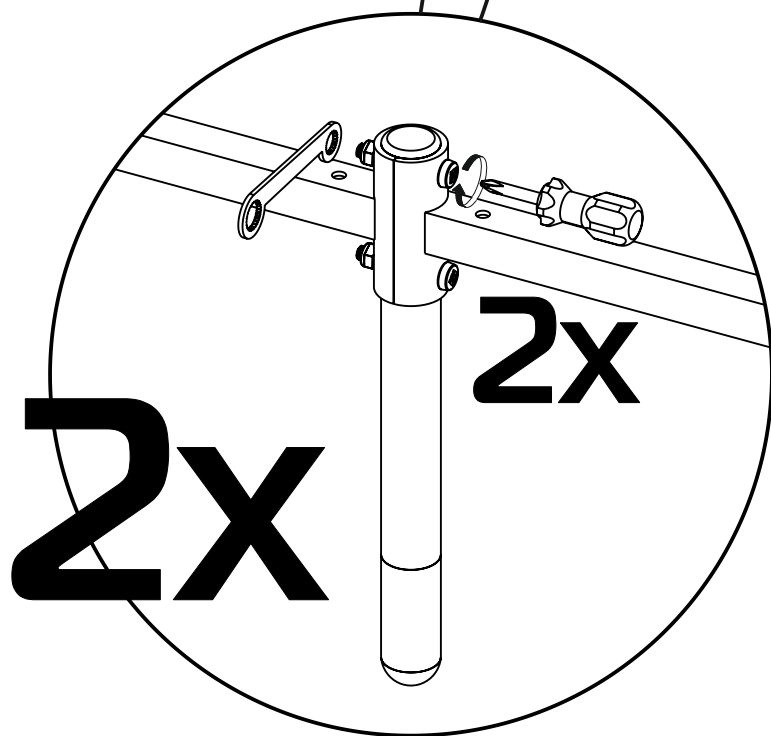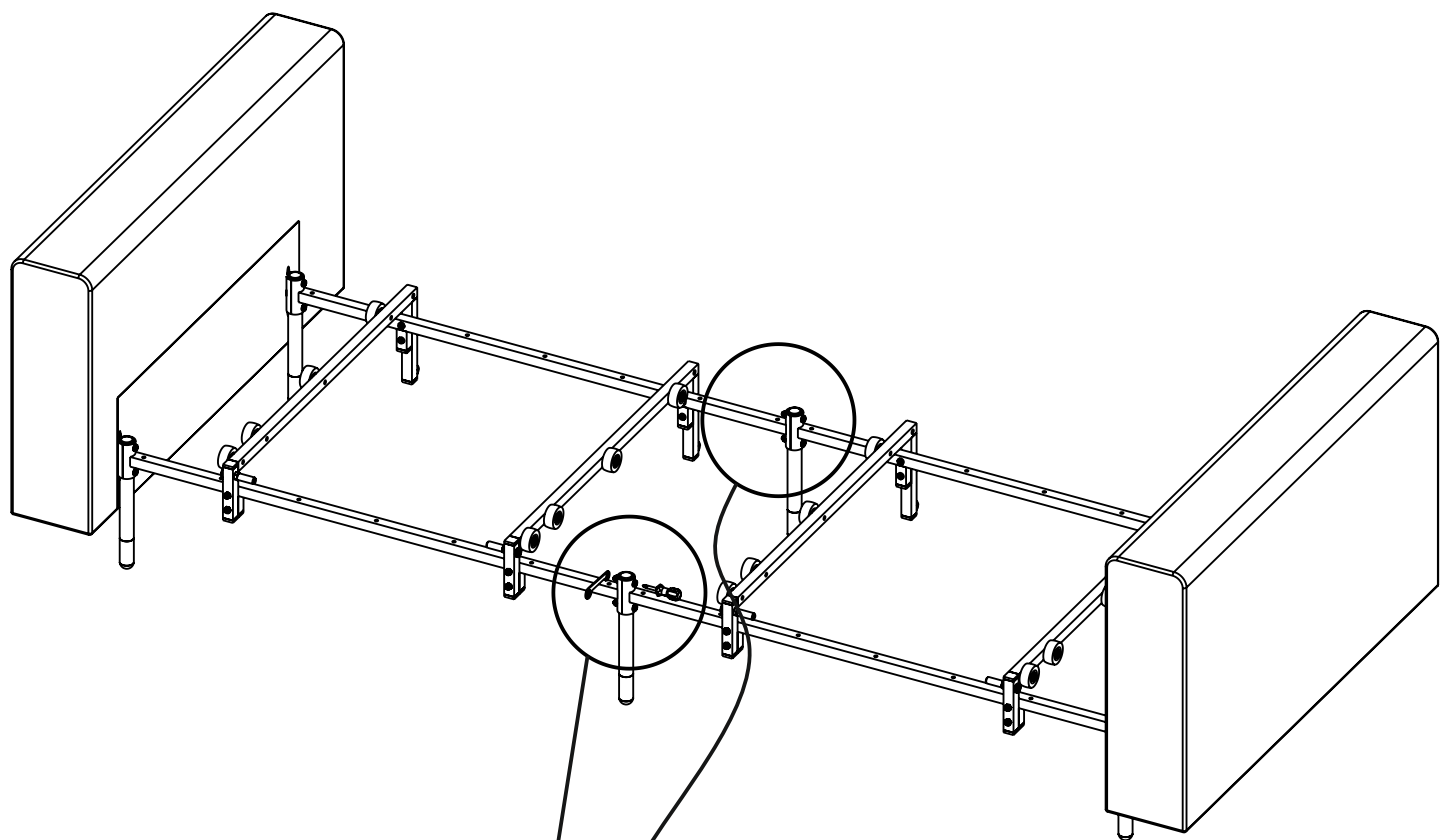


ШАГ 11


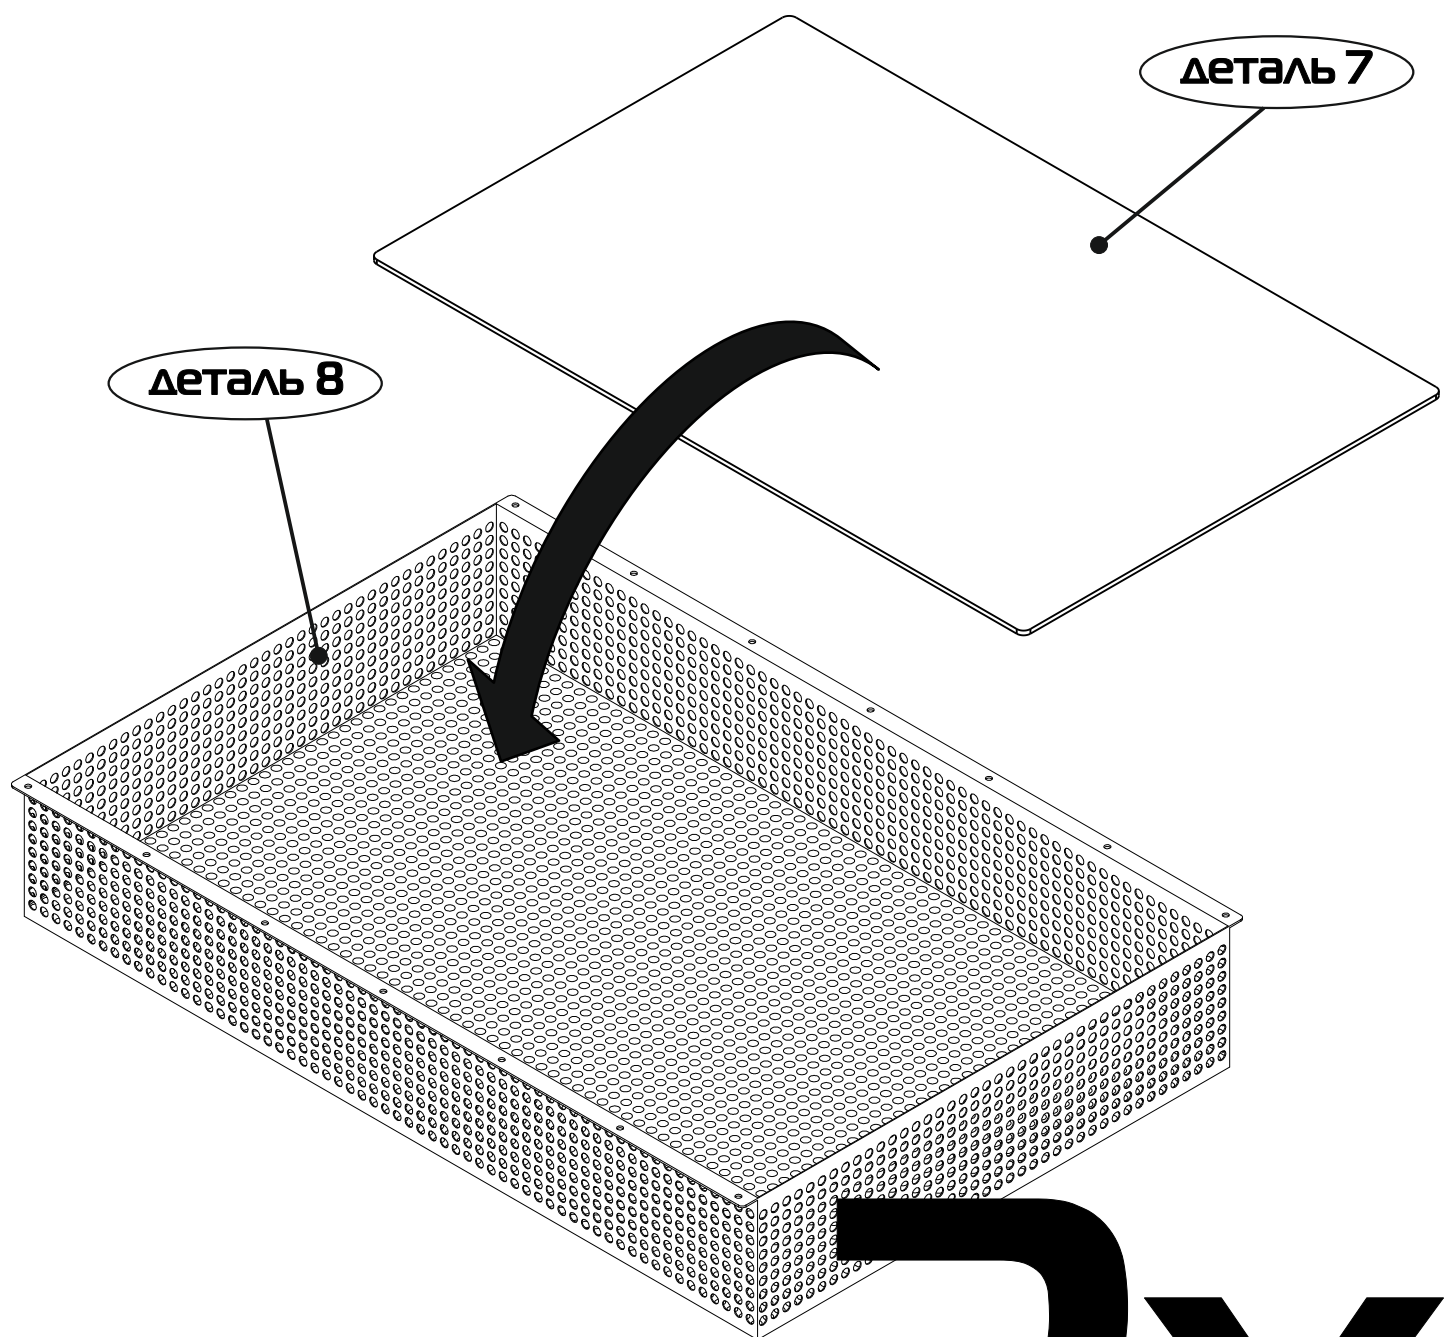


2x



ШАГ 12

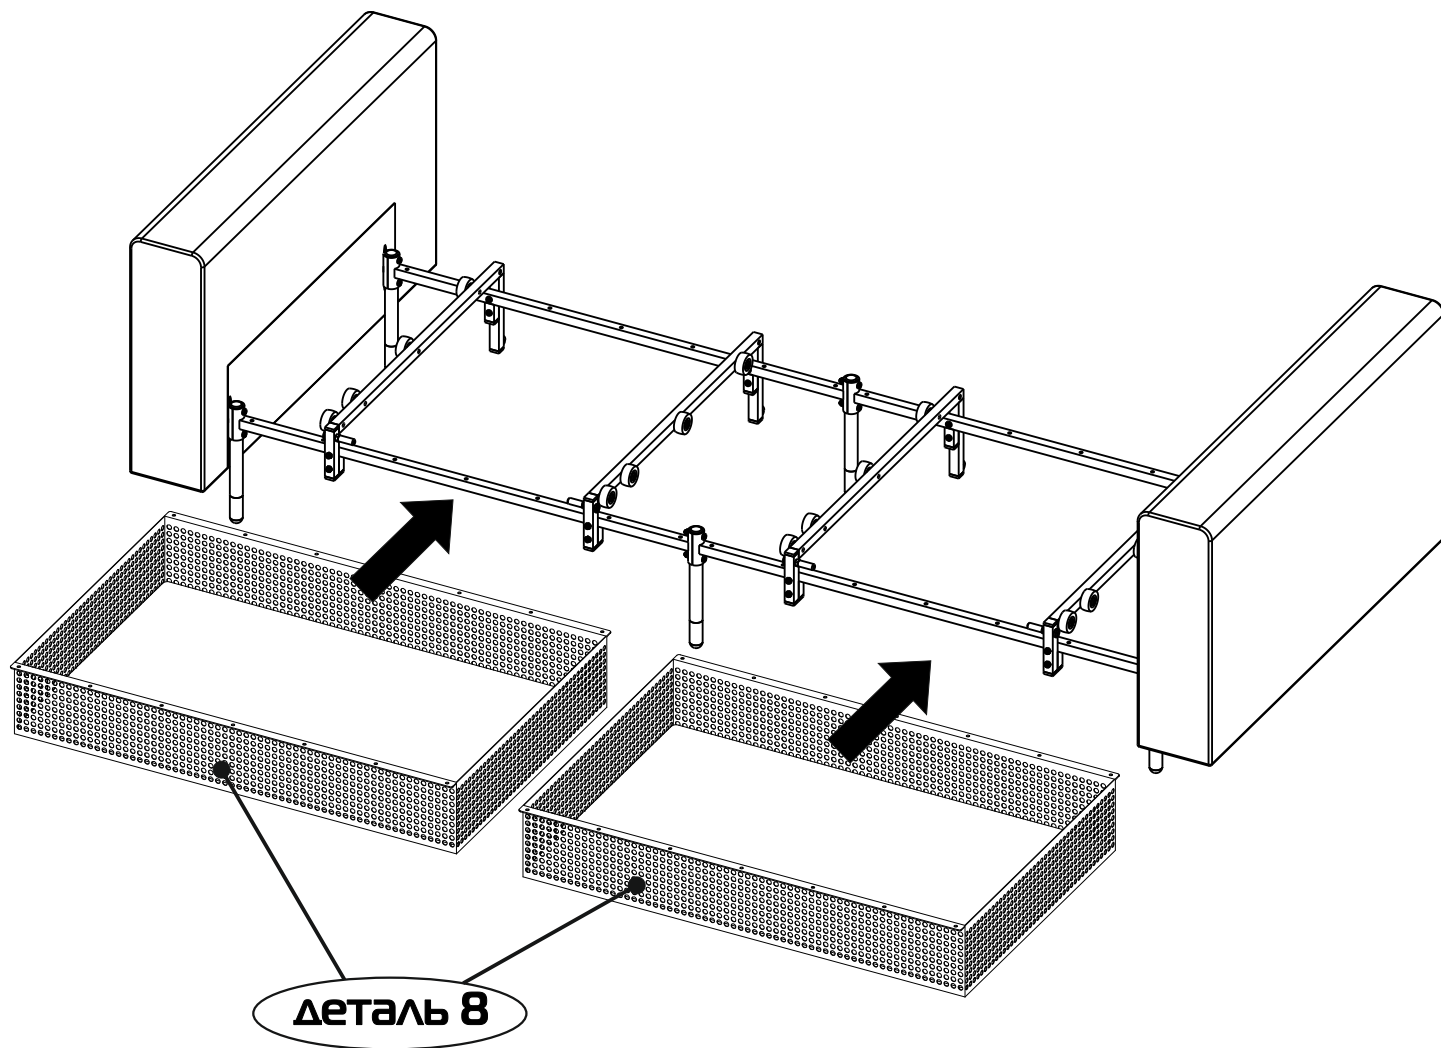



ШАГ 13

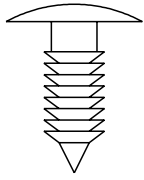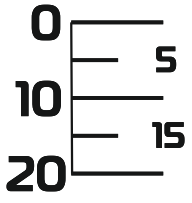


28 ШТ

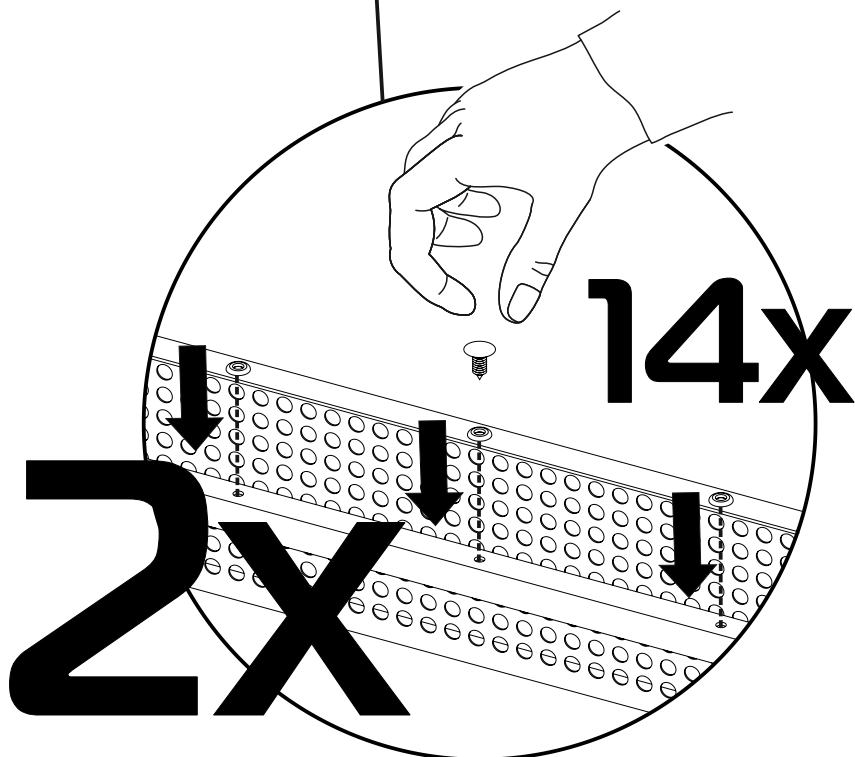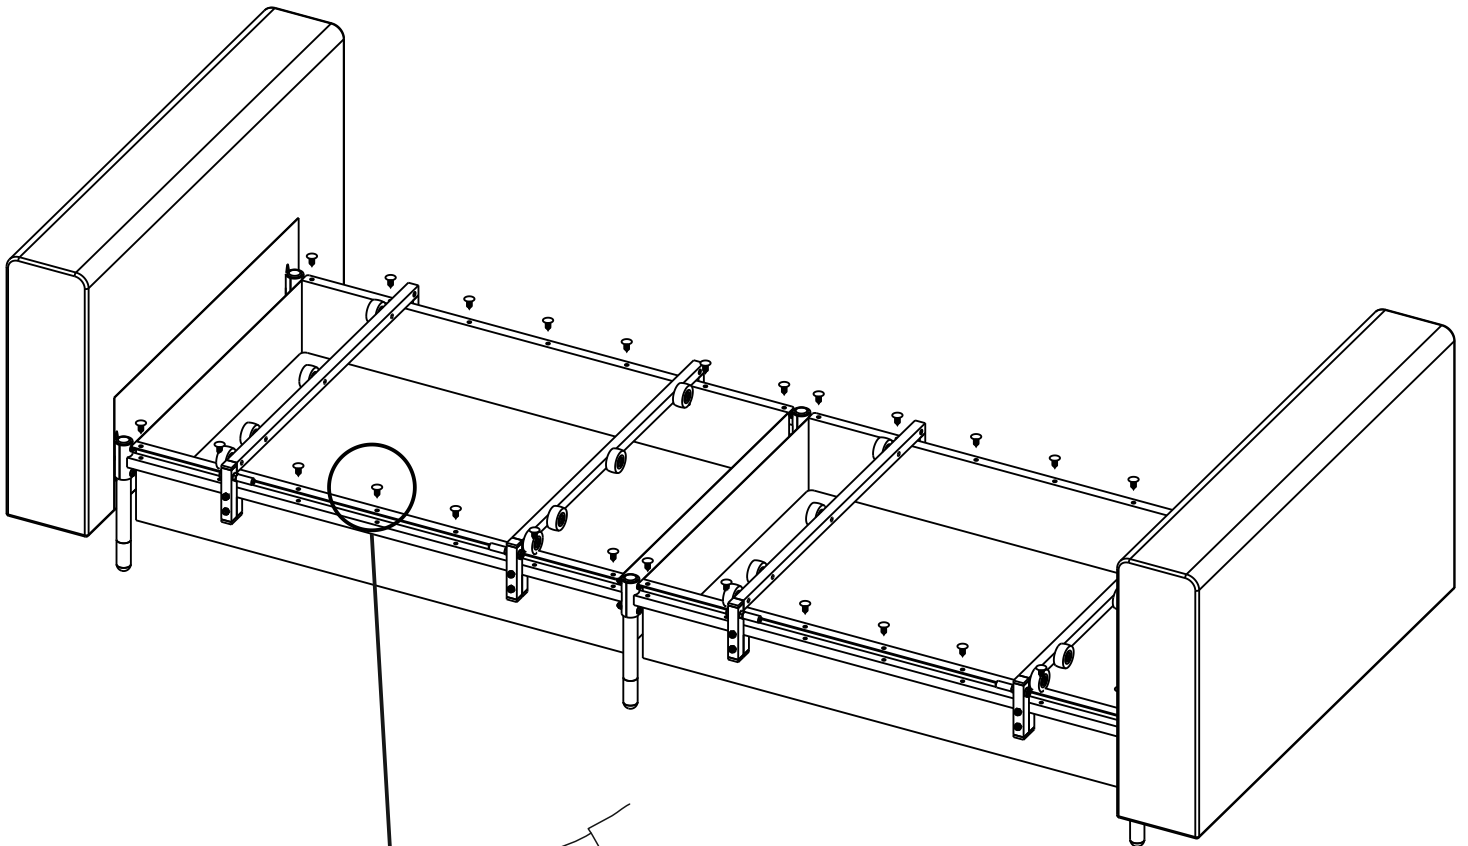



ШАГ 14

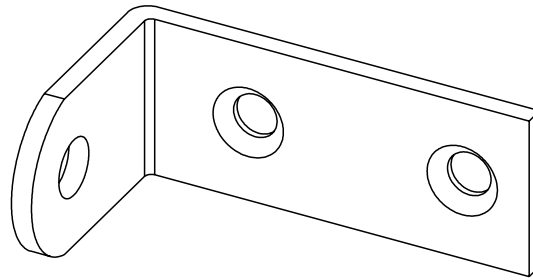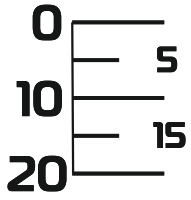


4 шт

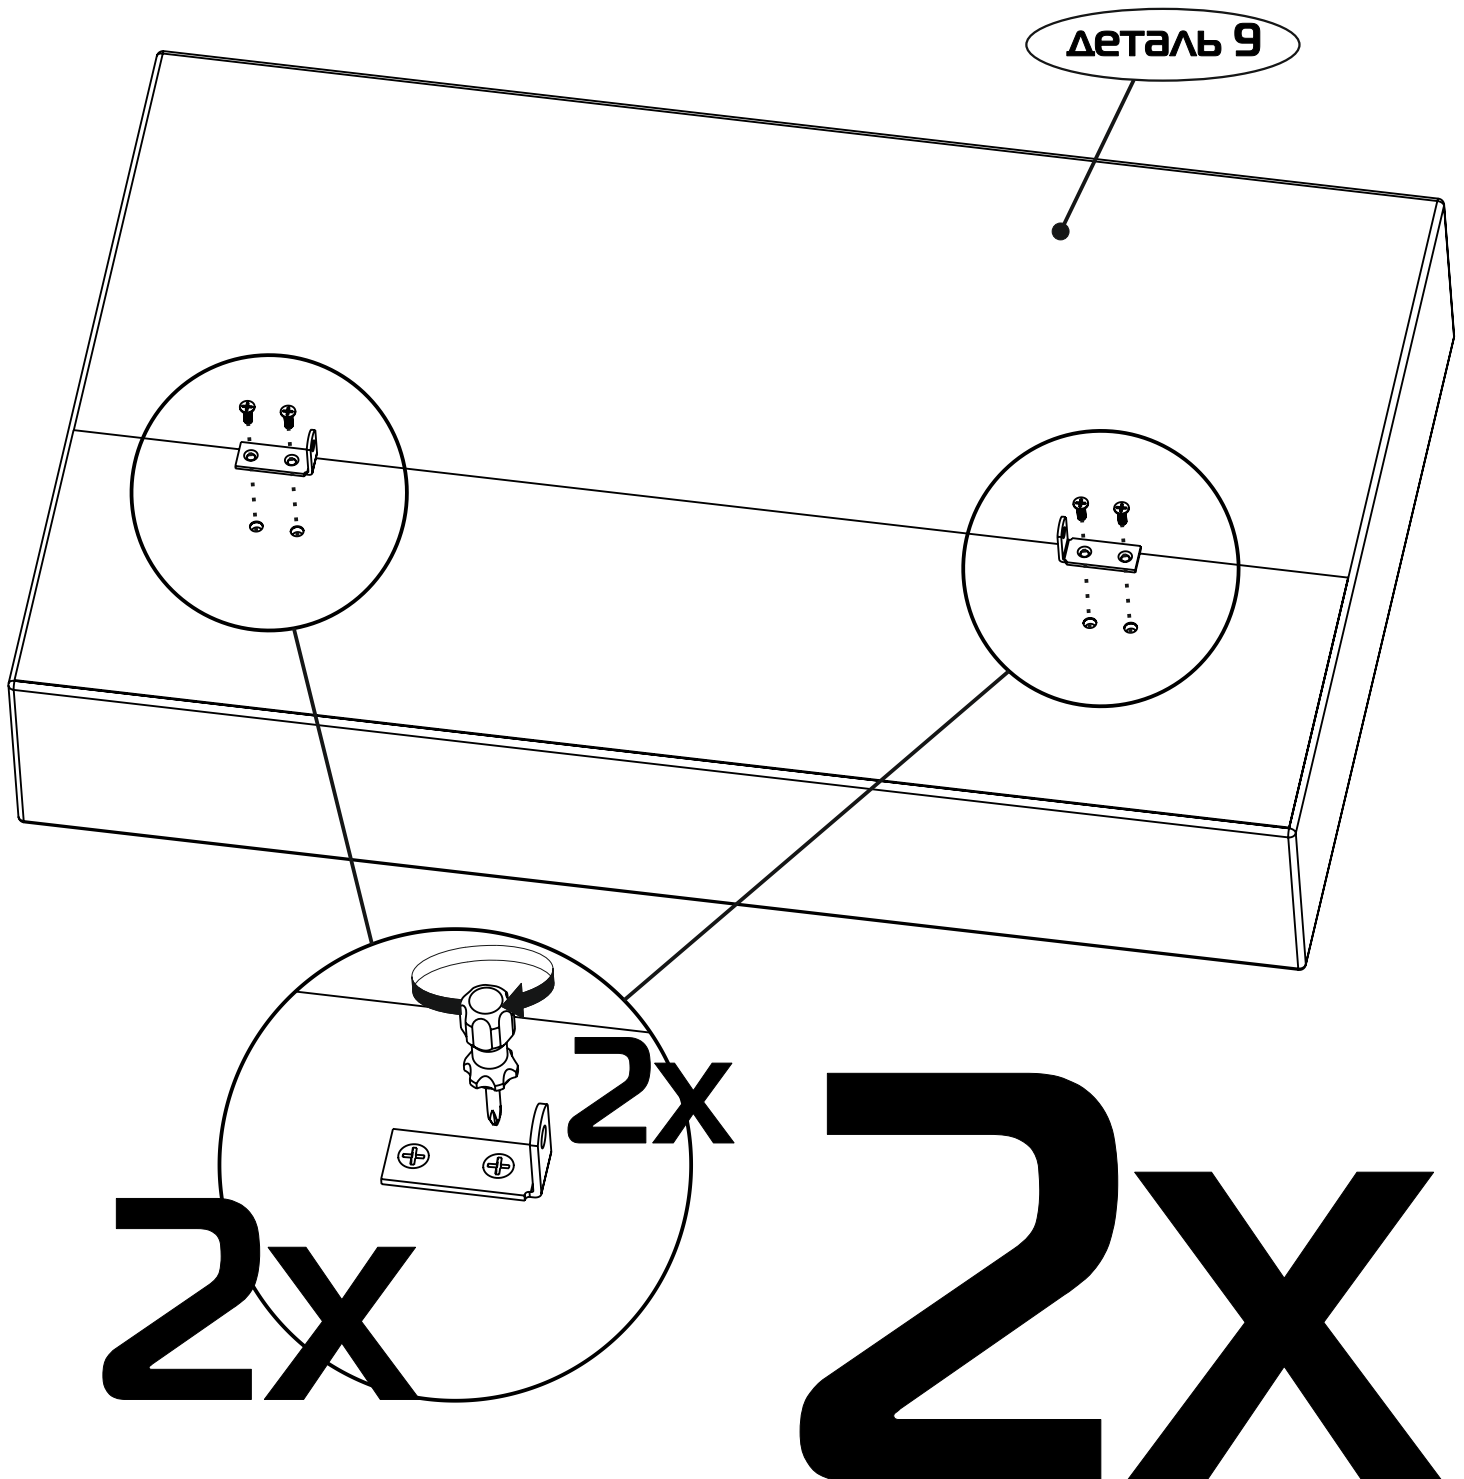


ШАГ 15

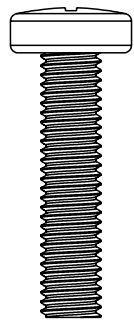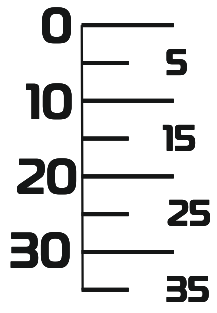



M8x35
2 ШТ

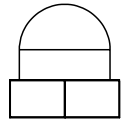


M8
2 ШТ

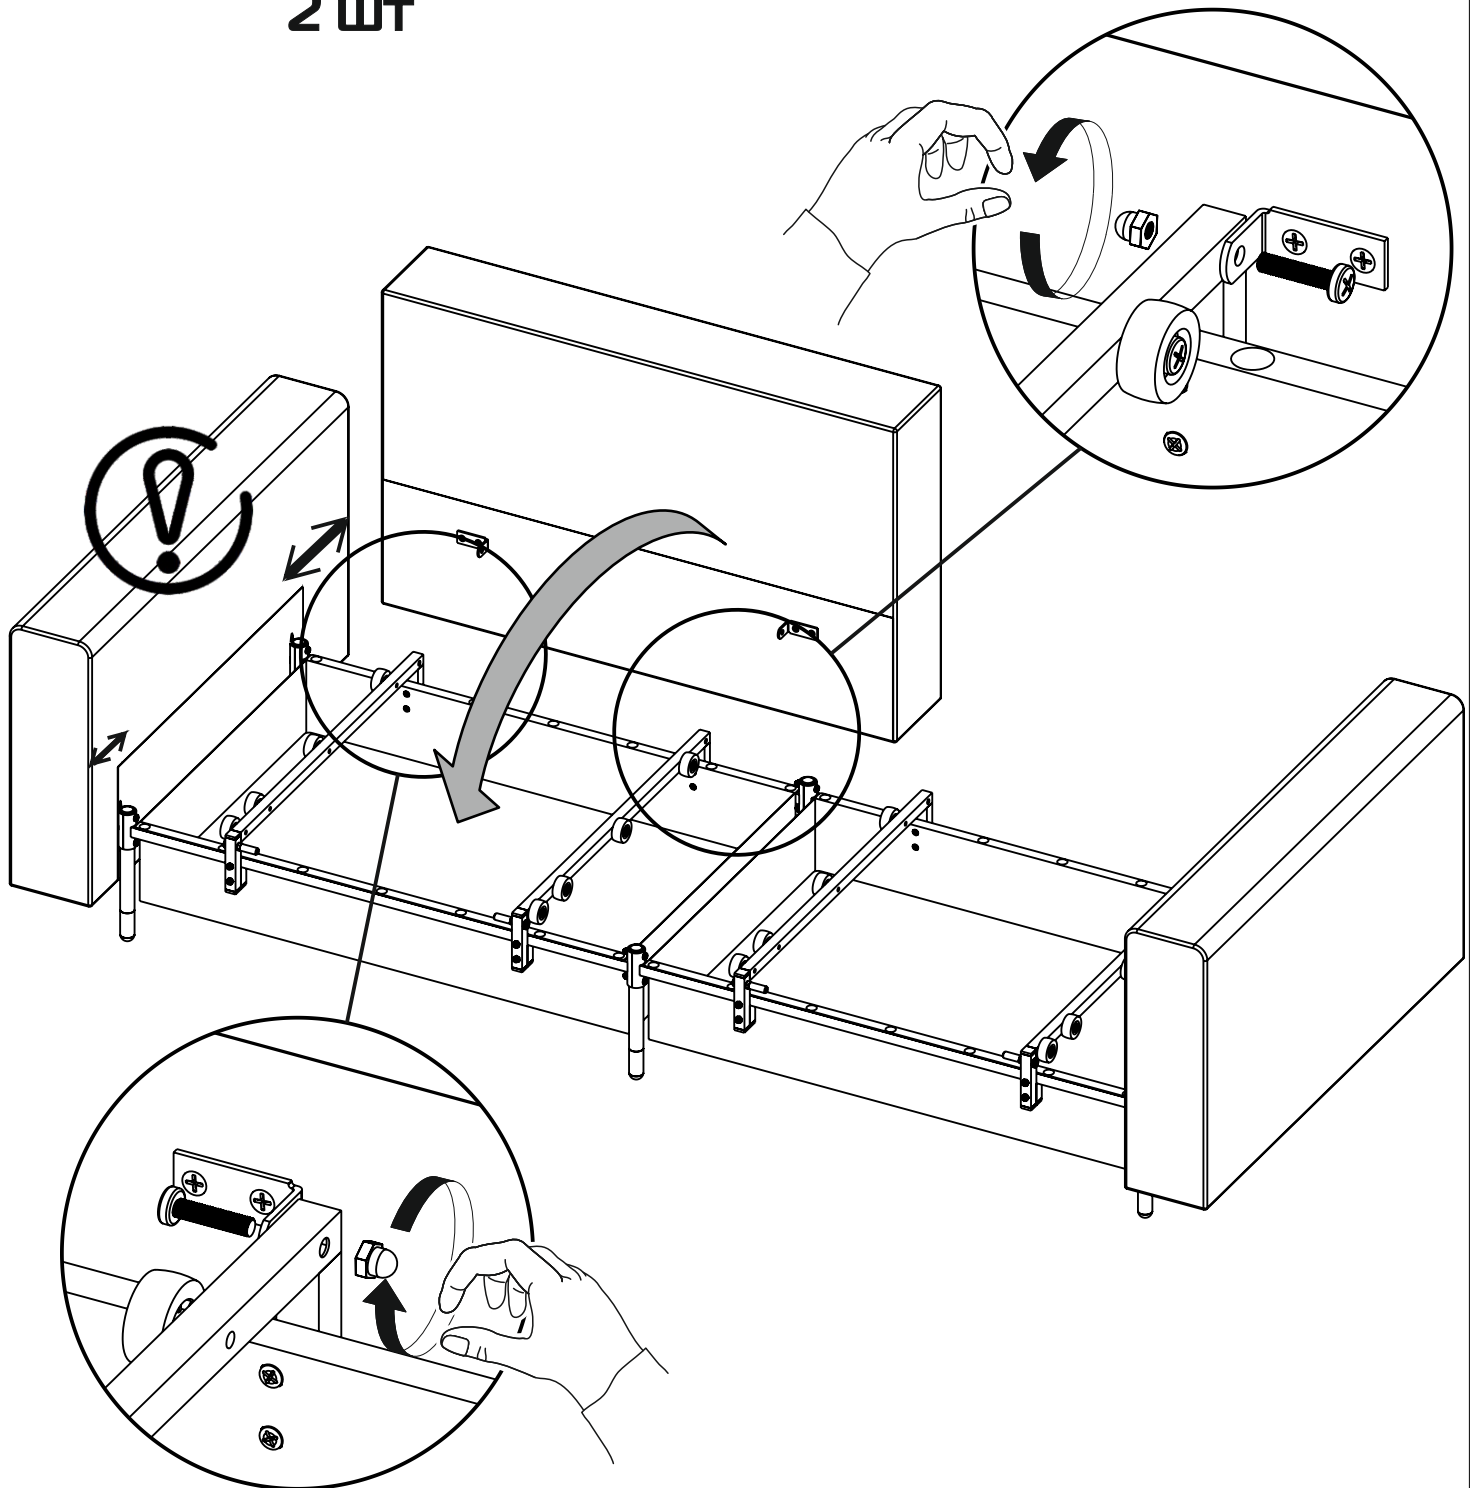


ШАГ 16

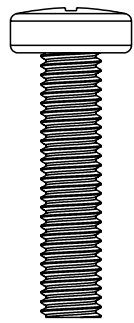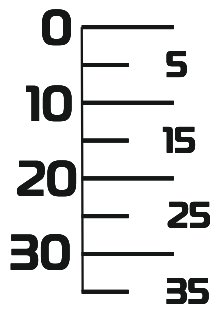



M8x35
2 ШТ

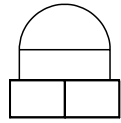



M8
2 ШТ

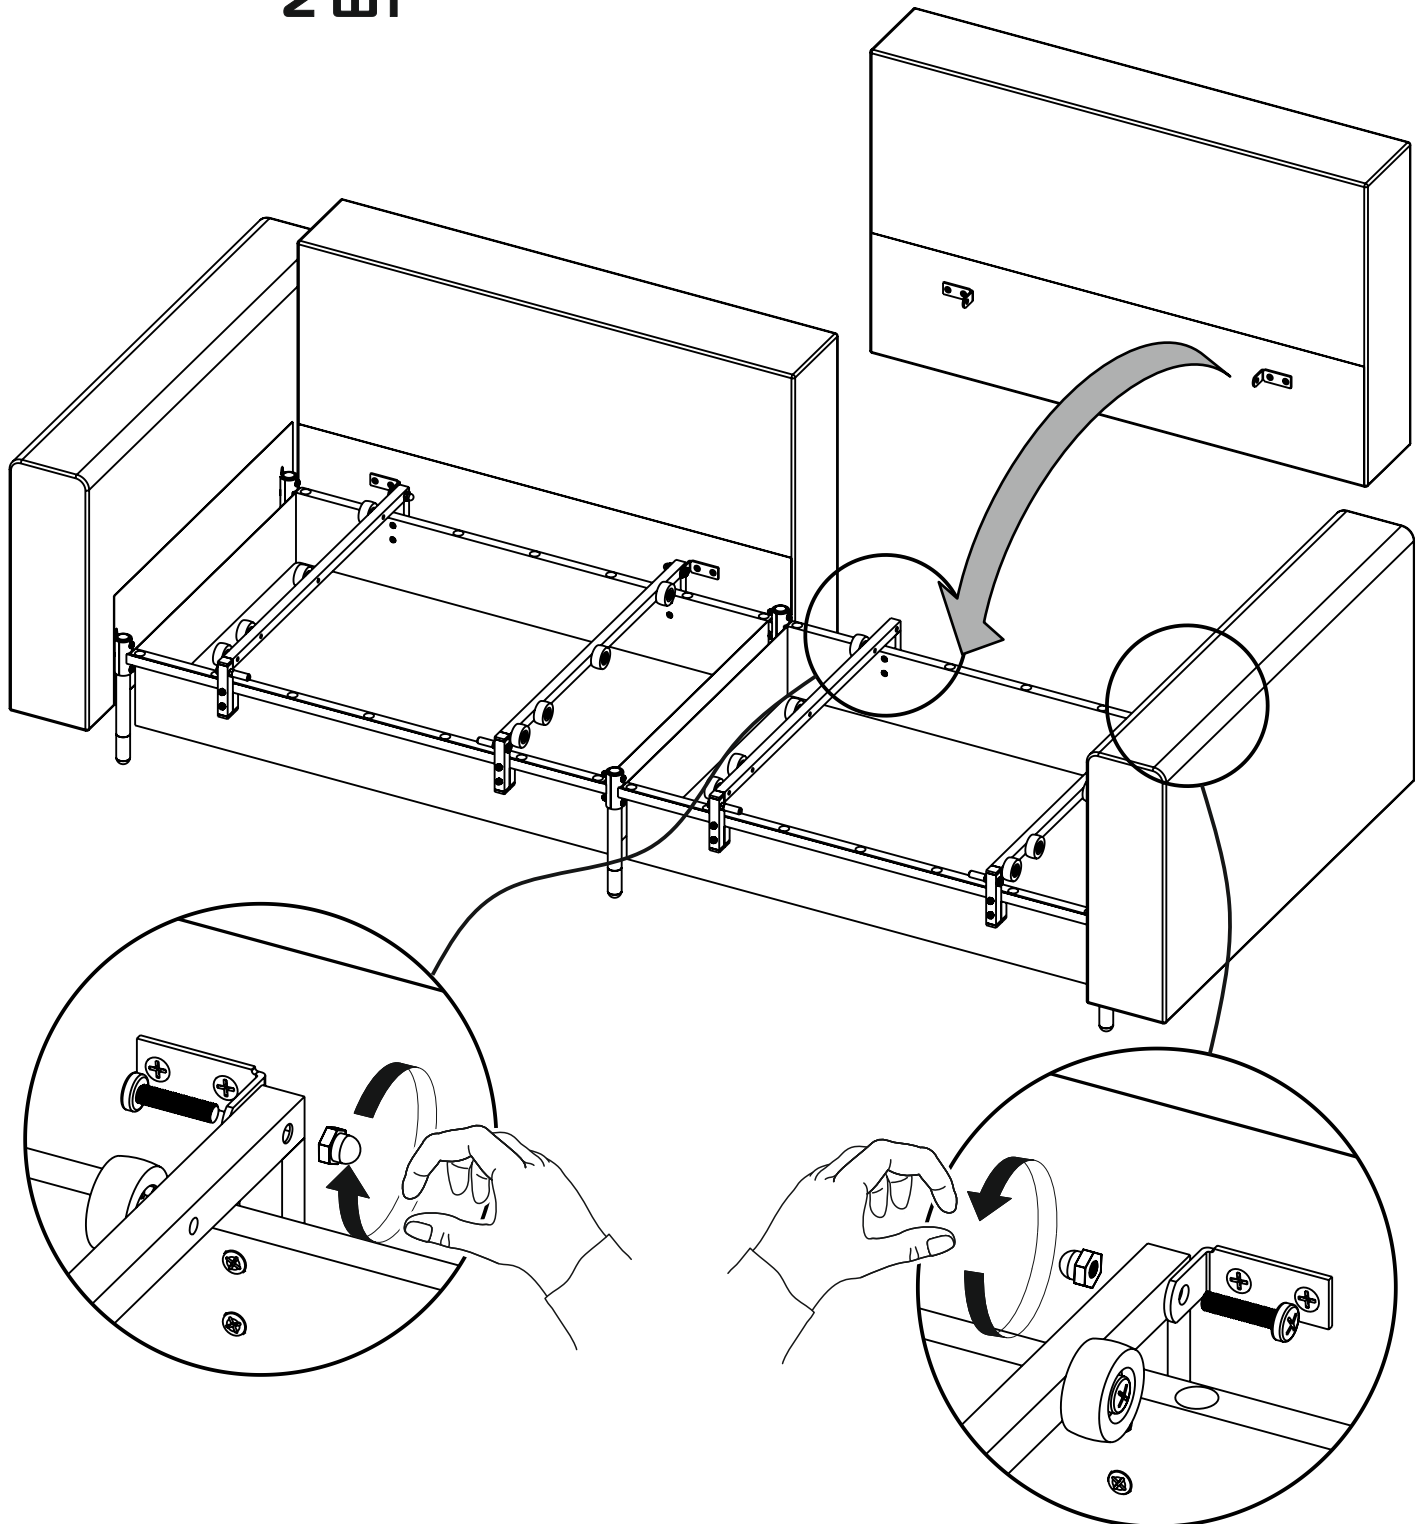

ШАГ 17

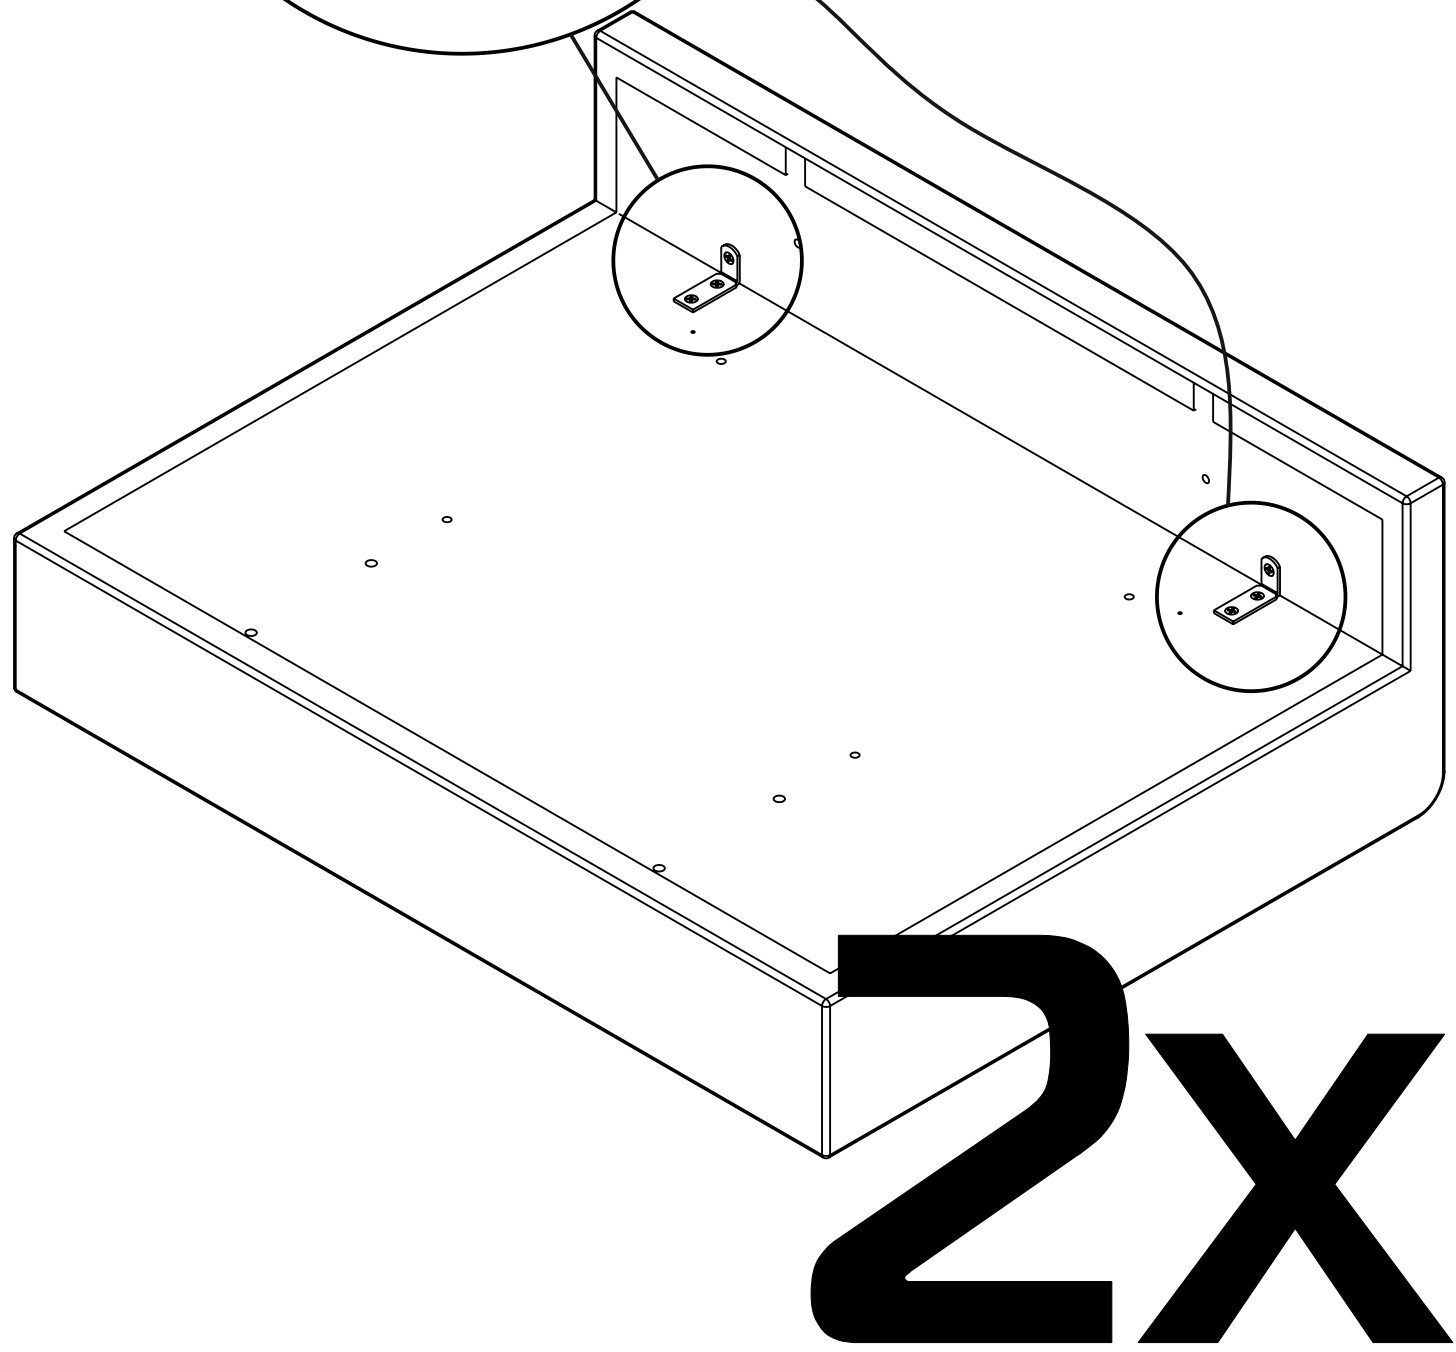
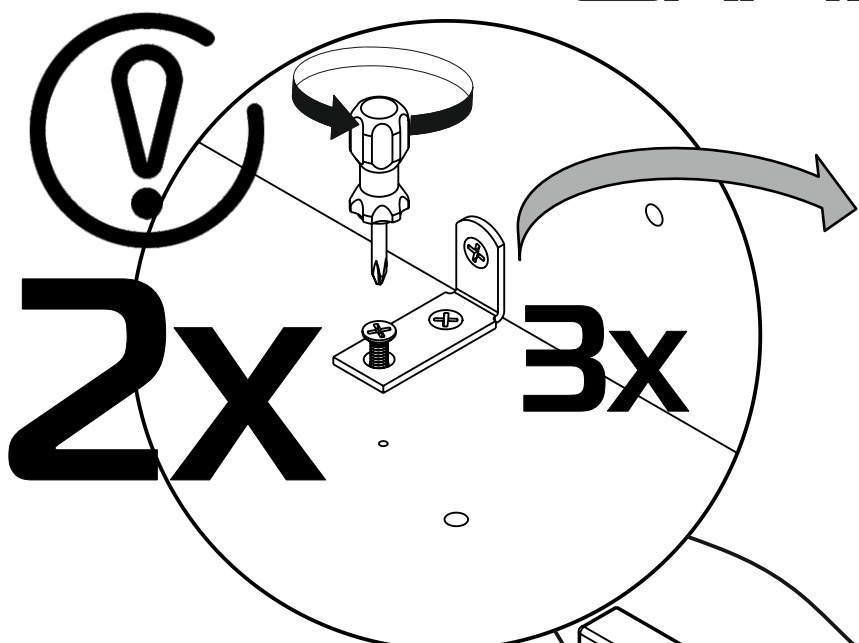


ШАГ 18

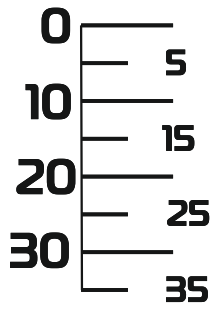

M6x35



12 ШТ

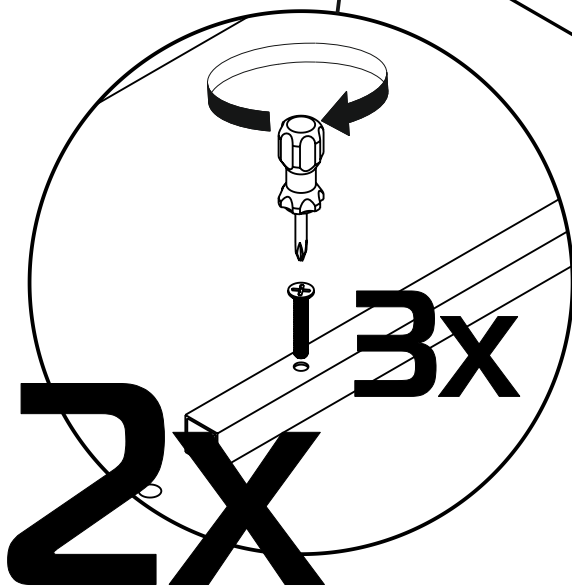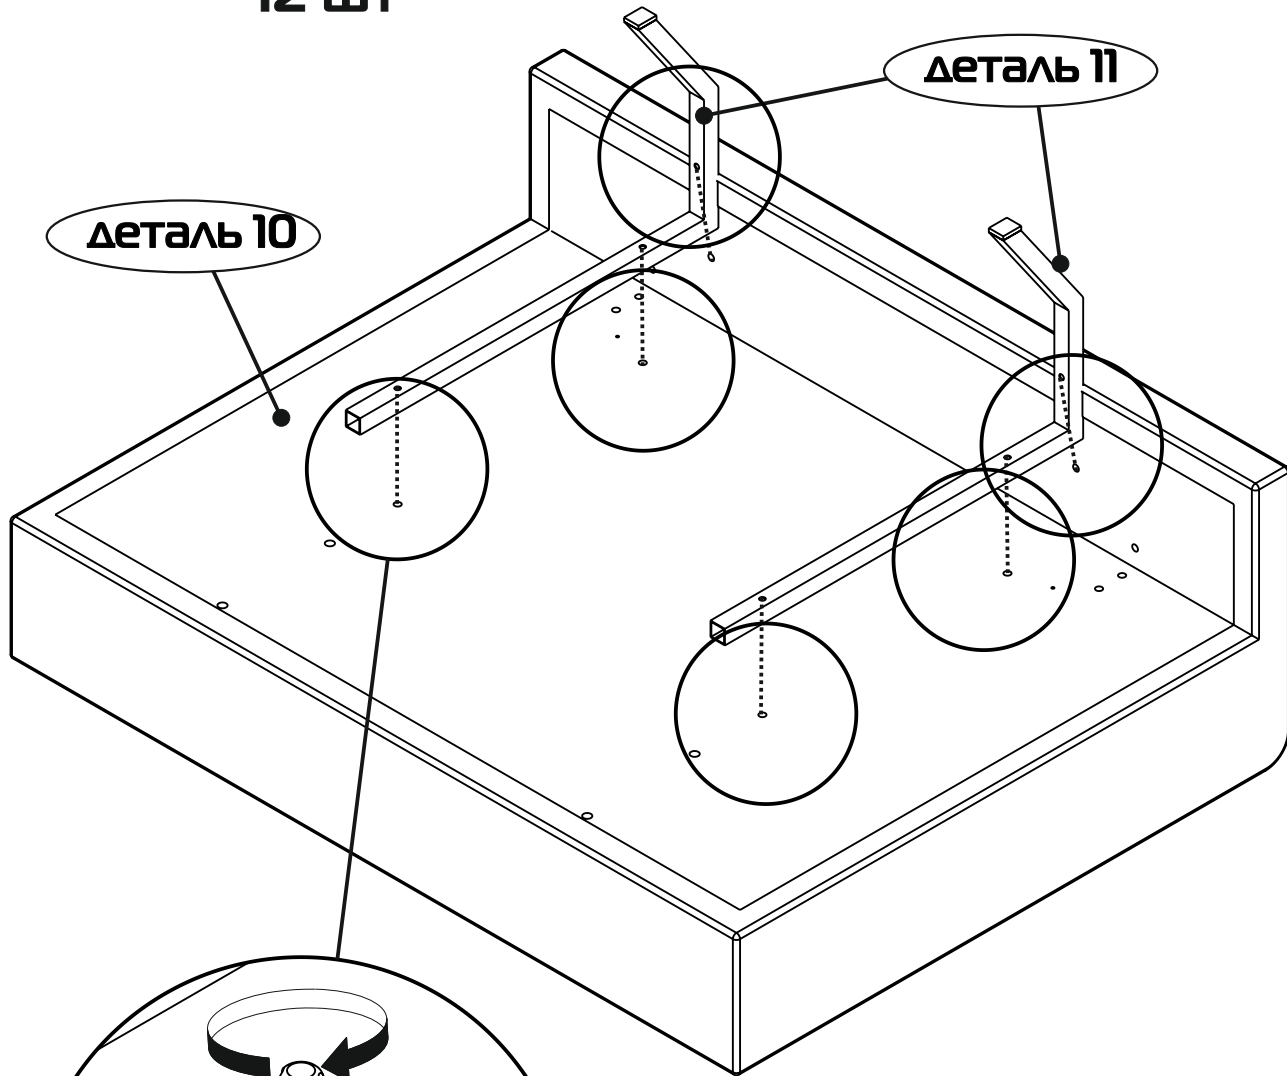

2x

2x

ШАГ 19

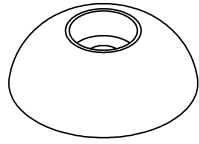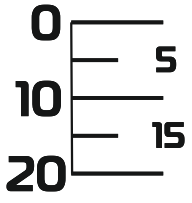


4 шт





3,5x16

4 шт


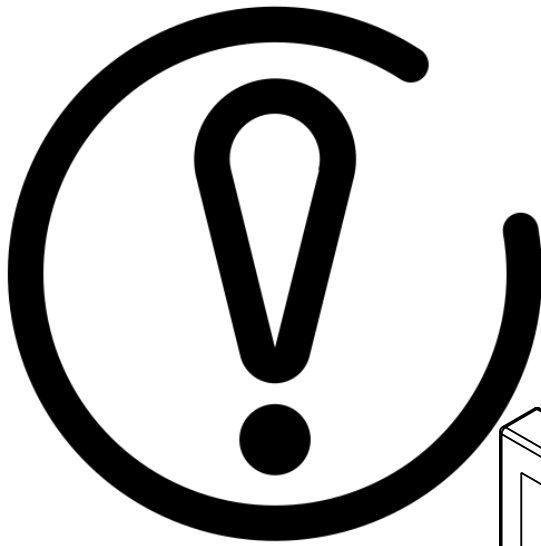


2x

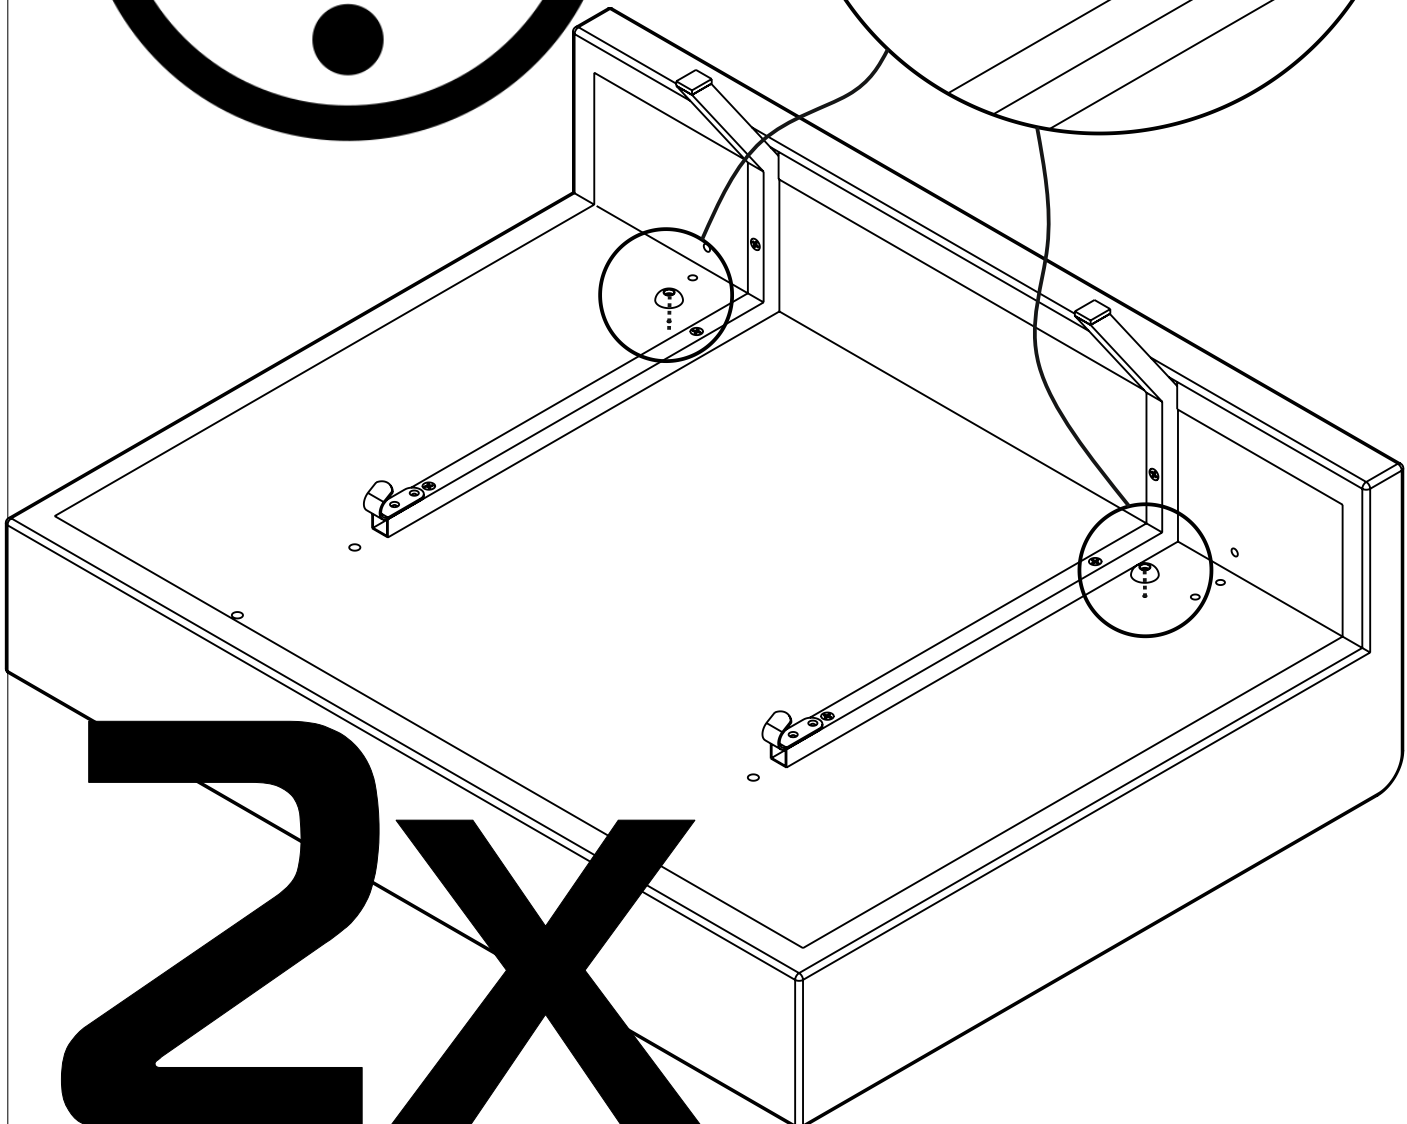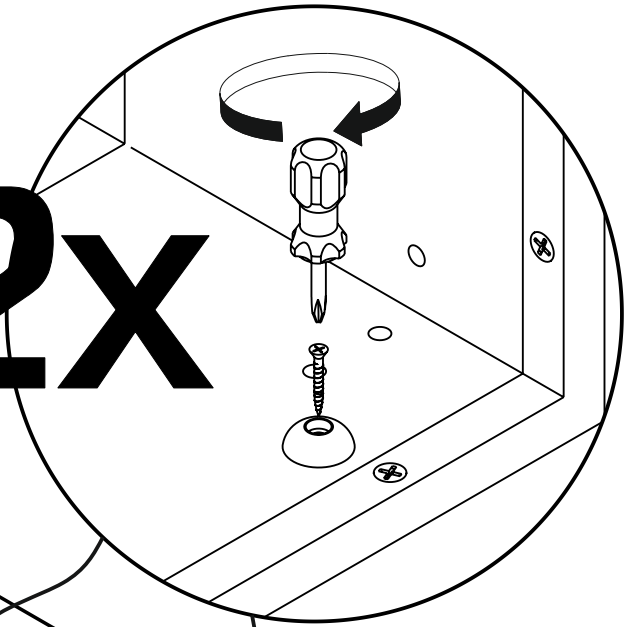


2x

ШАГ 20

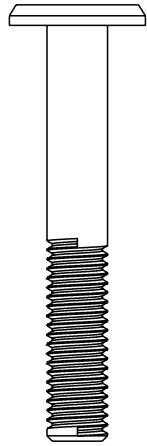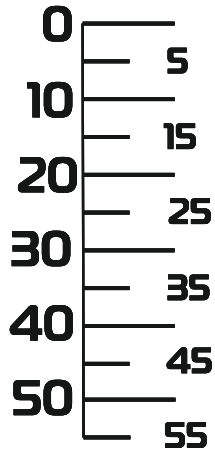


M8x55

8 ШТ




M8

8 ШТ


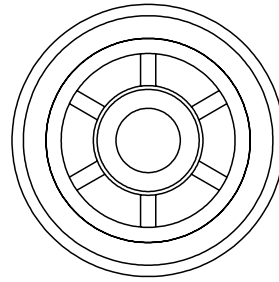


8 ШТ

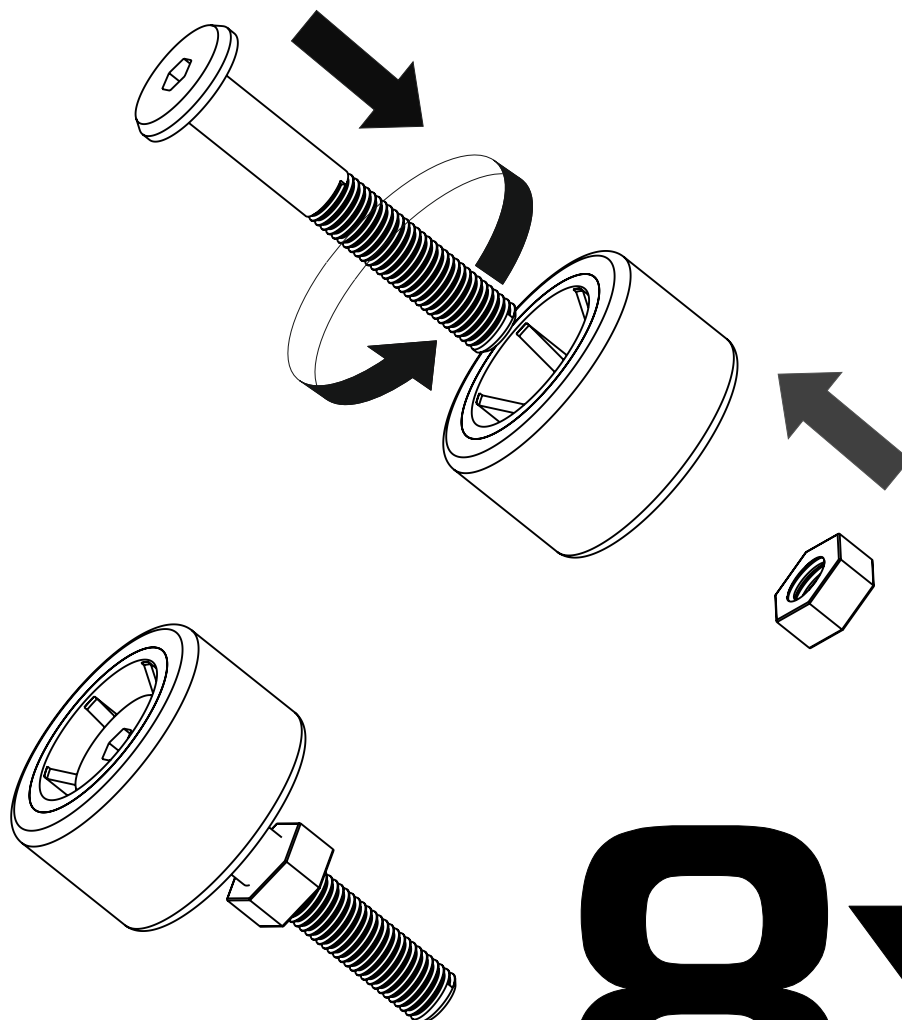



8x

ШАГ 21

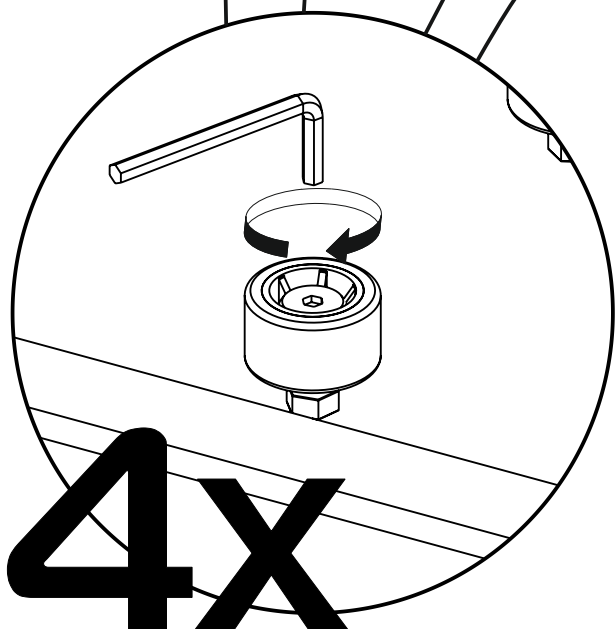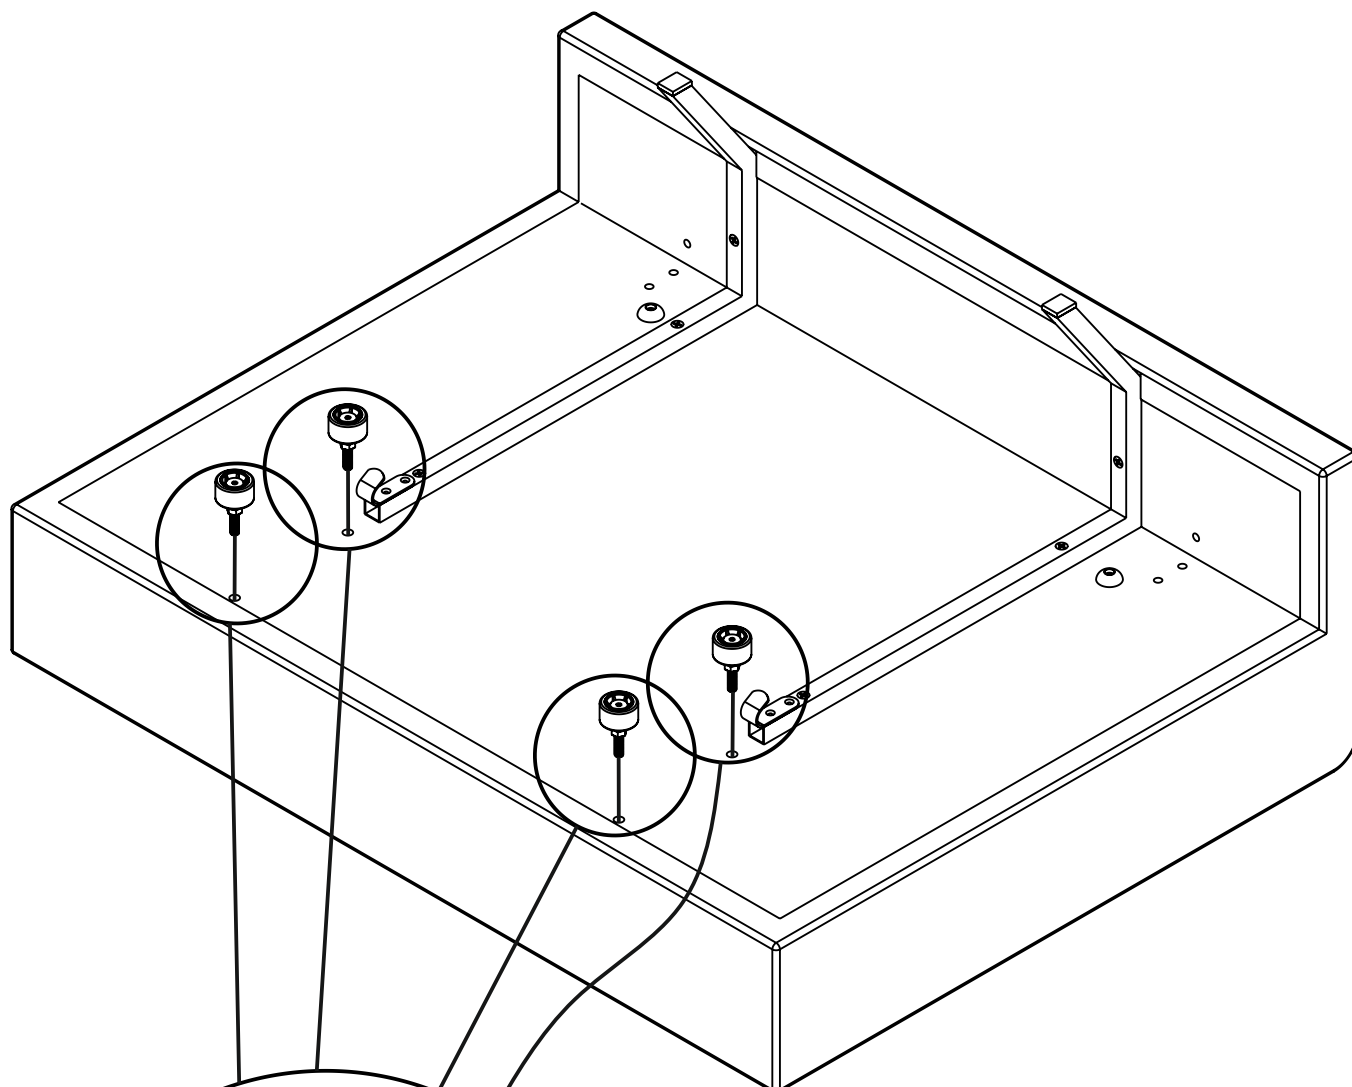


2x

ШАГ 22

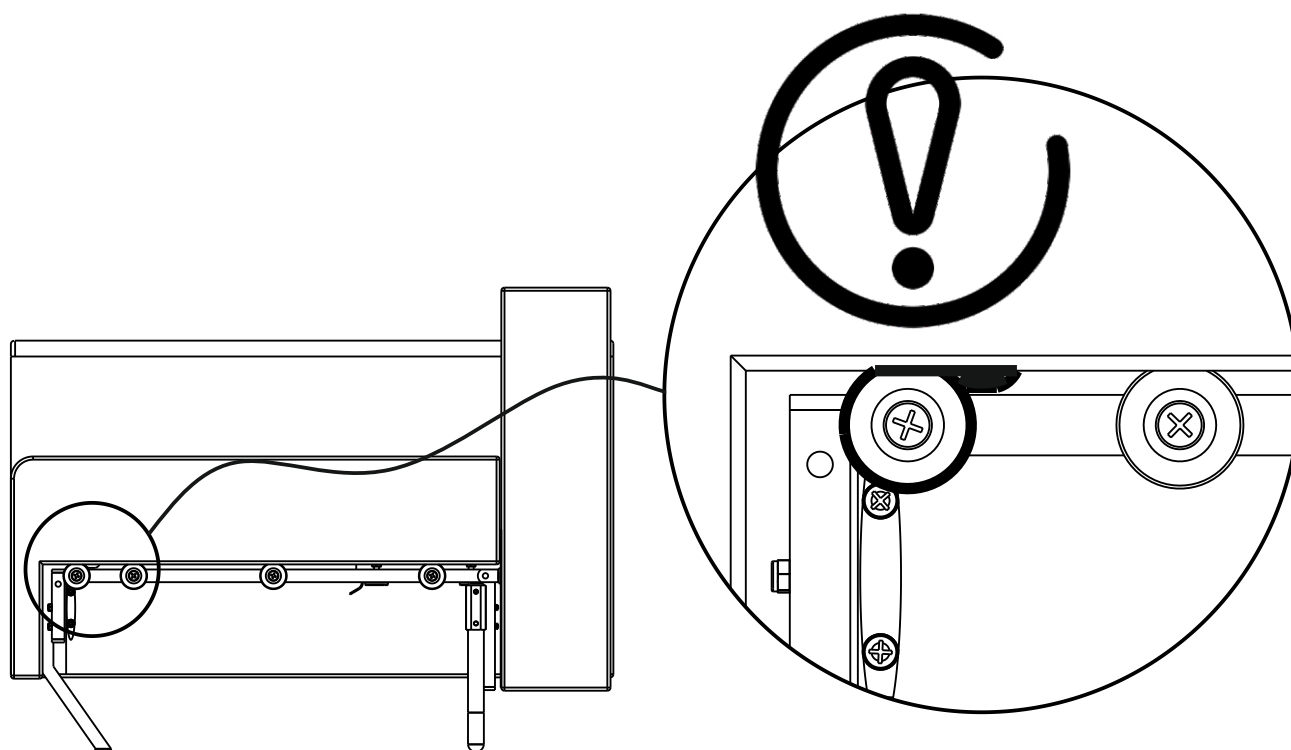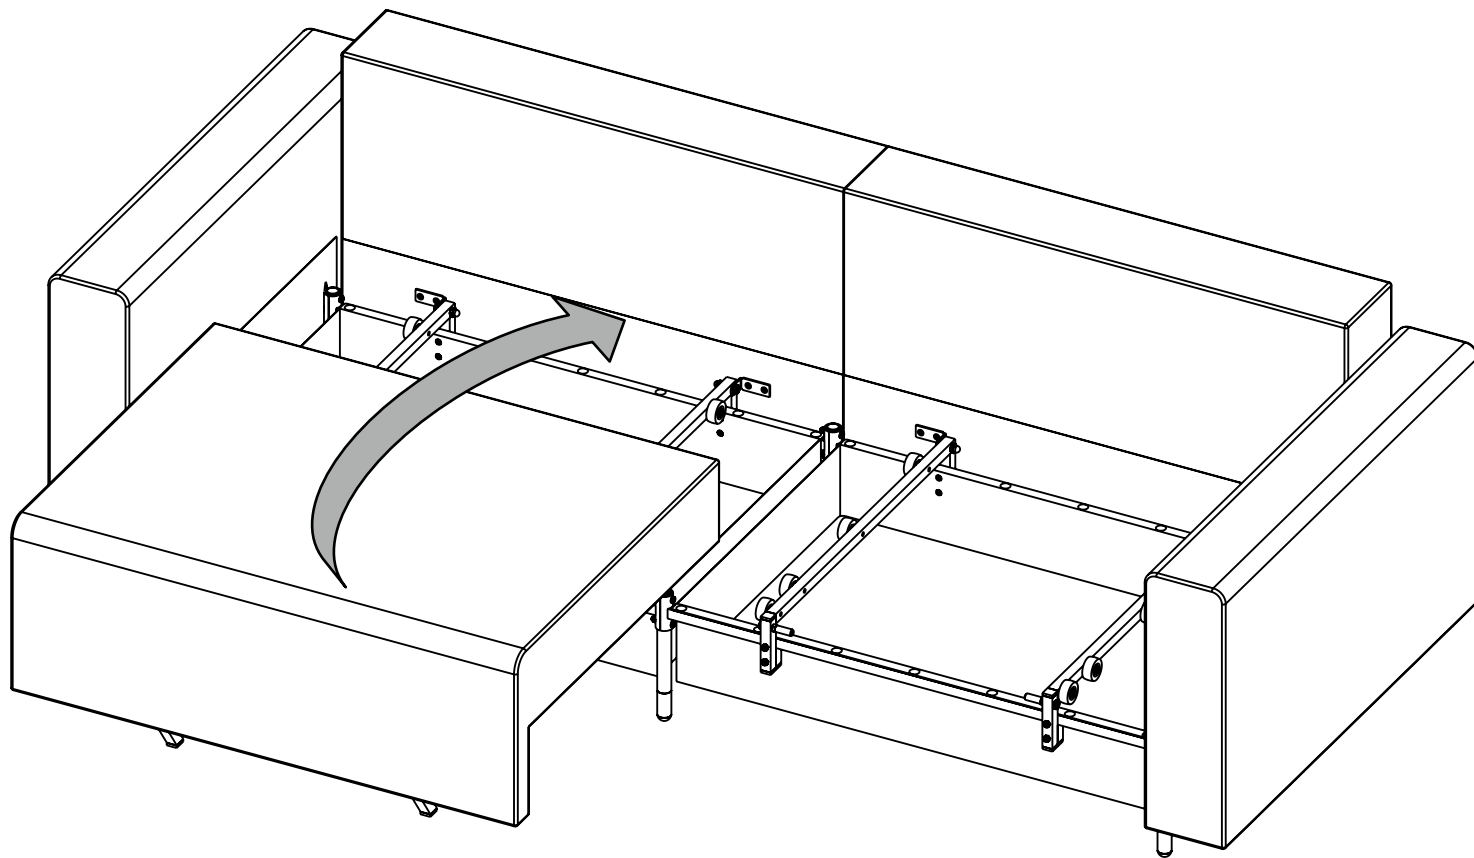

ШАГ 23

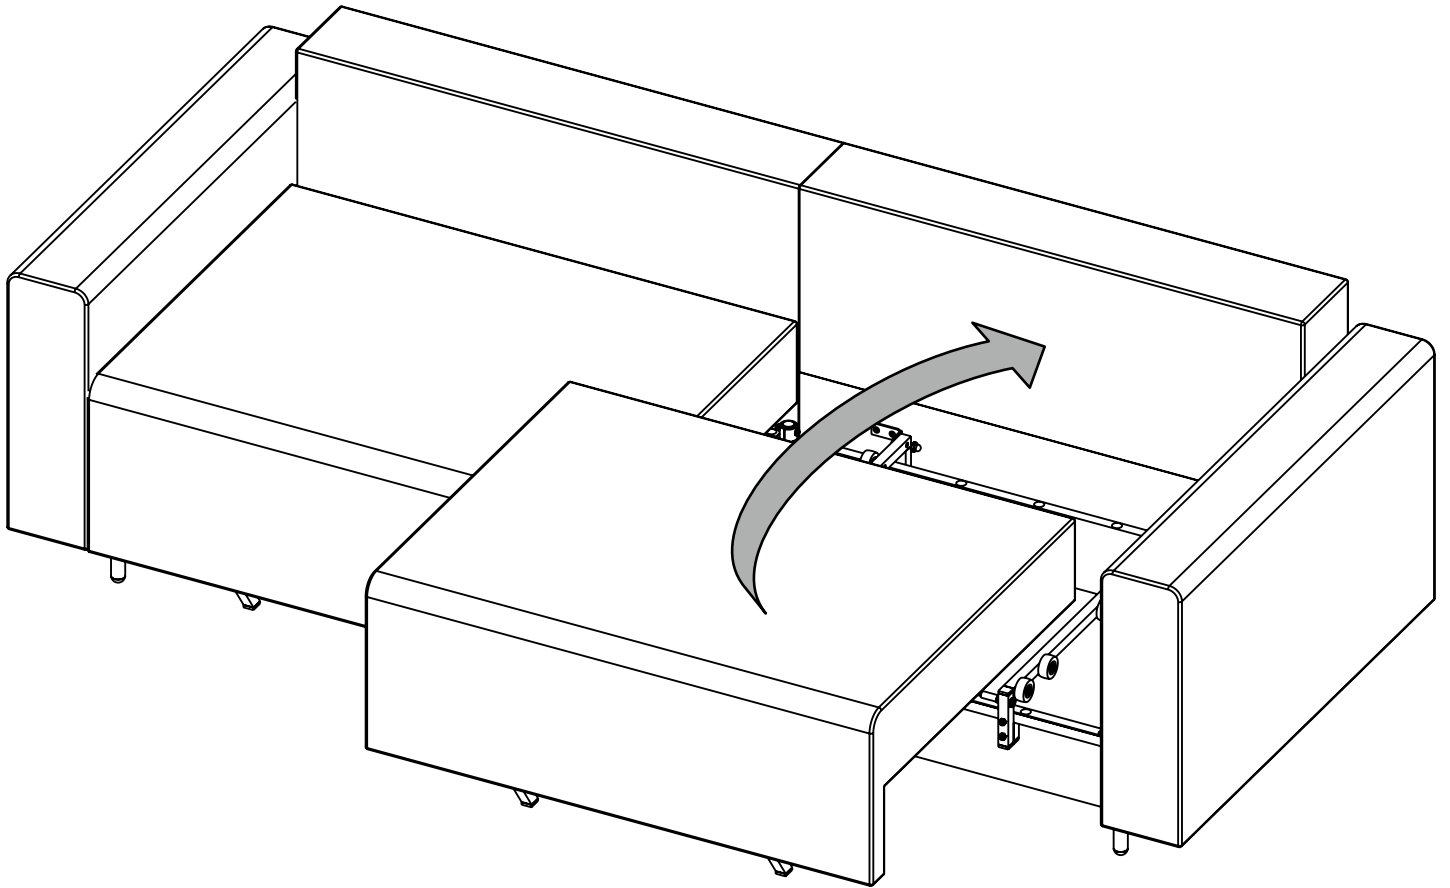

ШАГ 24

