


МОНБЛАН


УГЛОВОЙ ДИВАН-КРОВАТЬ 3.10

MONBLAN

CORNER SOFA BED 3.10

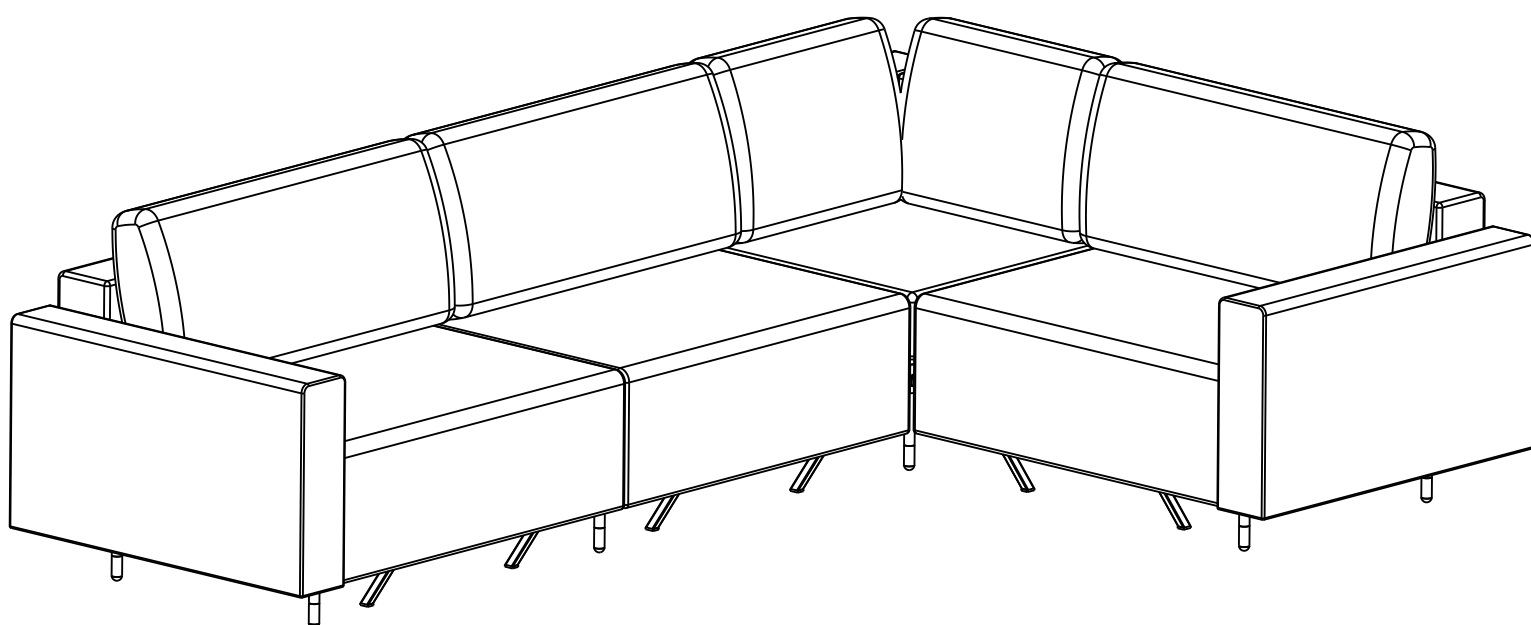


















Общая схема









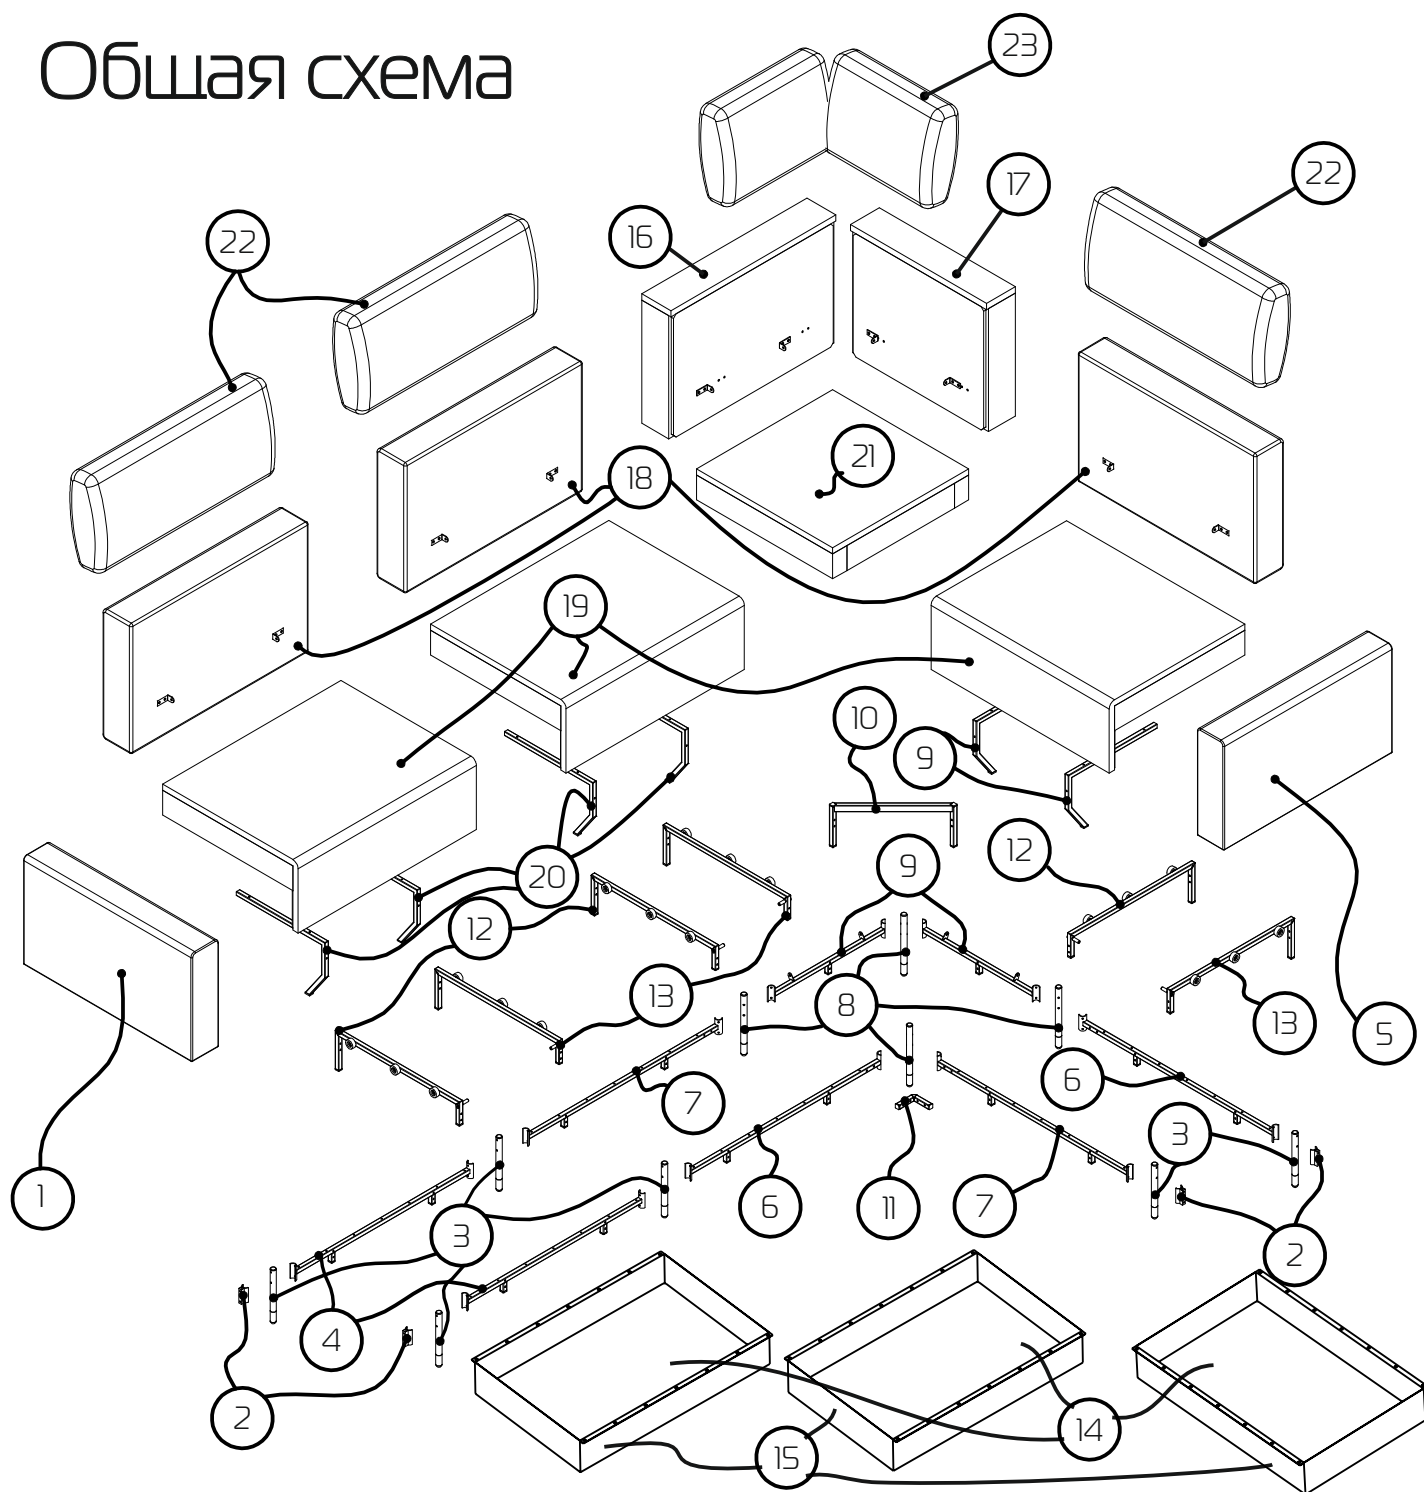






Номера деталей:

- | | | | | | |
|----------|----------|-----------|-----------|-----------|-----------|
| 1 - 1шт; | 5 - 1шт; | 9 - 2шт; | 13 - 3шт; | 17 - 1шт; | 21 - 1шт; |
| 2 - 4шт; | 6 - 2шт; | 10 - 1шт; | 14 - 3шт; | 18 - 3шт; | 22 - 3шт; |
| 3 - 6шт; | 7 - 2шт; | 11 - 1шт; | 15 - 3шт; | 19 - 3шт; | 23 - 1шт. |
| 4 - 2шт; | 8 - 4шт; | 12 - 3шт; | 16 - 1шт; | 20 - 3шт; | |

Список фурнитуры:

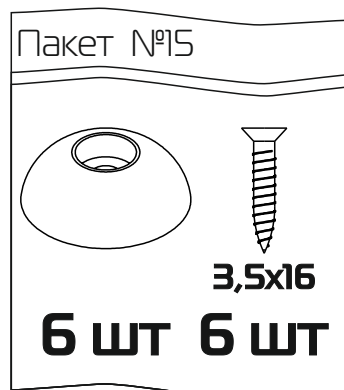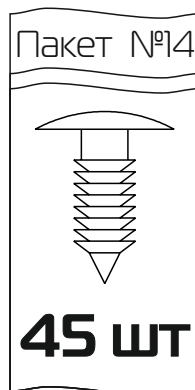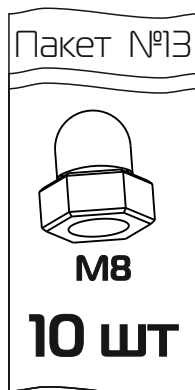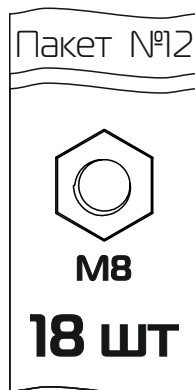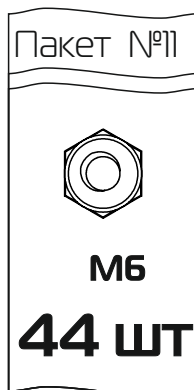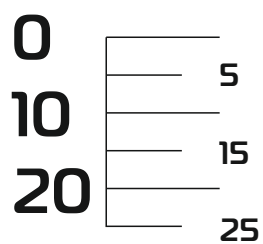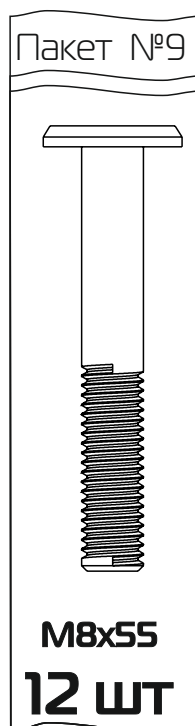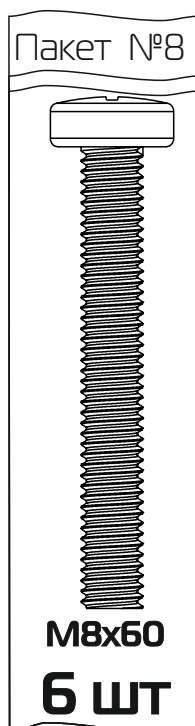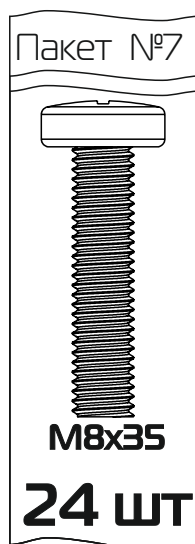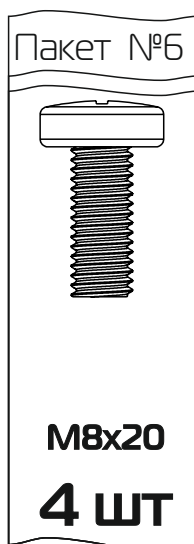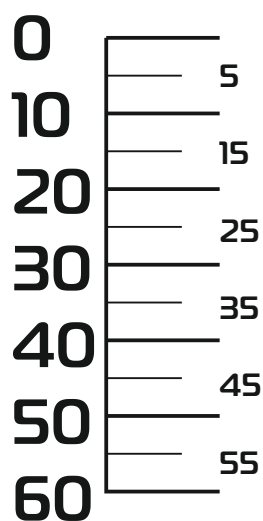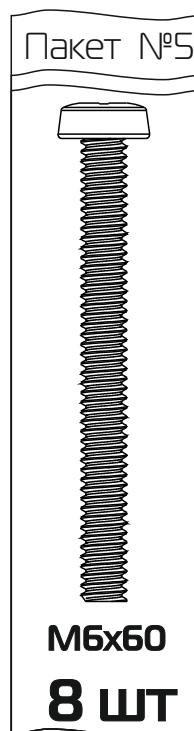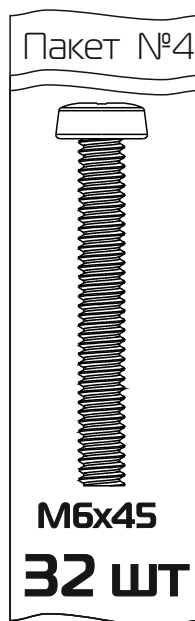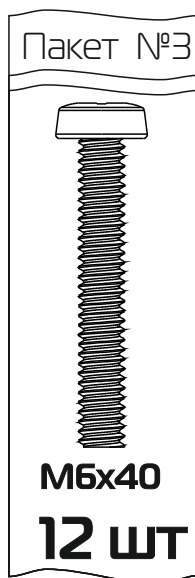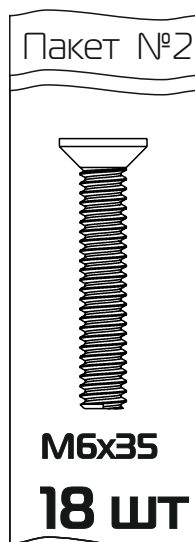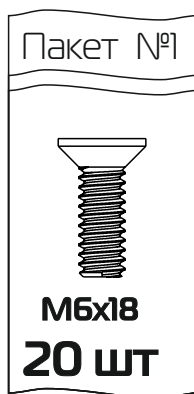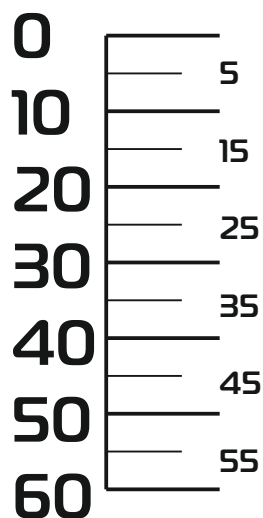

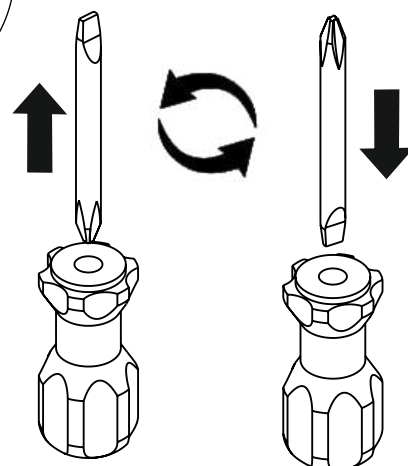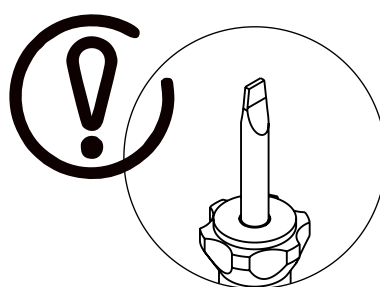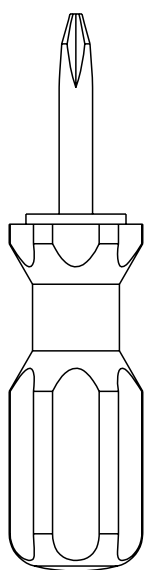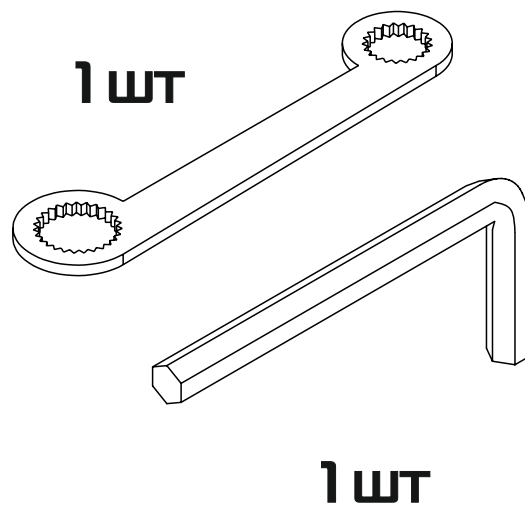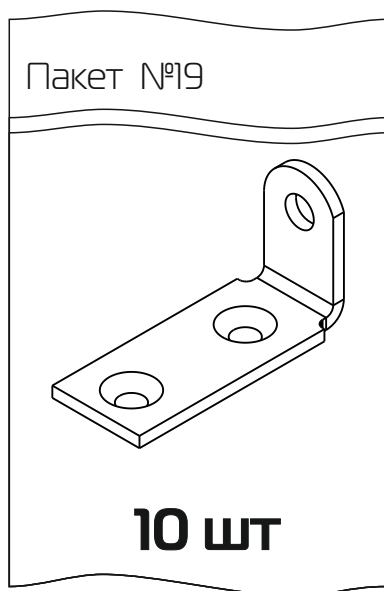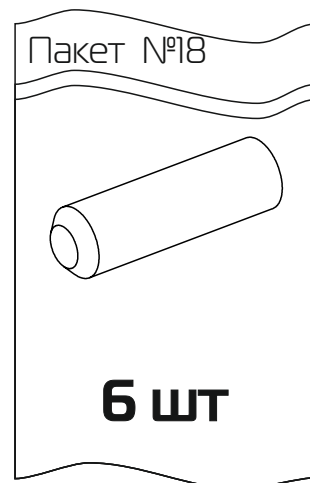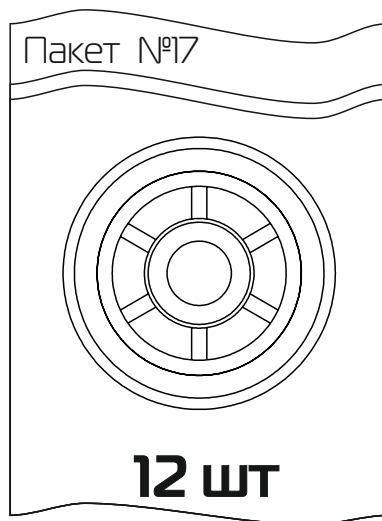
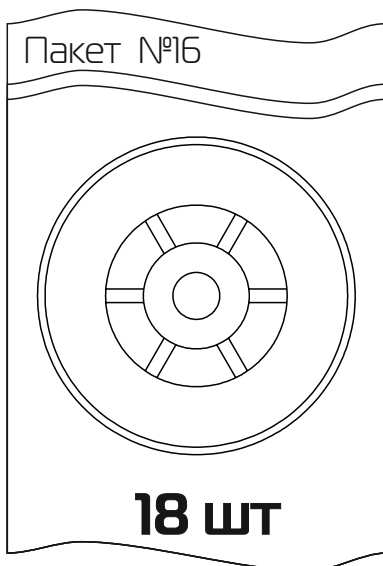
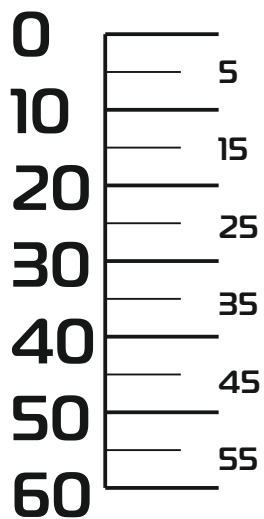


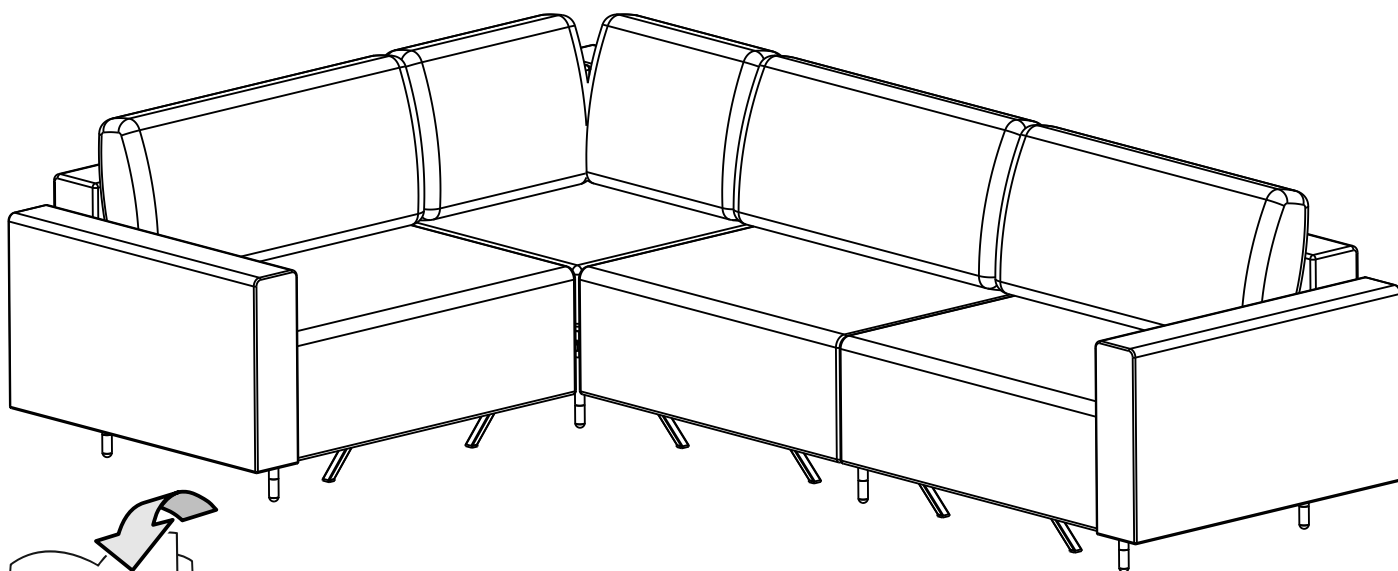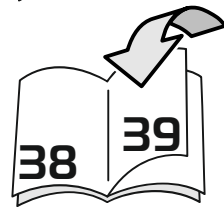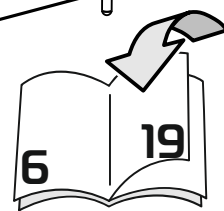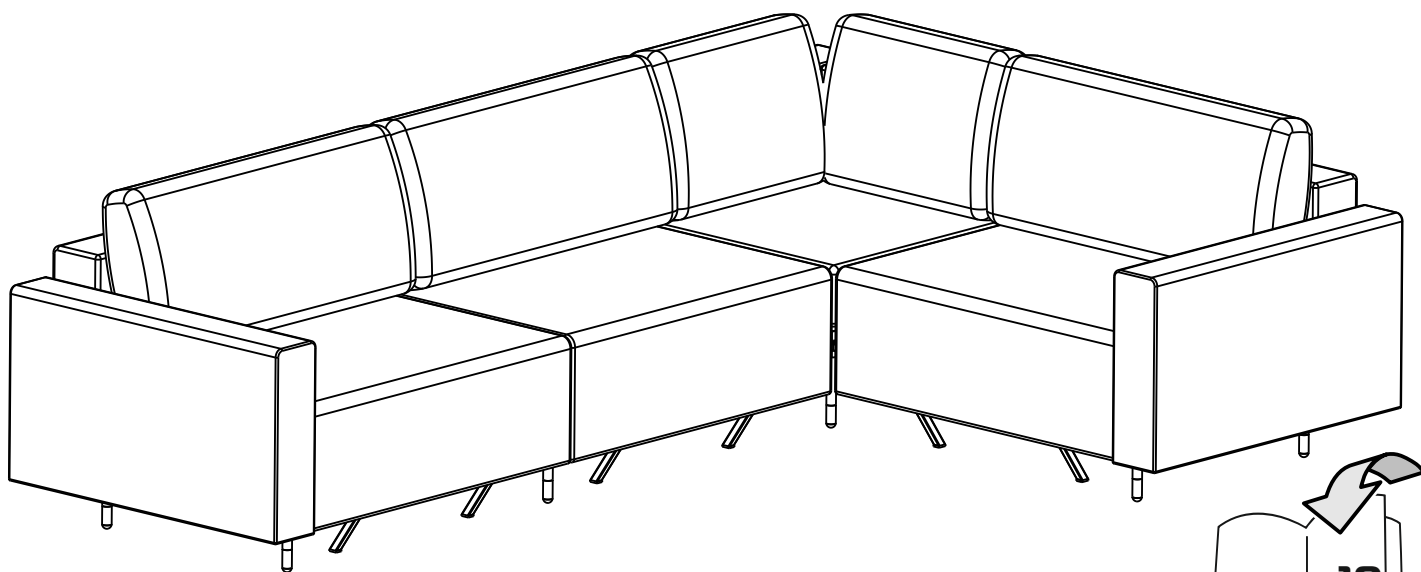

ШАГ 1

0
10
20
30
40
50
60

5
15
25
35
45
55

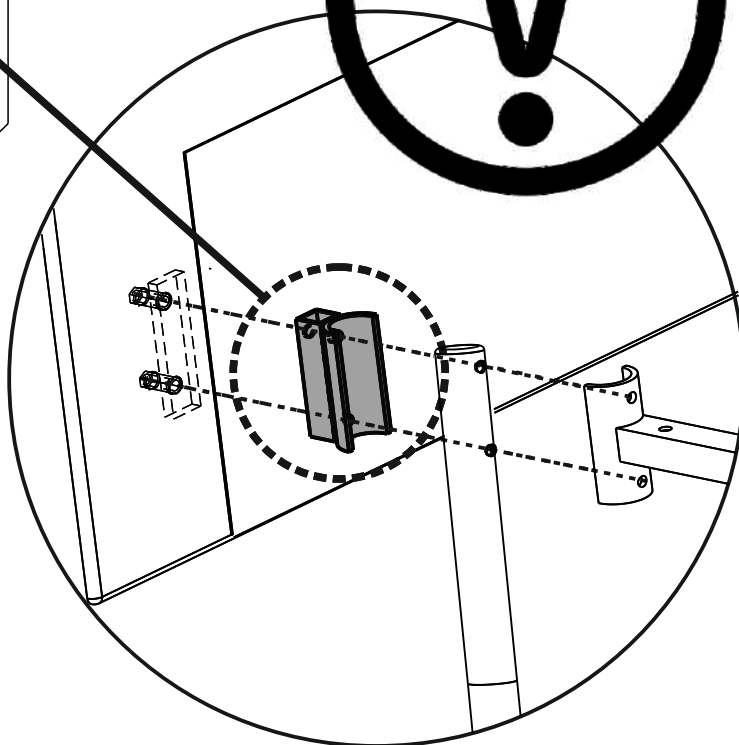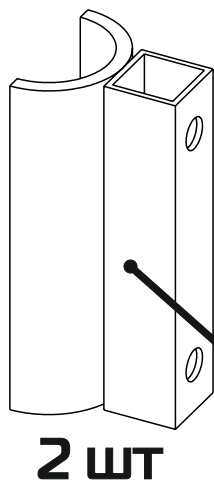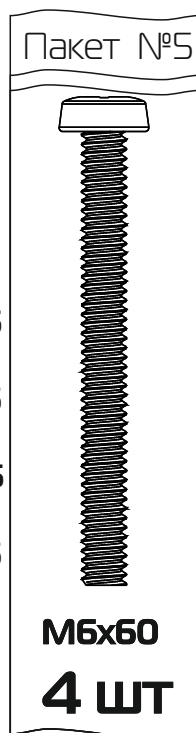


деталь 4


деталь 1

деталь 2






деталь 3

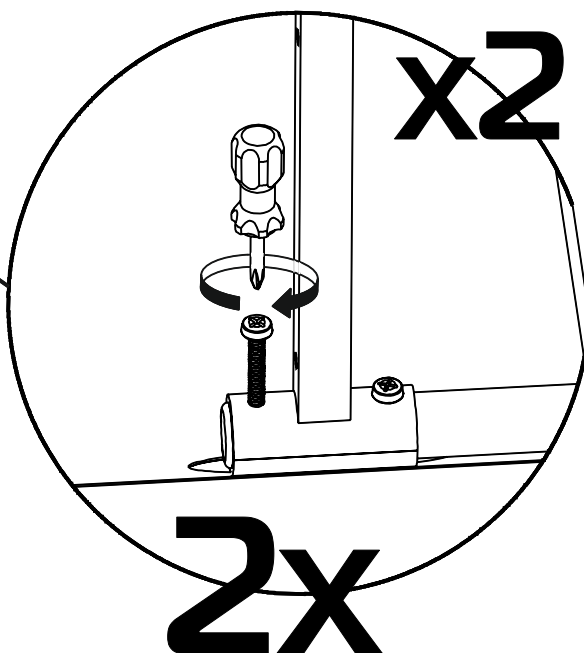

ШАГ 2

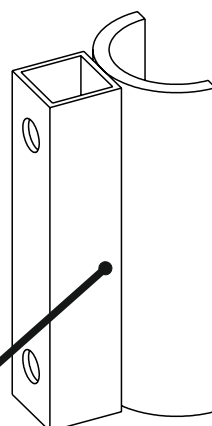

2 шт

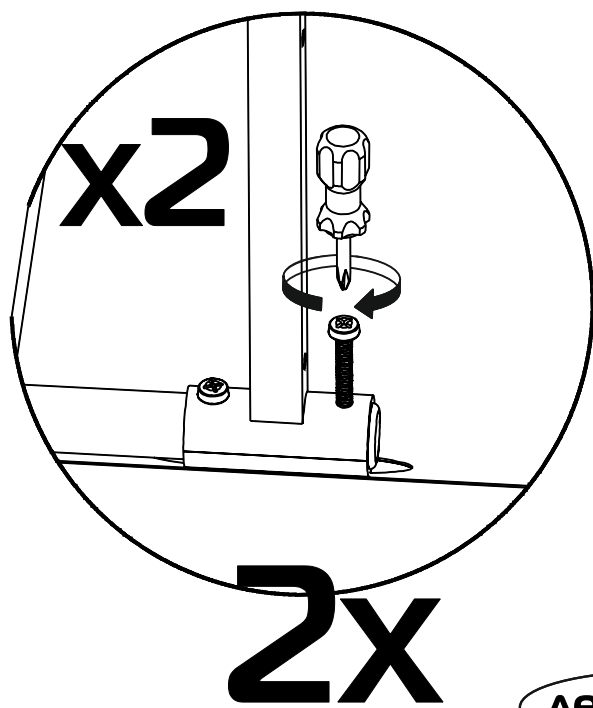
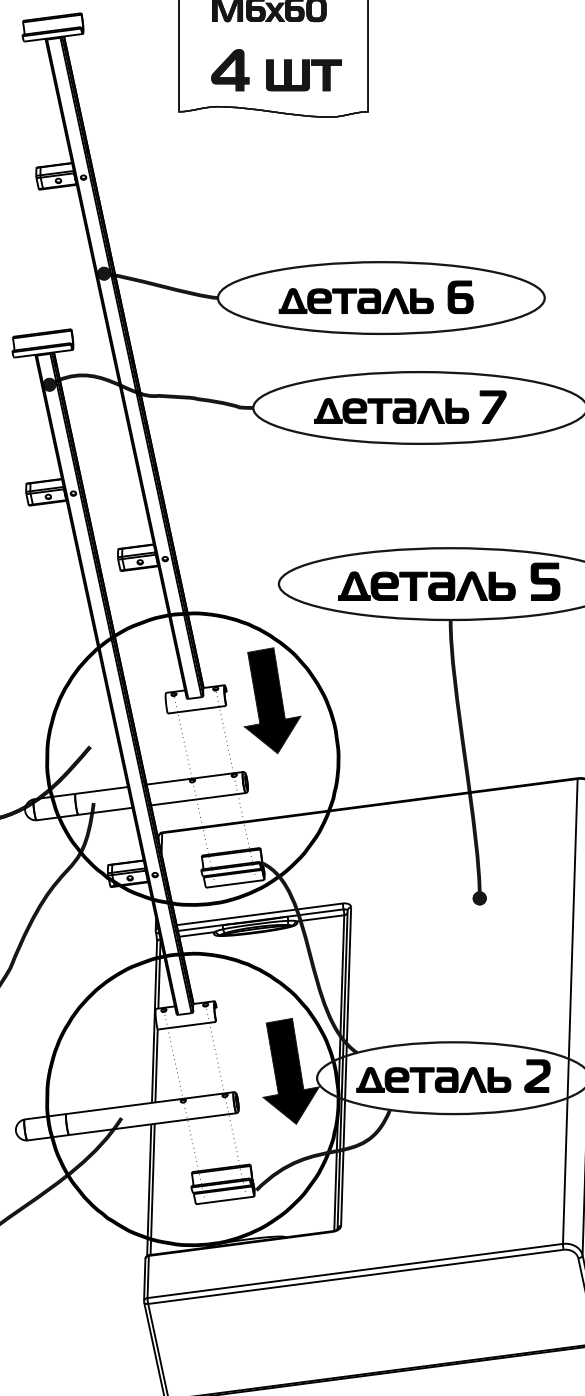
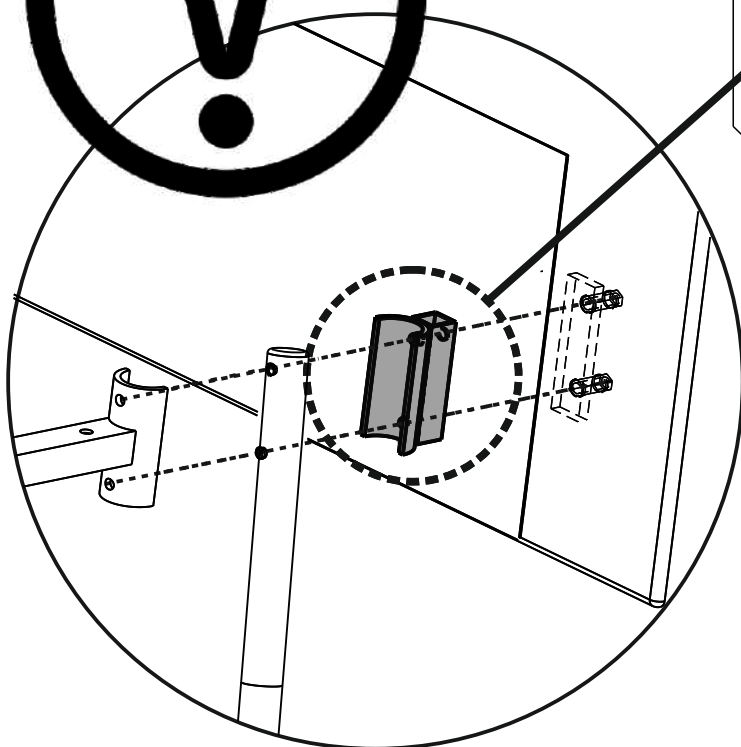
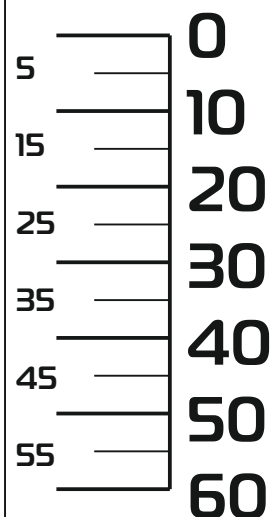
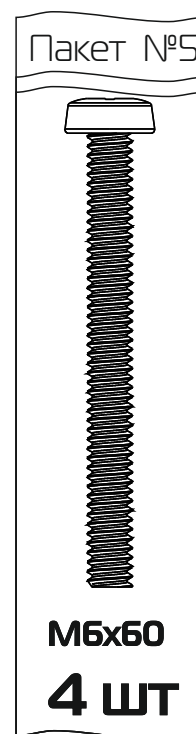


деталь 3

ШАГ 3

0
10
20
30
40





5
15
25
35

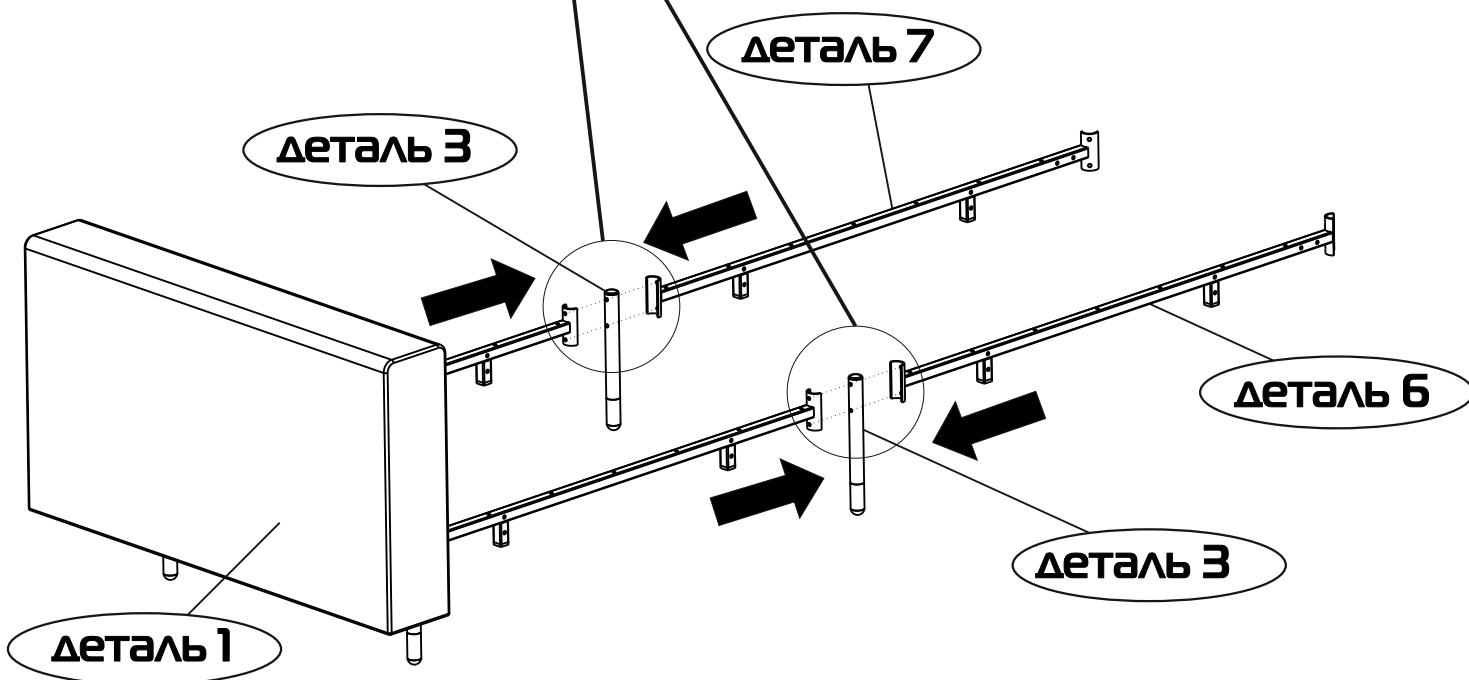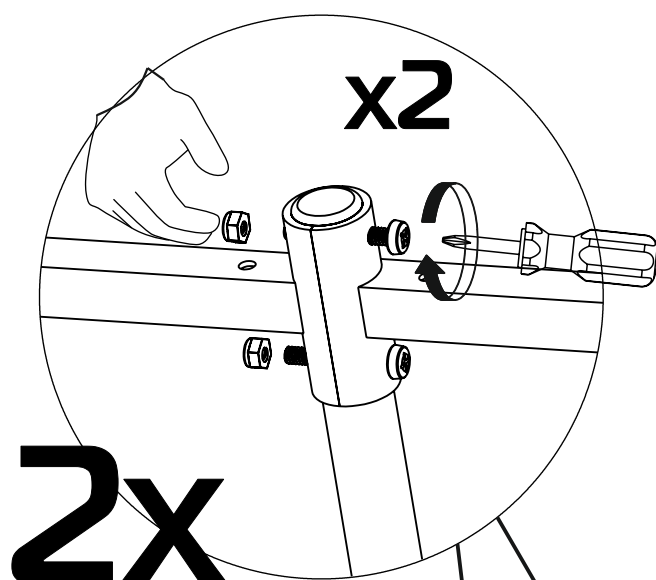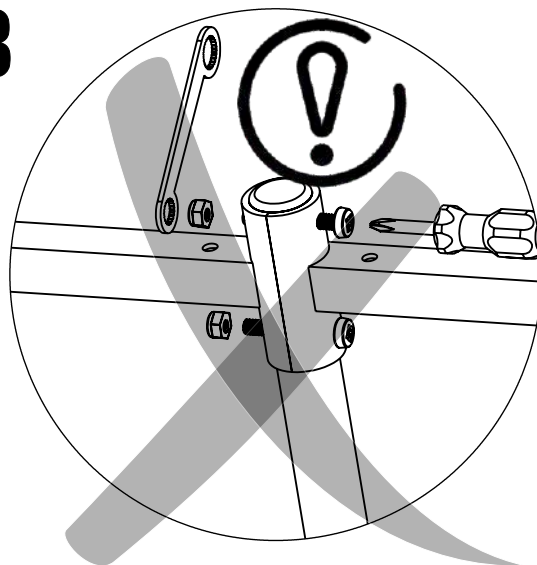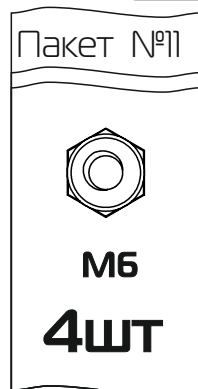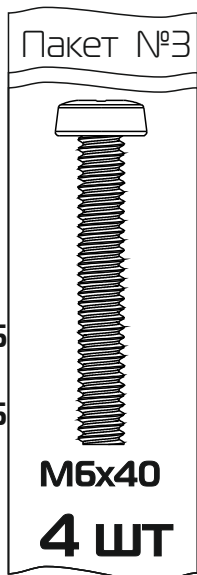

ШАГ 4


0
10
20
30
40

5
15
25
35

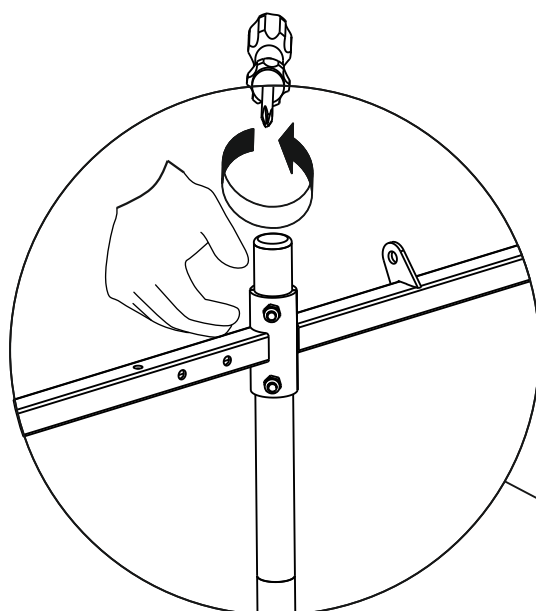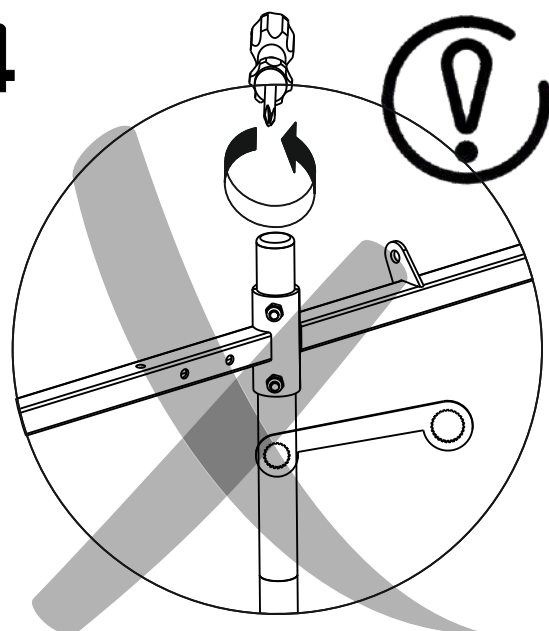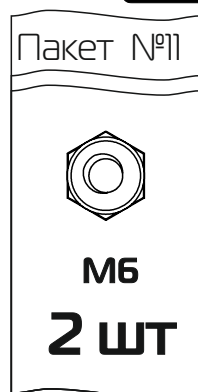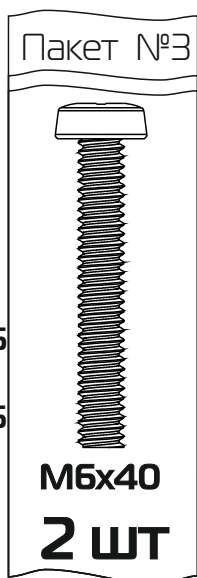

деталь 7

деталь 9

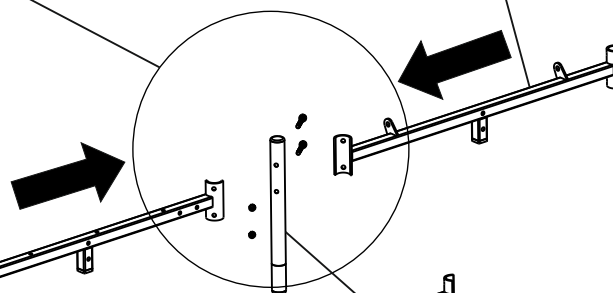






деталь 8

деталь 1

ШАГ 5







0
10
20
30
40

5
15
25
35

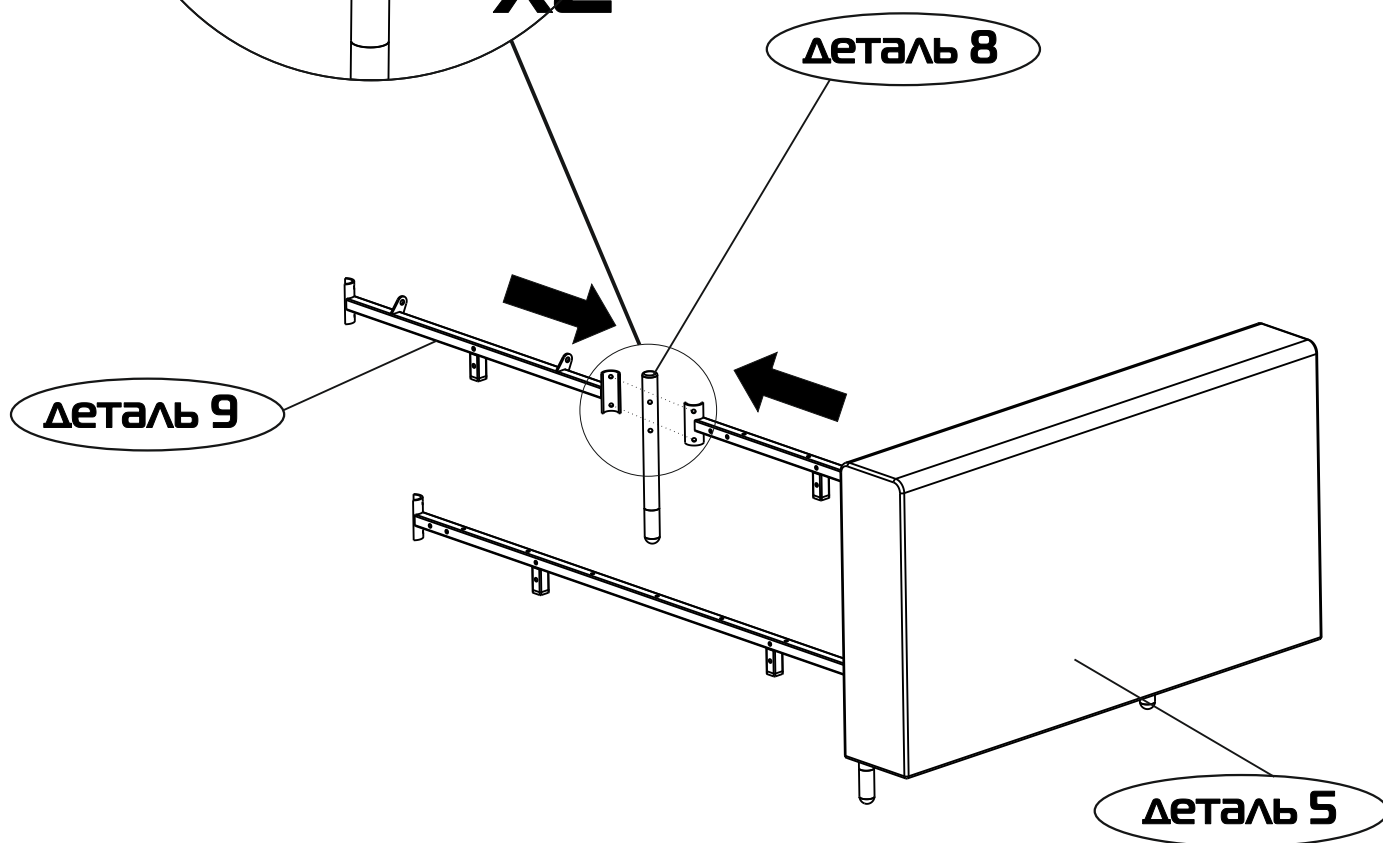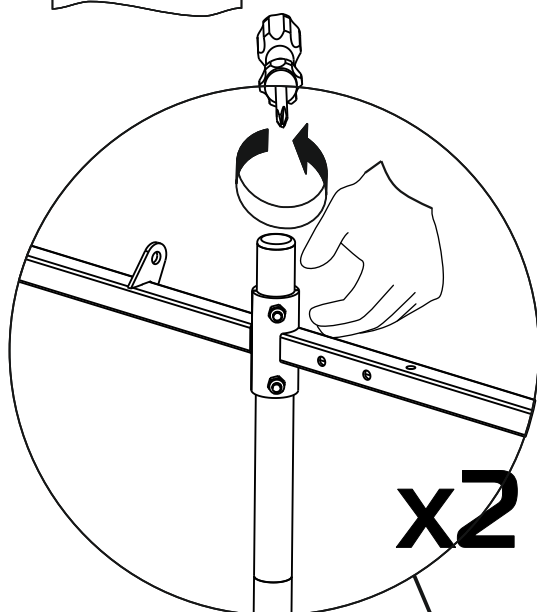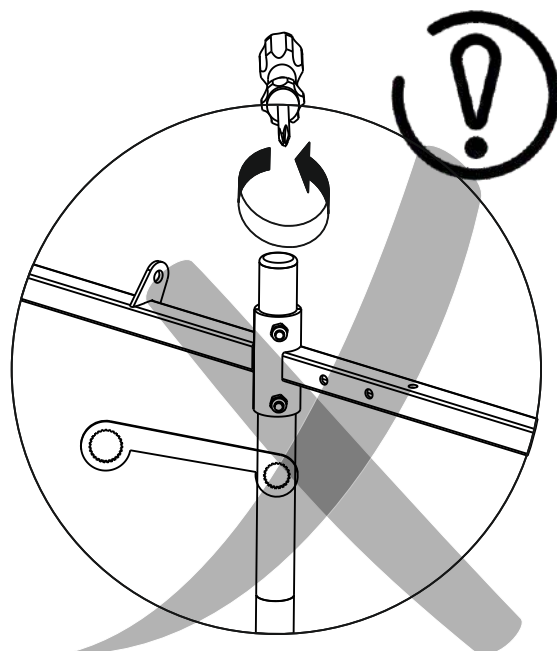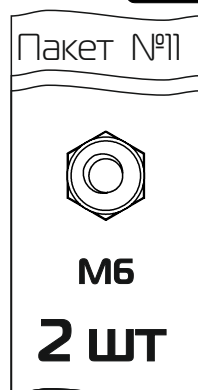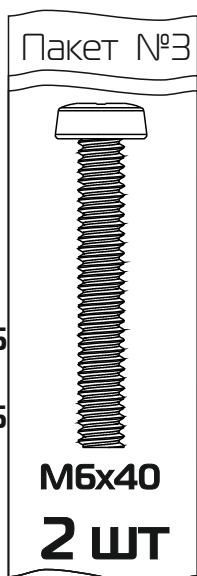



ШАГ 6

0
10
20
30
40

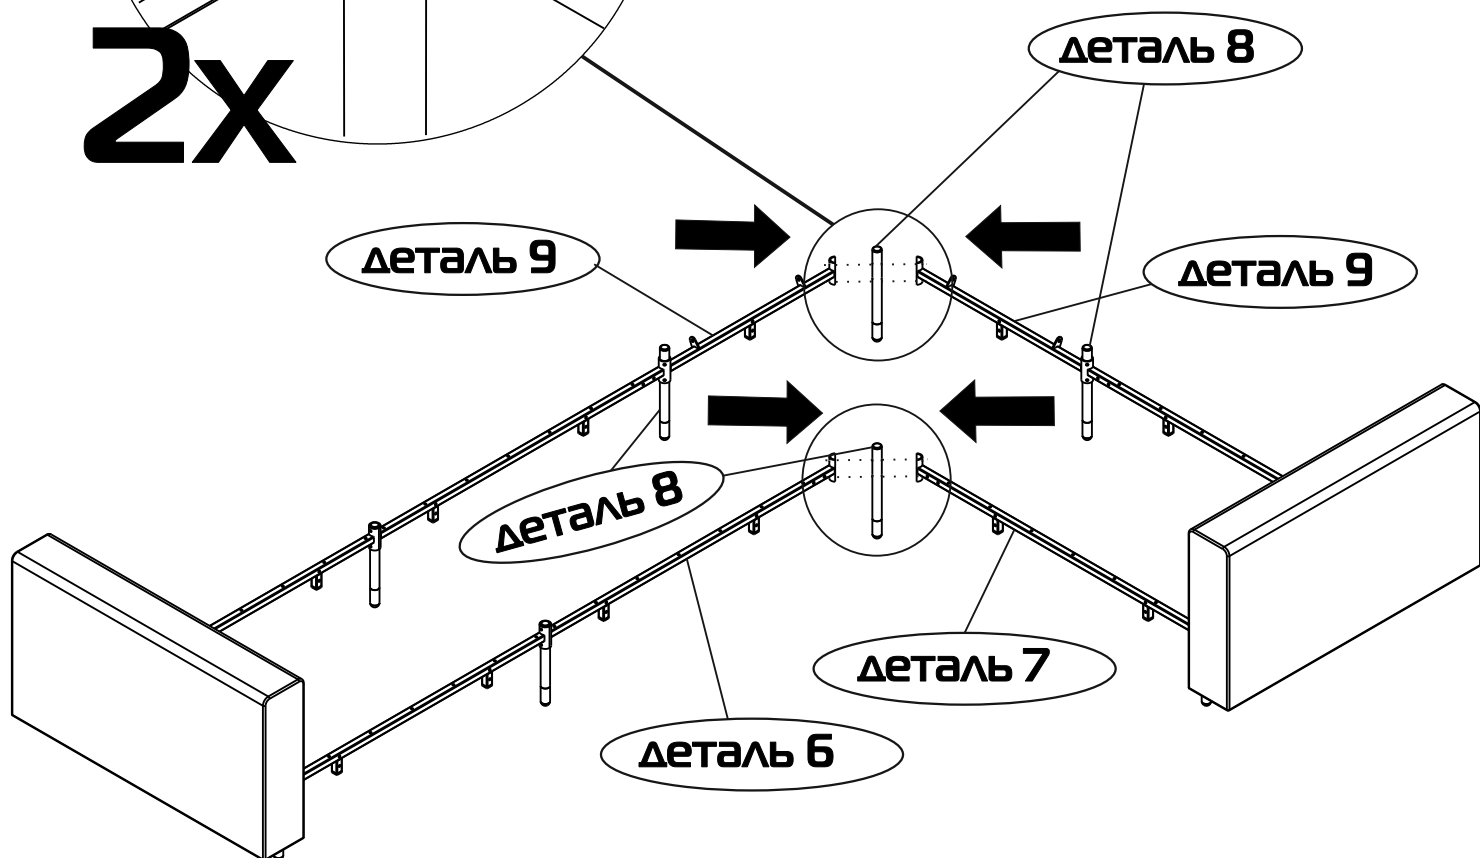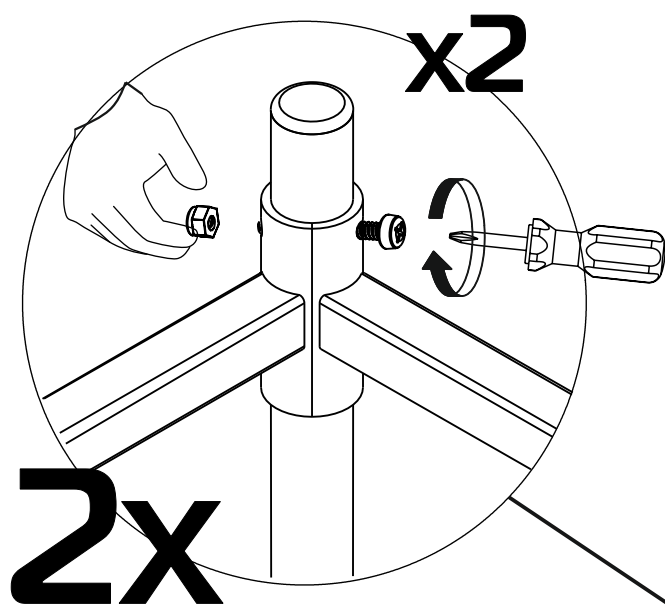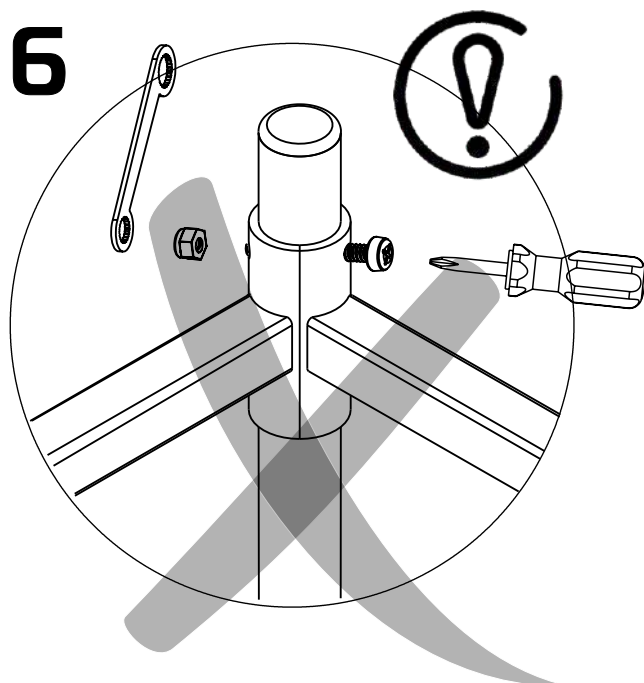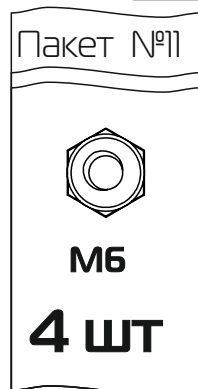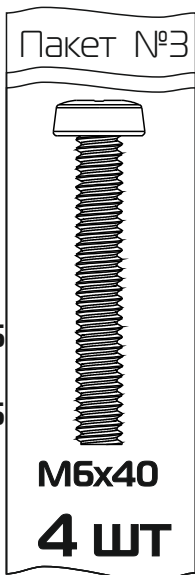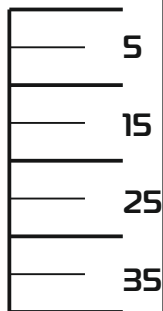


ШАГ 7

0
10
20

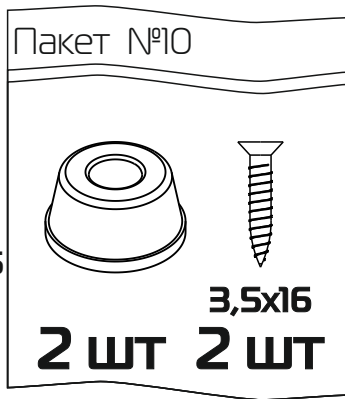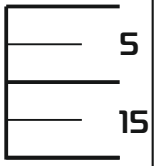

x2

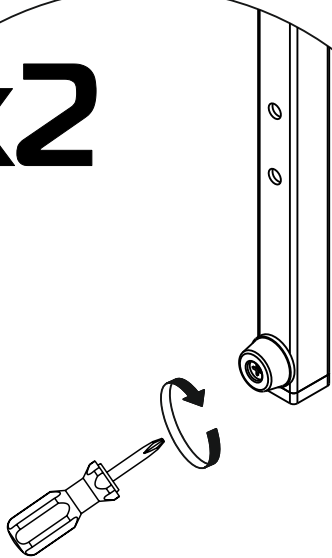

деталь 10



ШАГ 8

0
10
20
30
40

5
15
25
35
45

Пакет №4



M6x45




8 шт

Пакет №11







M6

4 шт



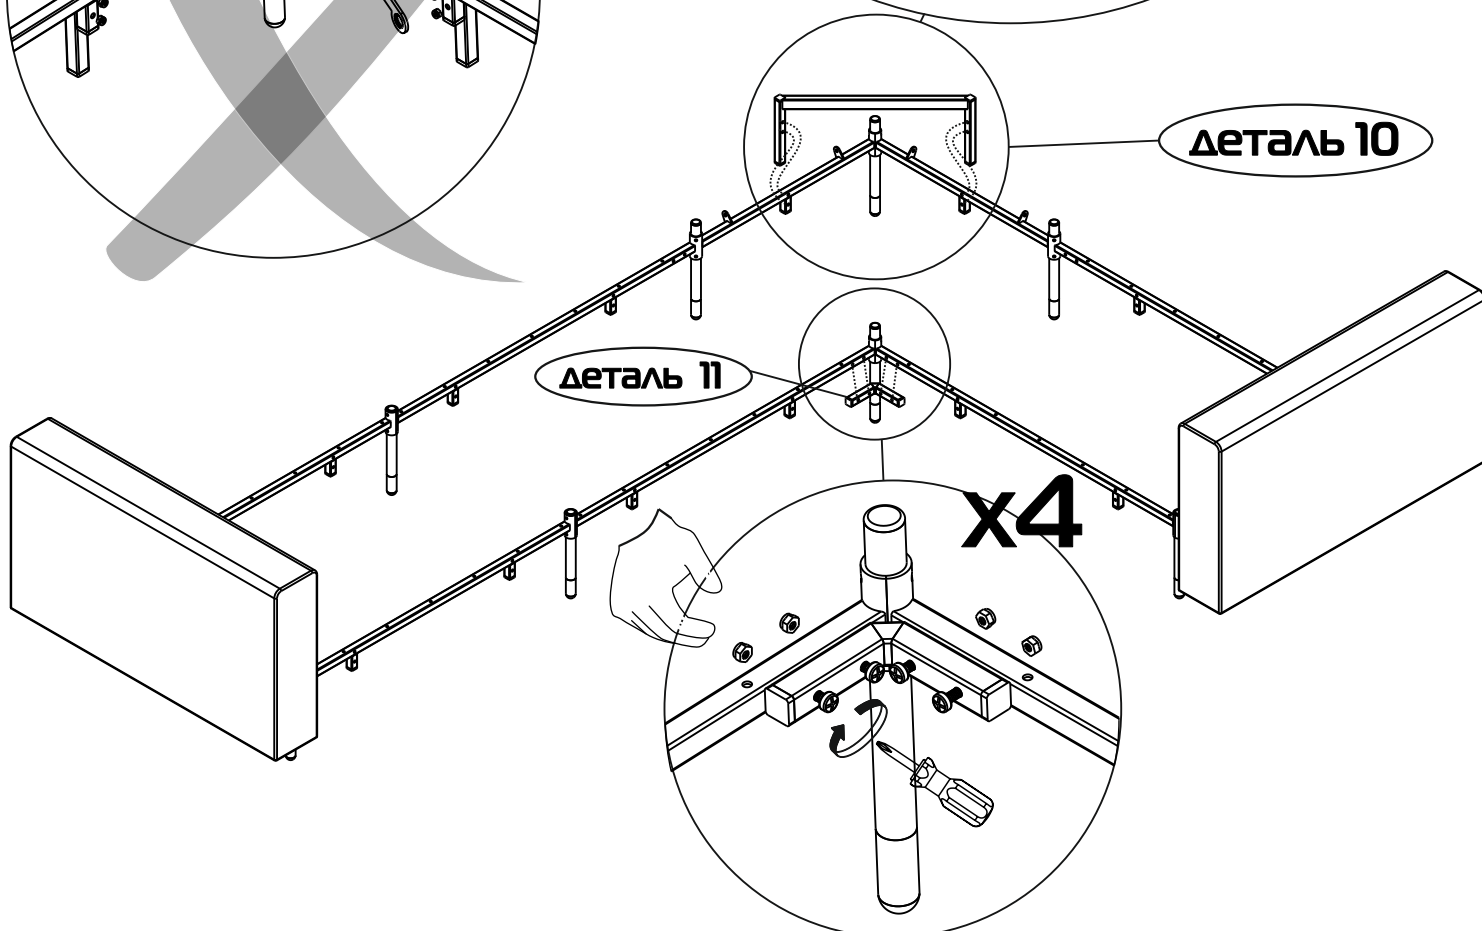
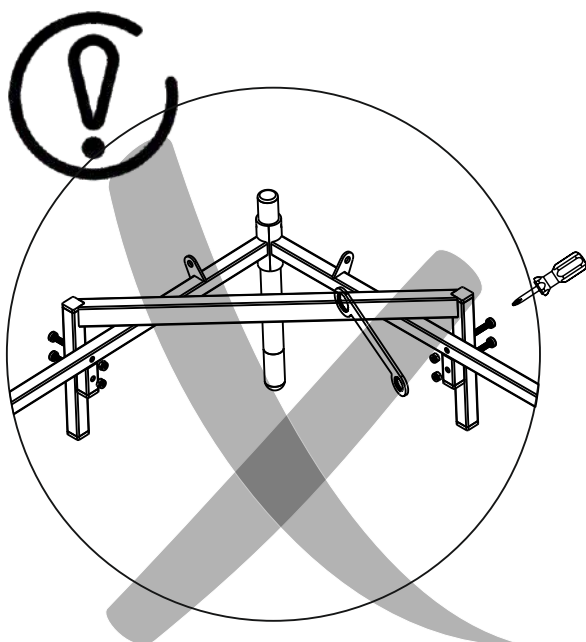
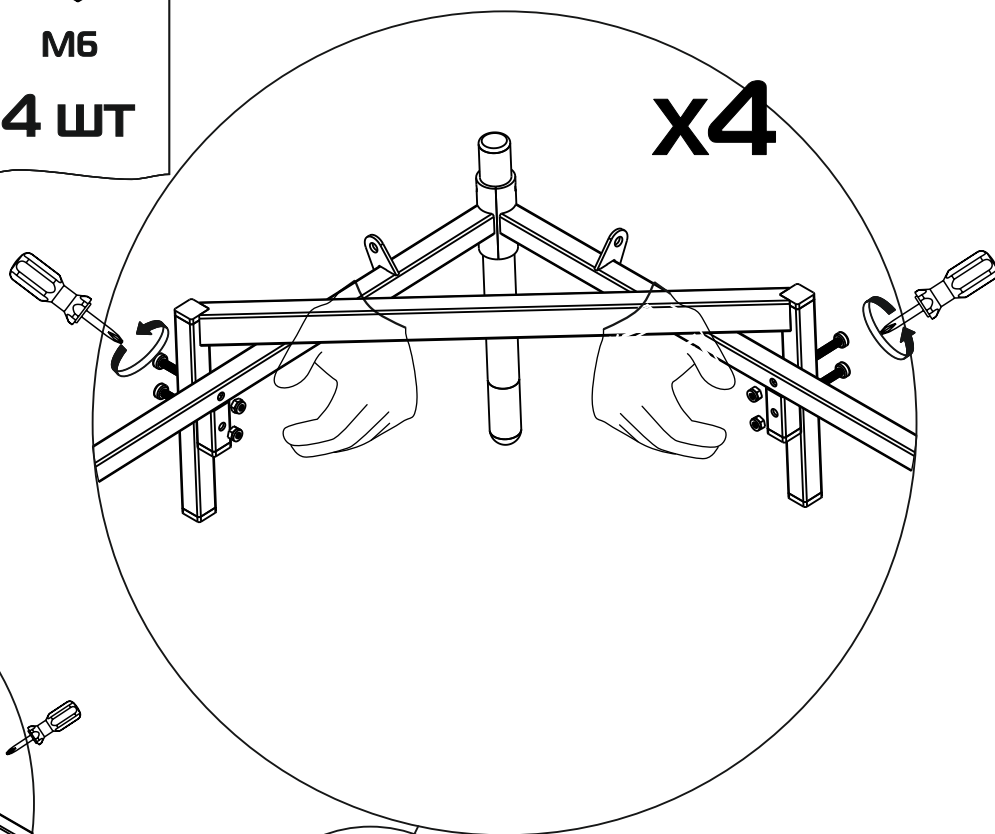


ШАГ 9

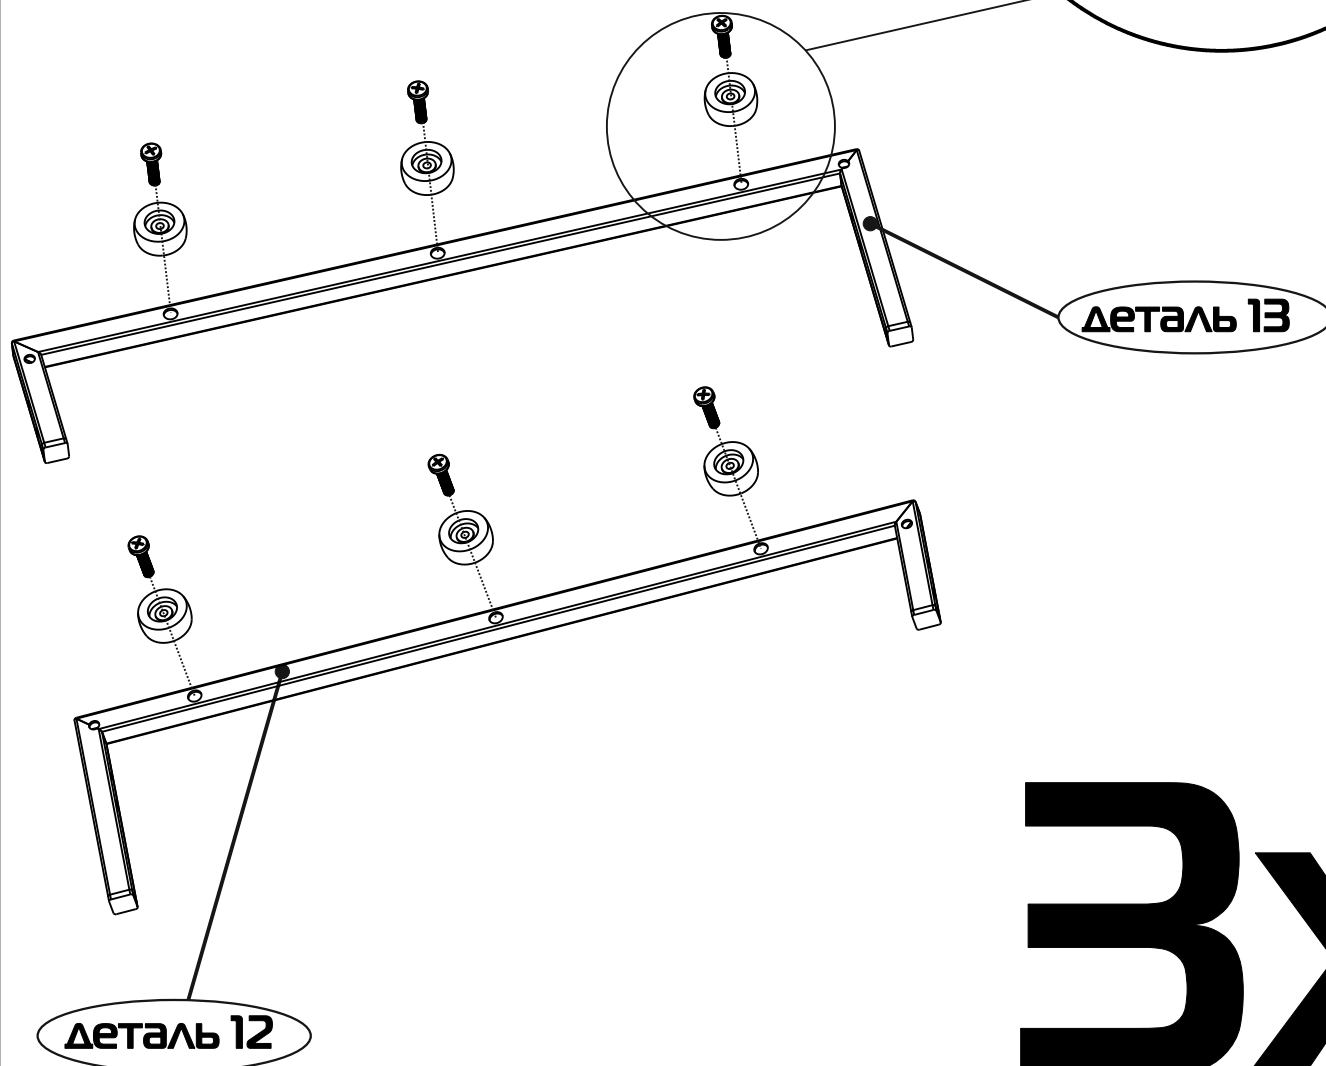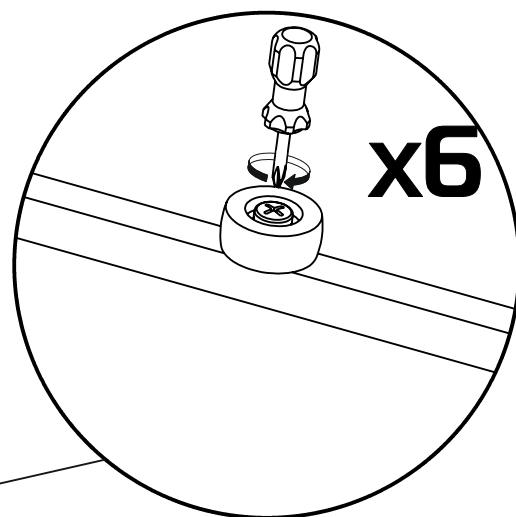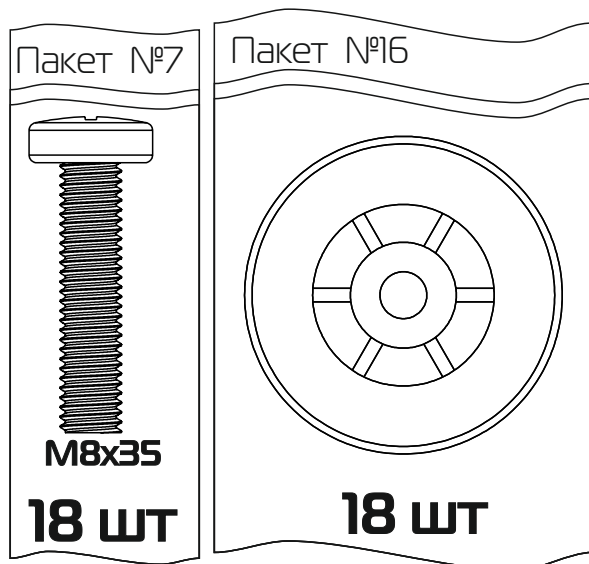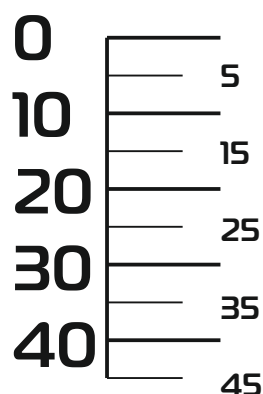

3x



ШАГ 10

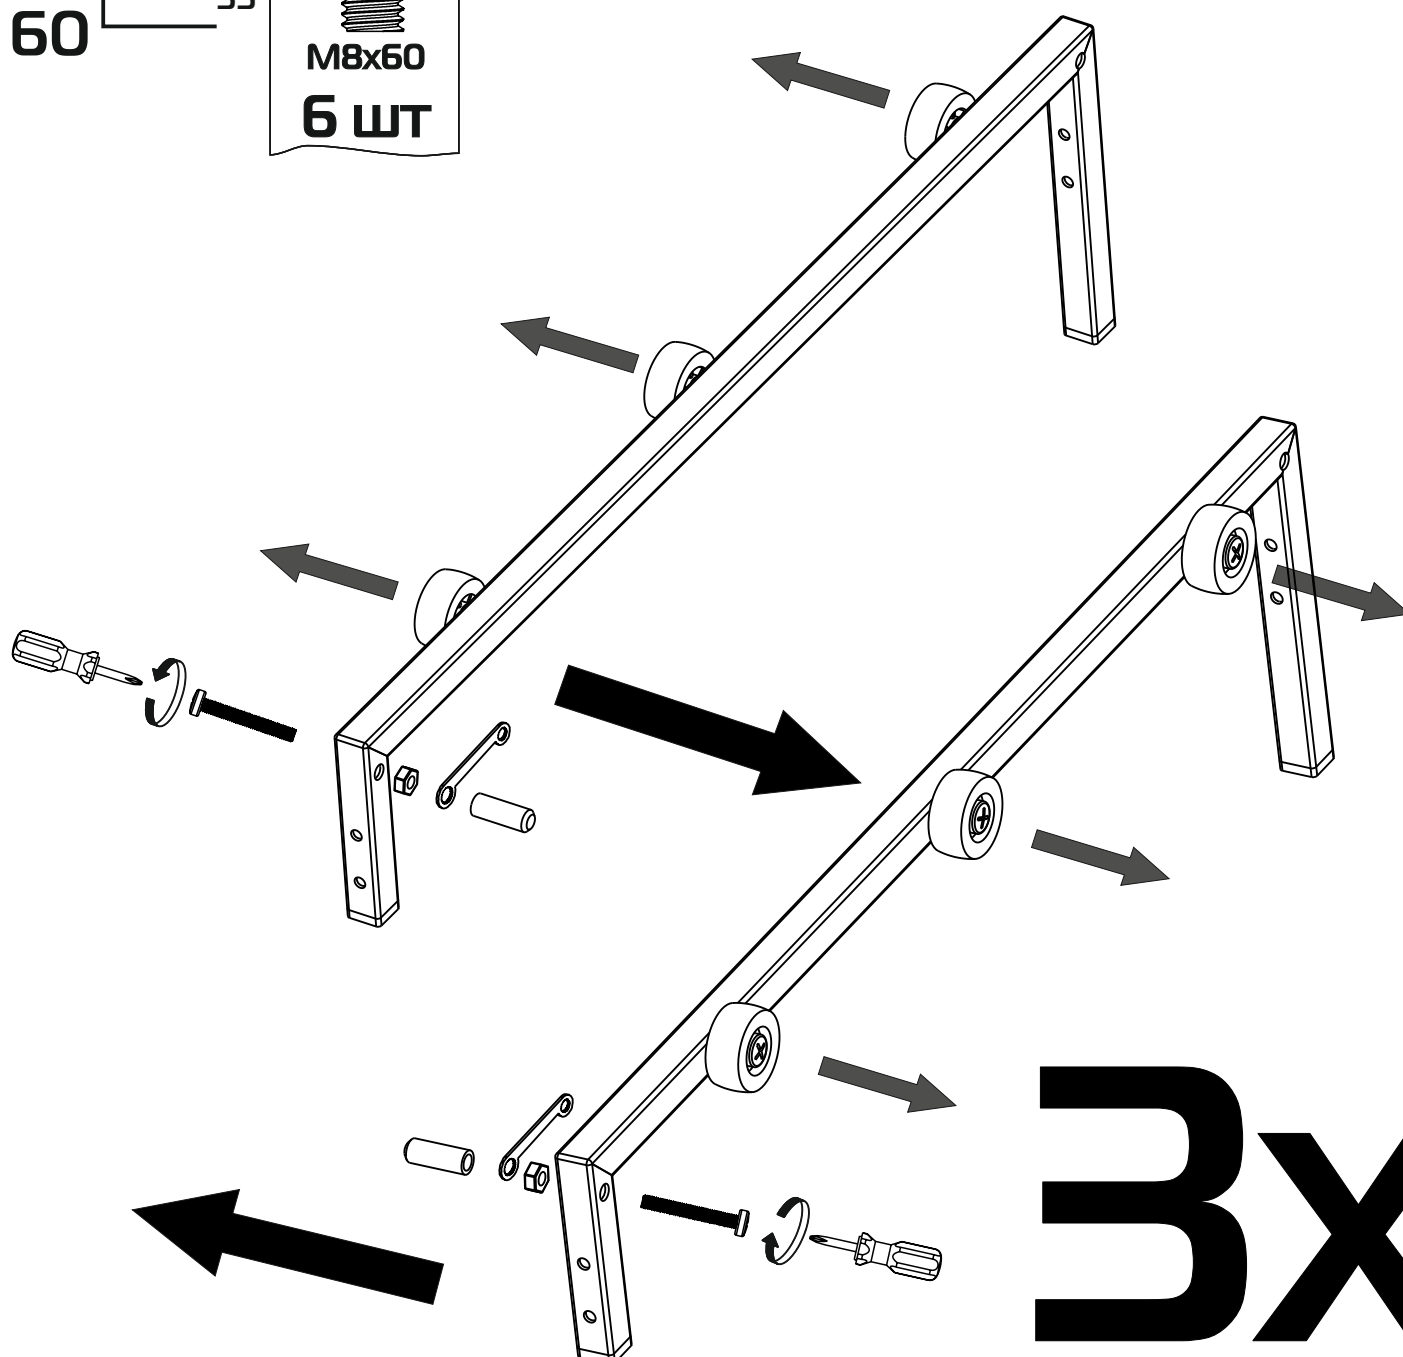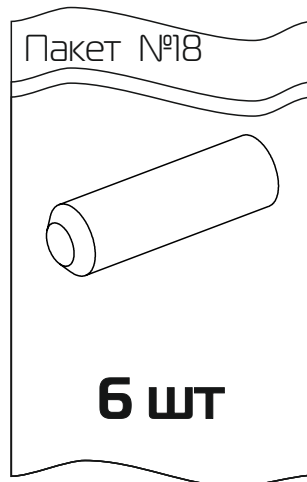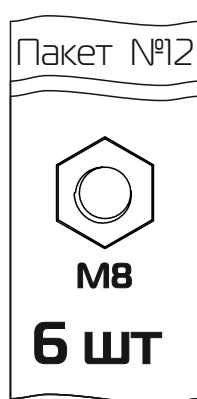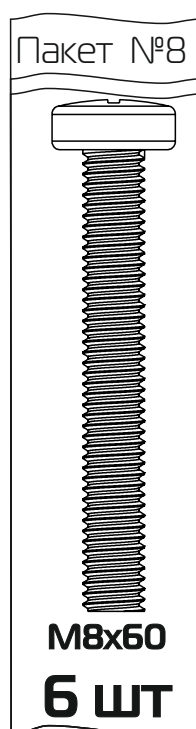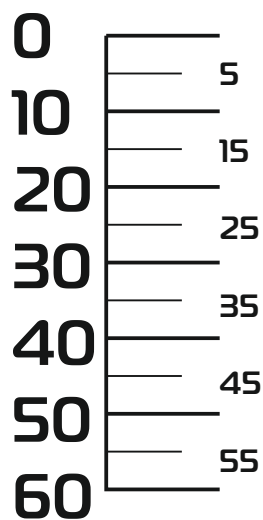

3x

ШАГ 11

0
10
20

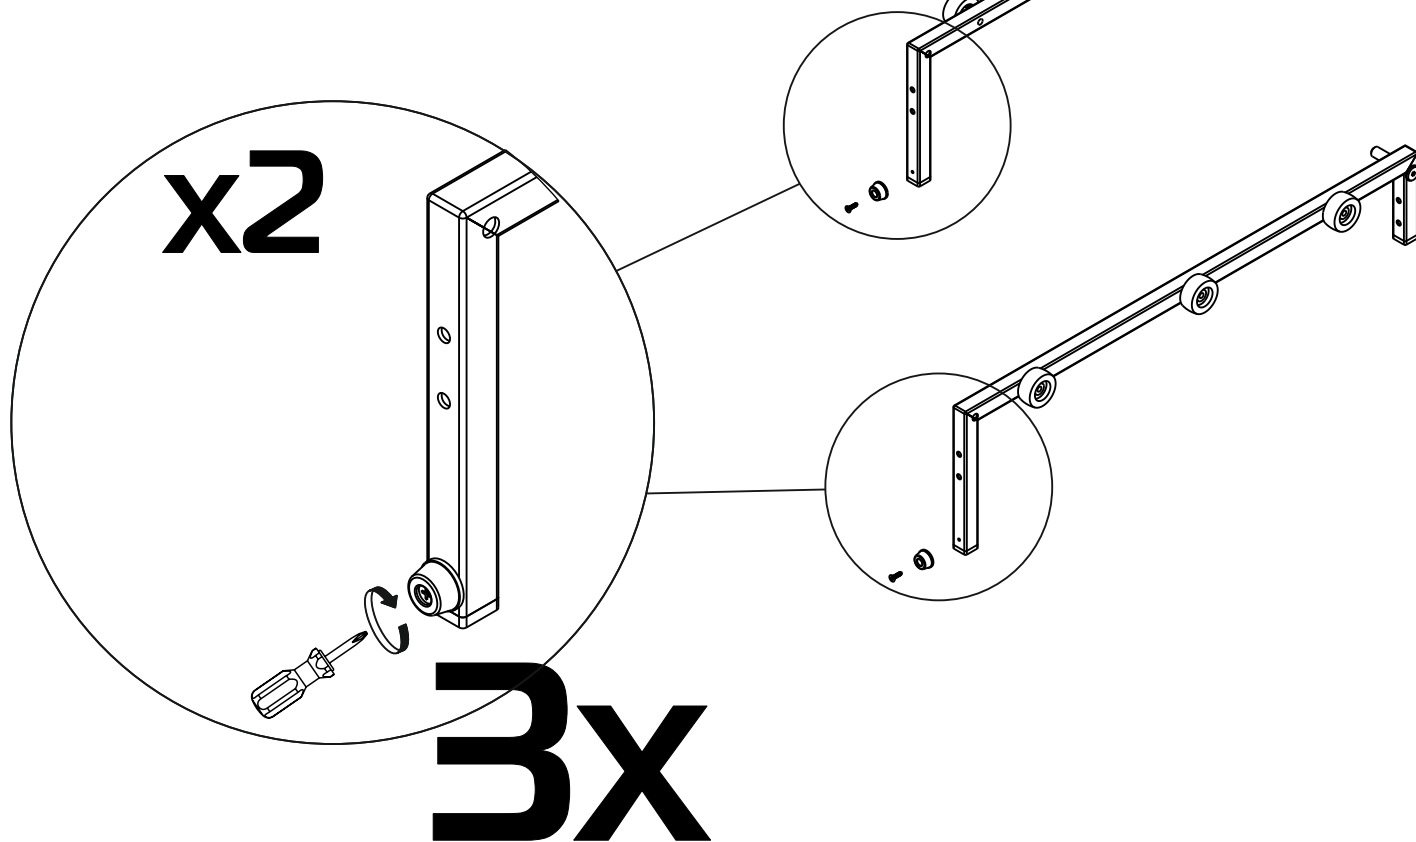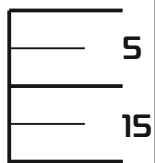

ШАГ 12

деталь 1

деталь 18

Сиденье

Спинка

деталь 18

деталь 1

Спинка

Сиденье

ШАГ 13


Пакет №4



M6x45


24 шт

Пакет №12




M6



24 шт

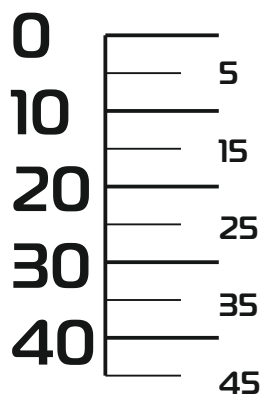


3x

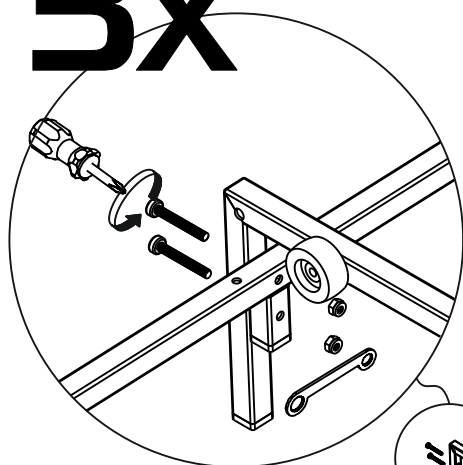


3x

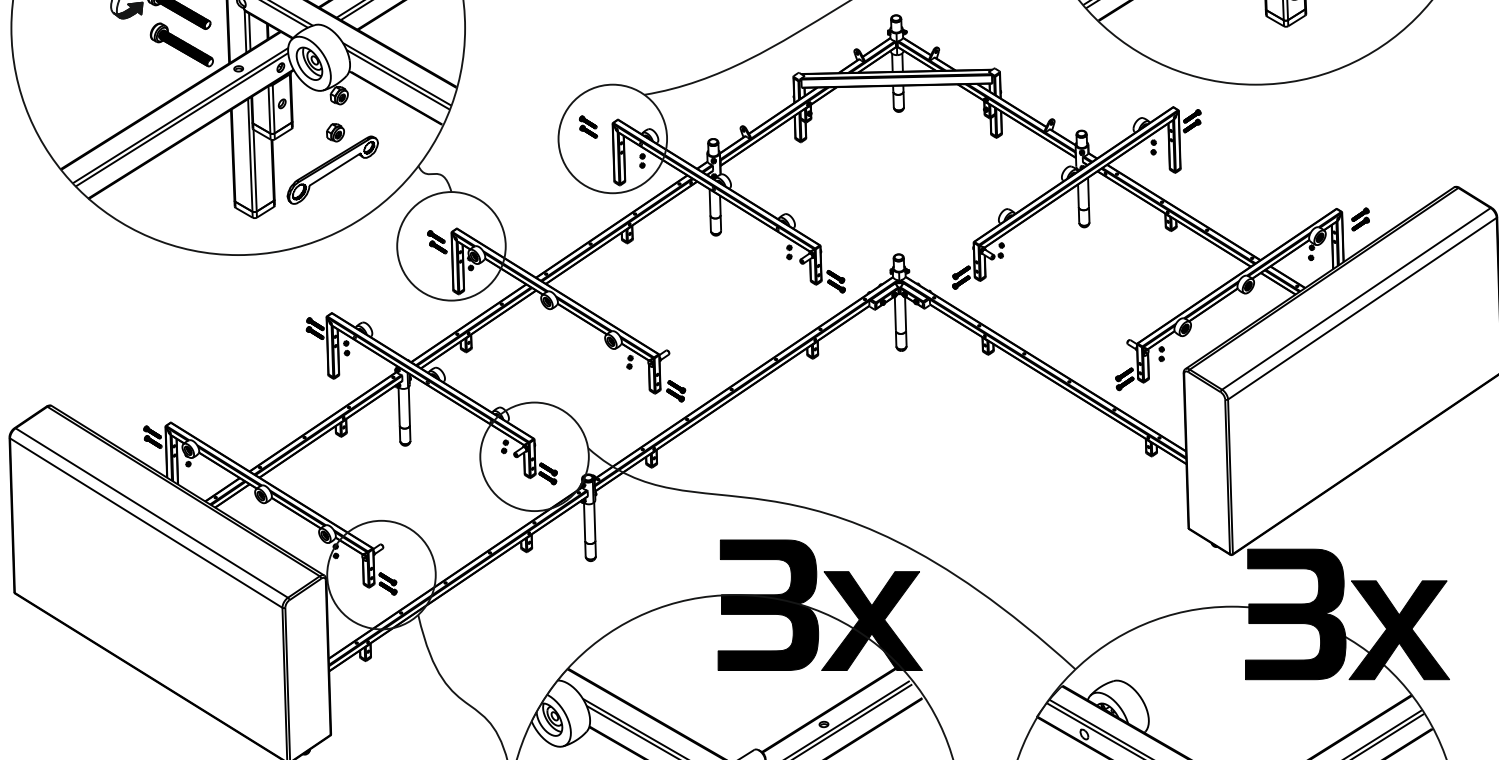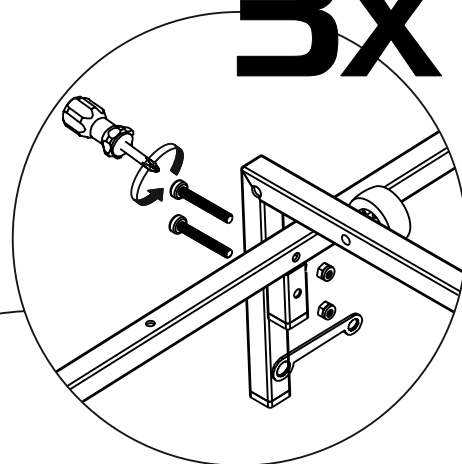

3x

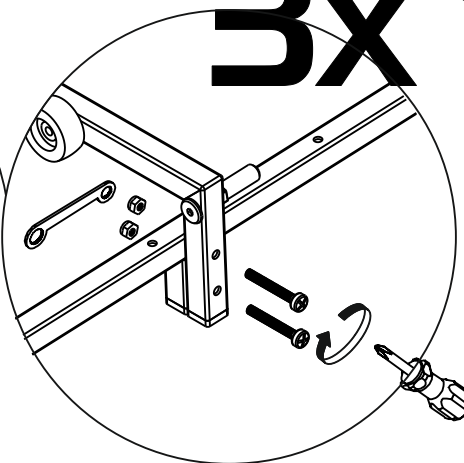


3x

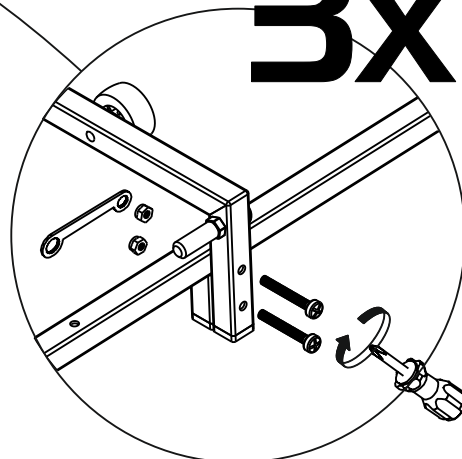

ШАГ 14






Протянуть
с усилием!




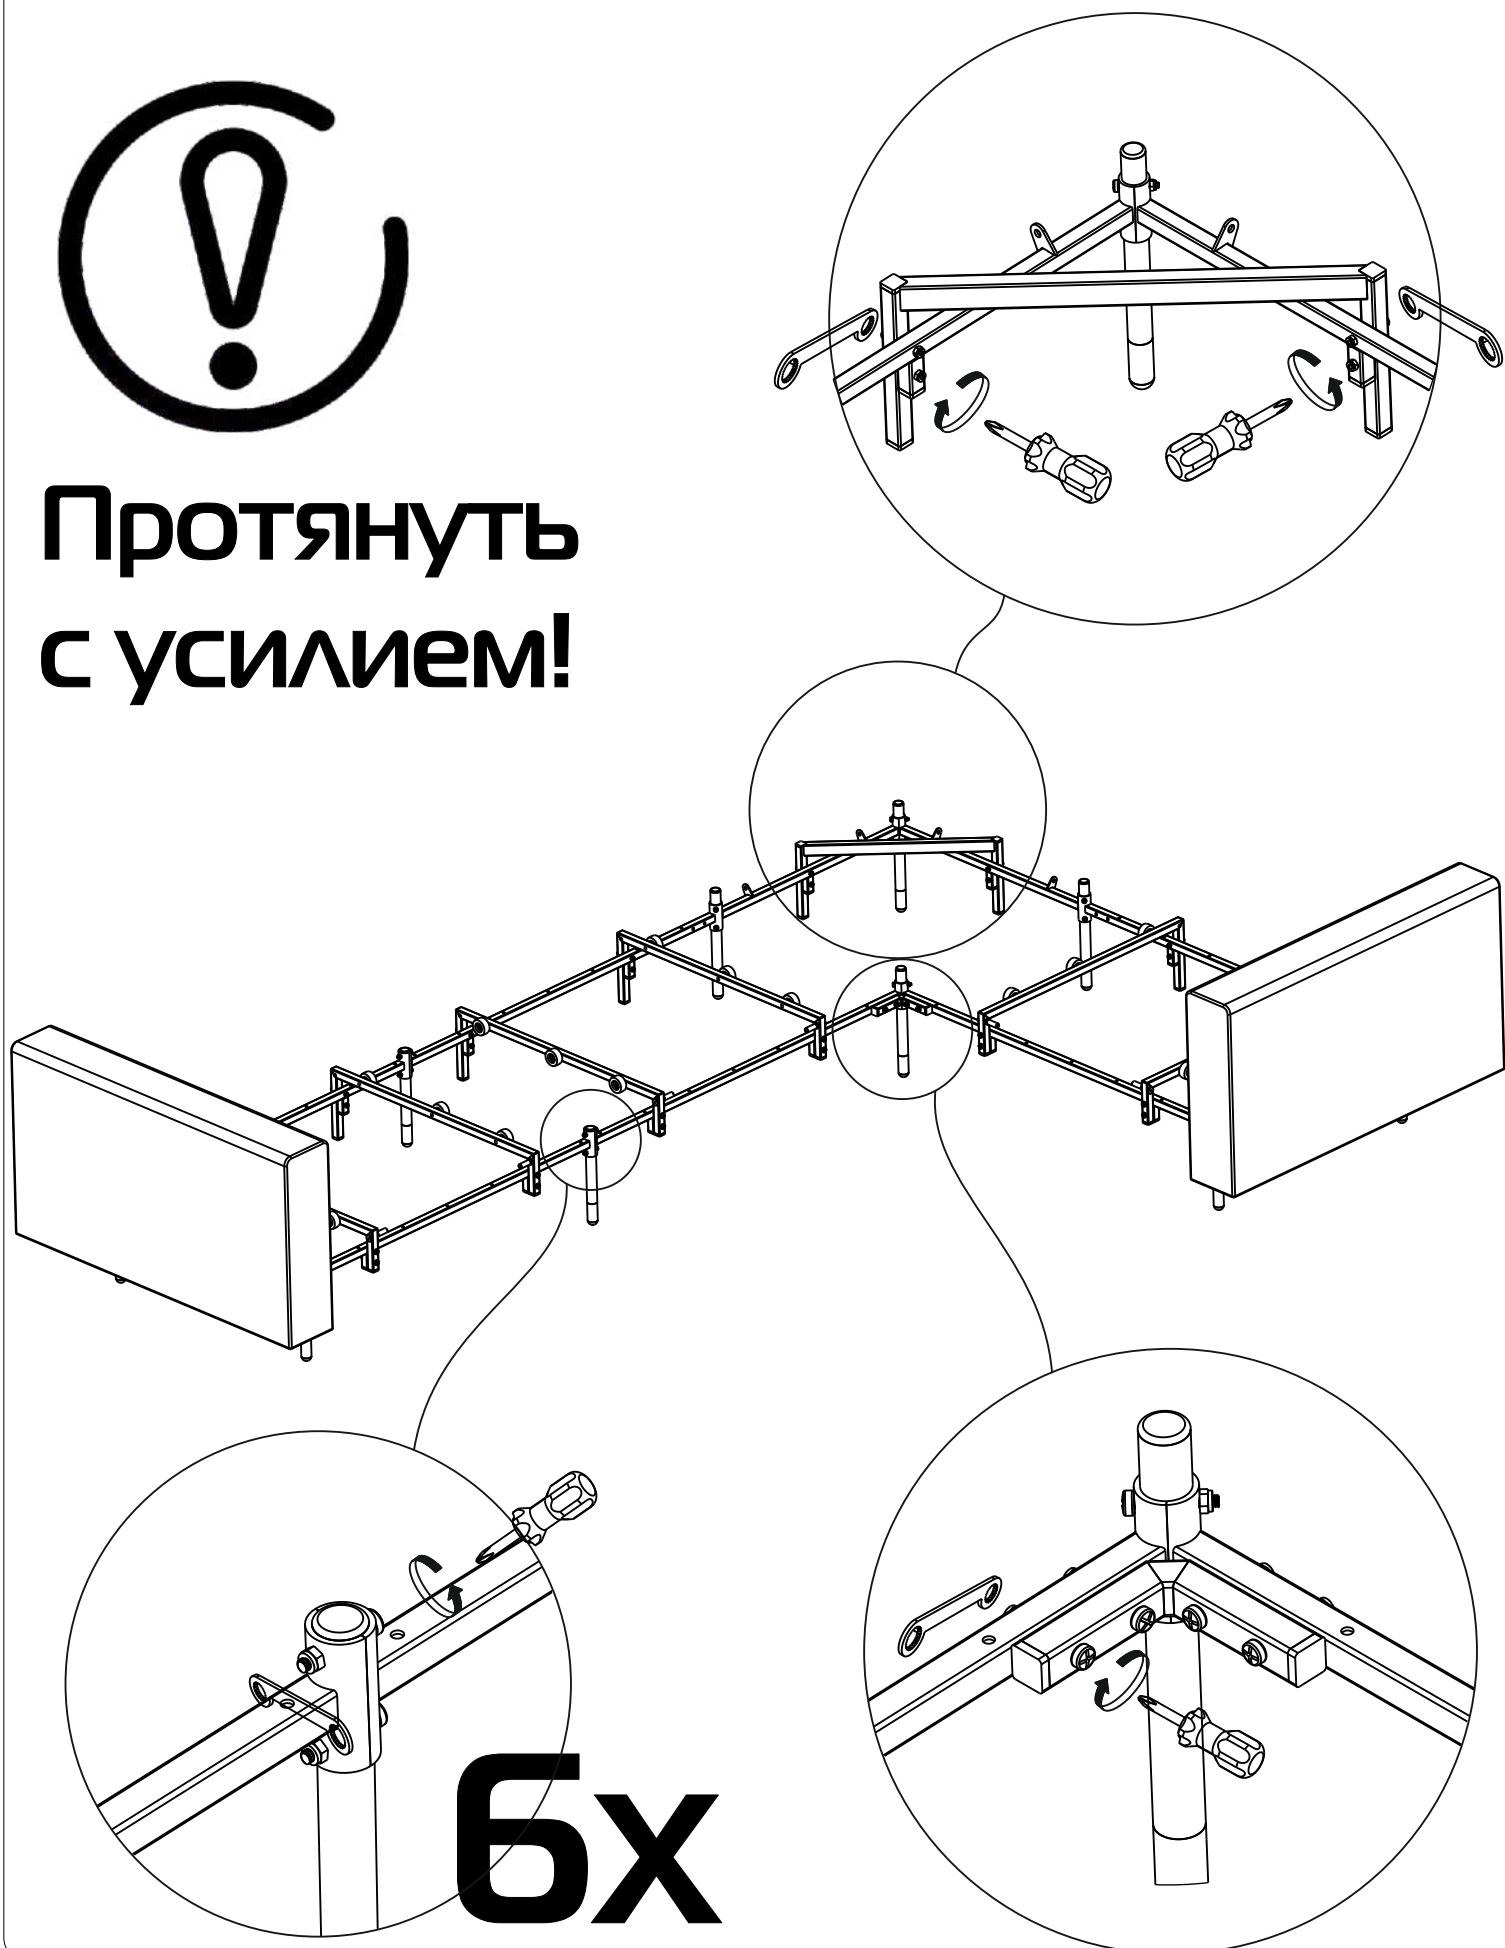


6x

ШАГ 1

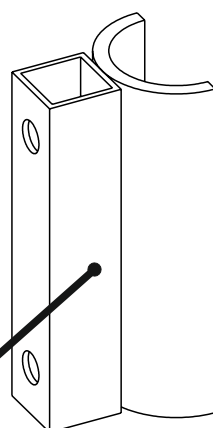
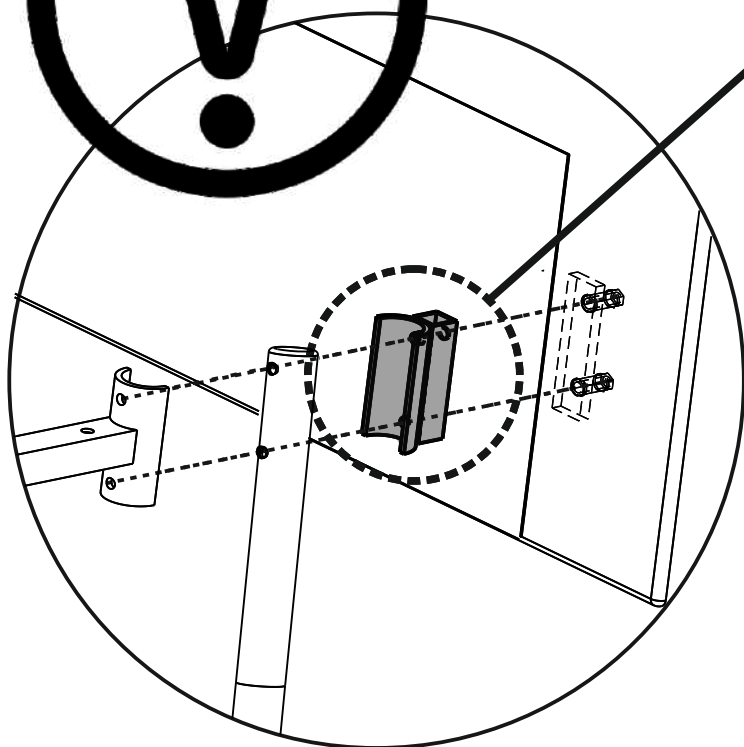
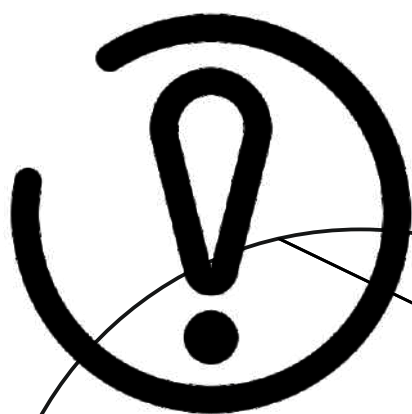


2 шт

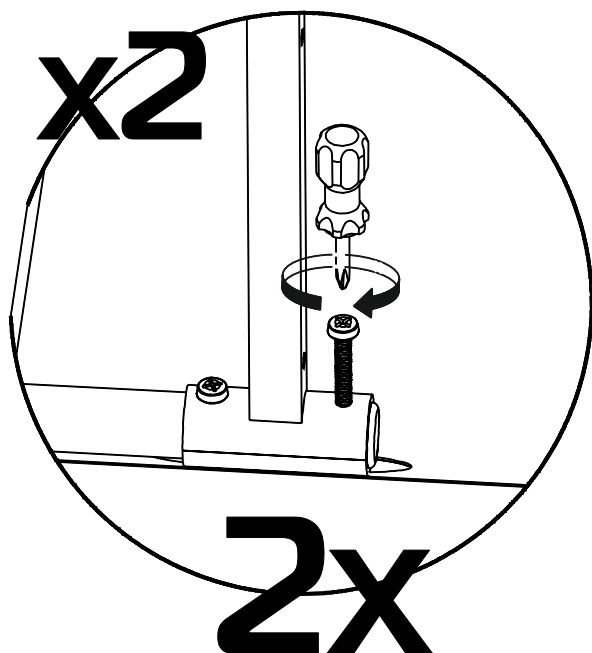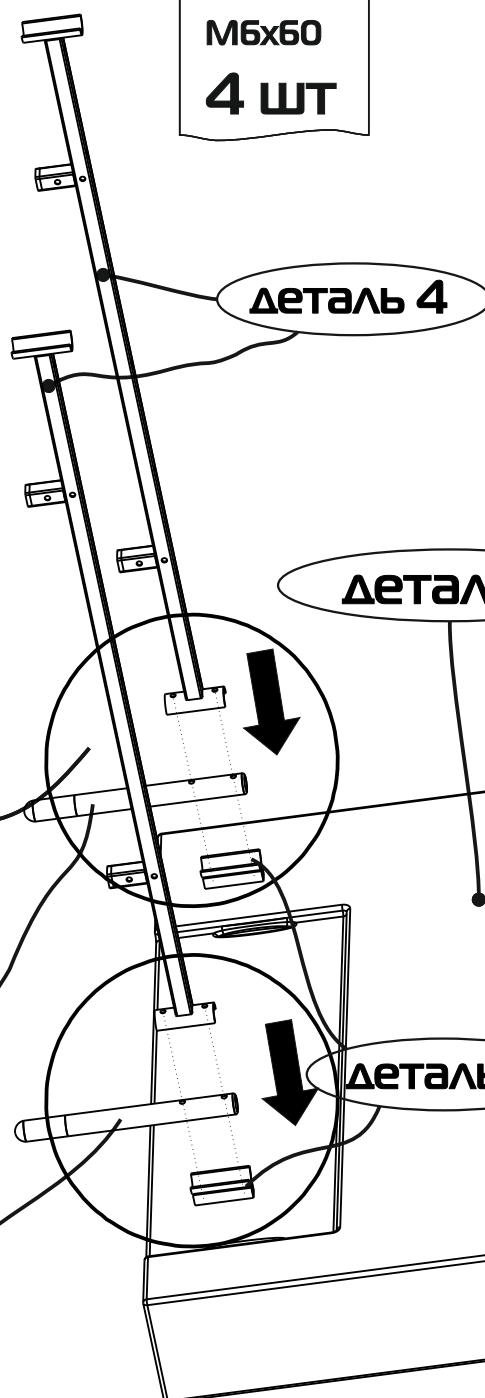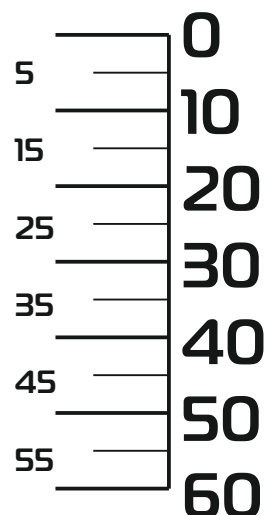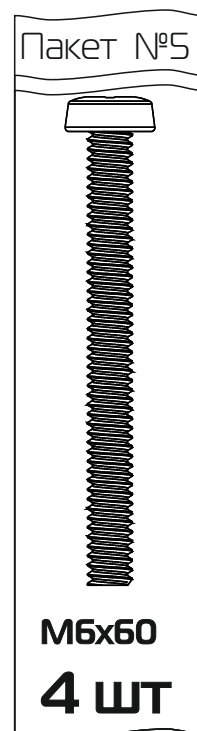

деталь 3

ШАГ 2

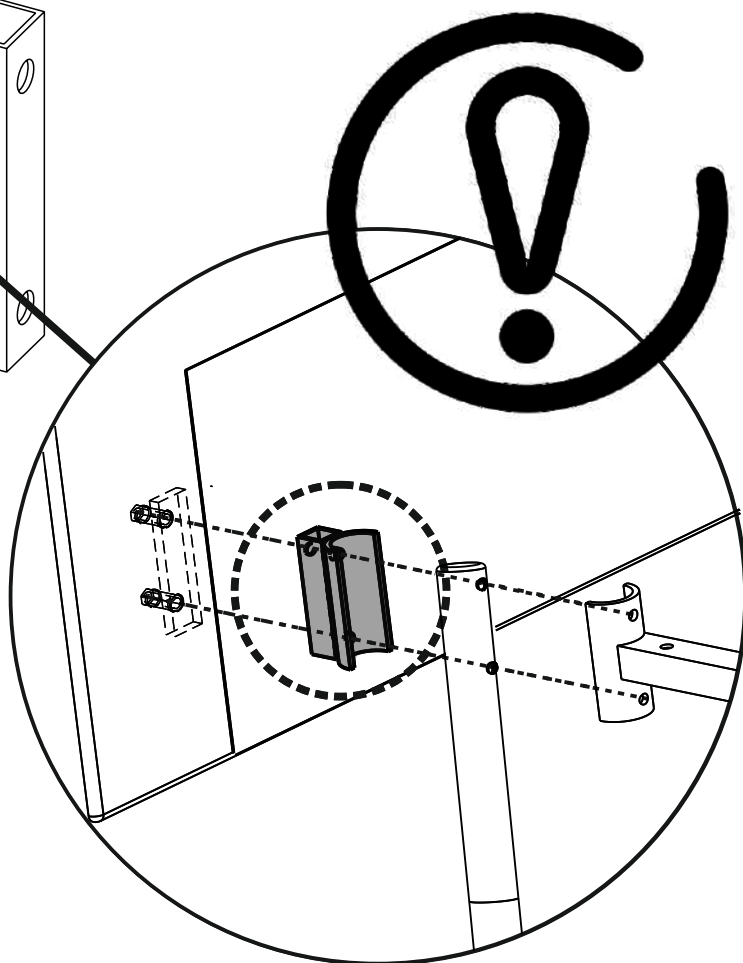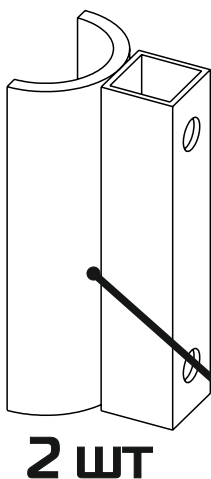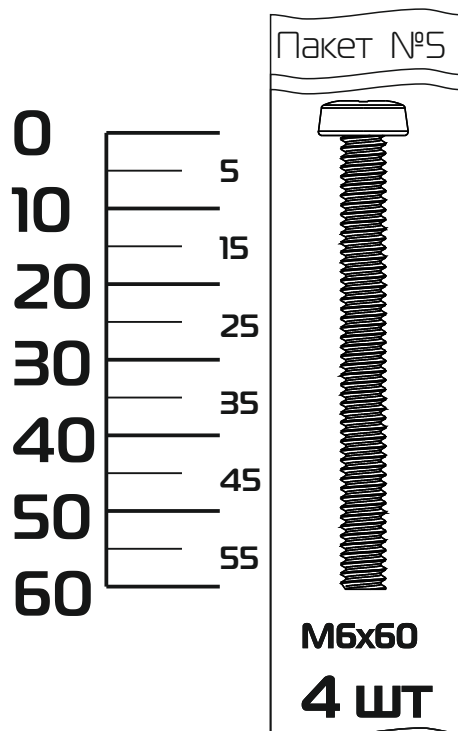


деталь 7

деталь 6







деталь 1

деталь 2






деталь 3

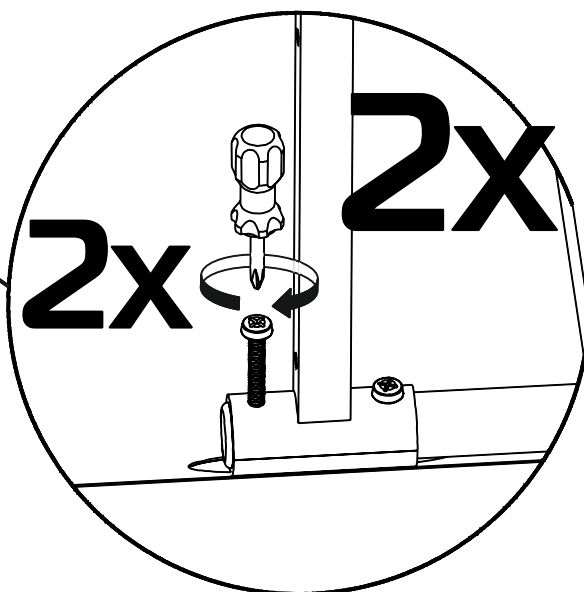

ШАГ 3

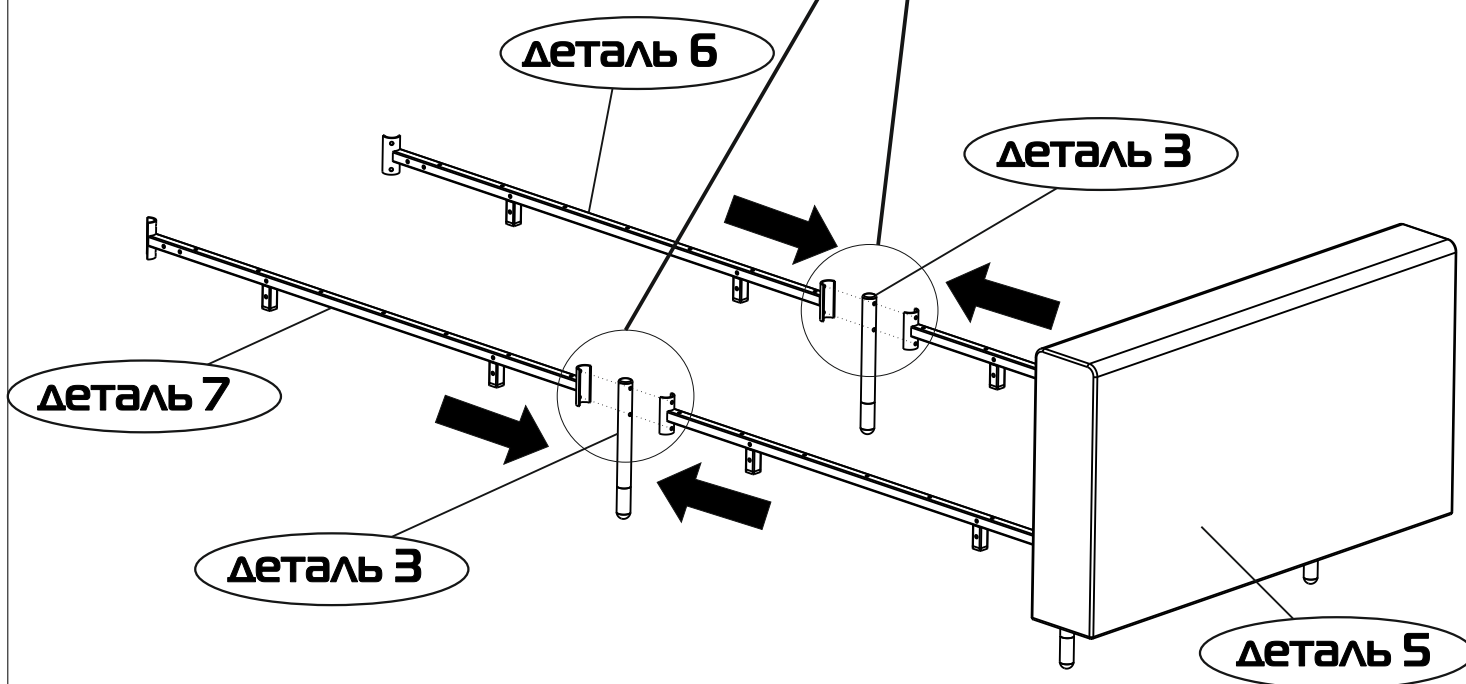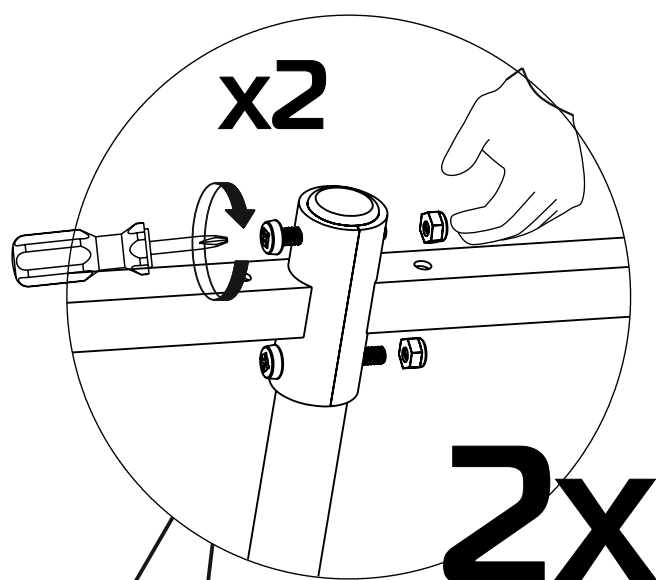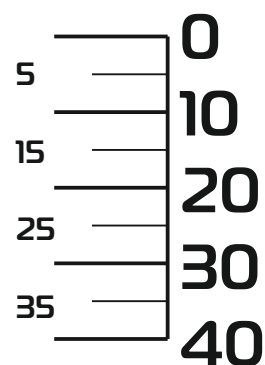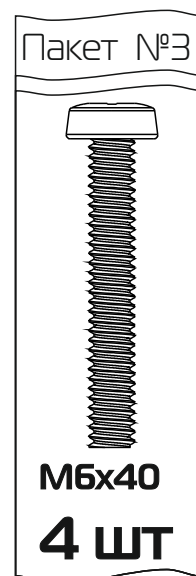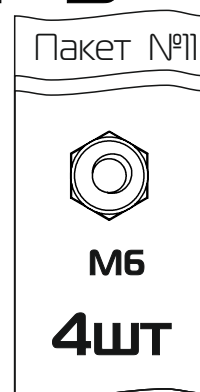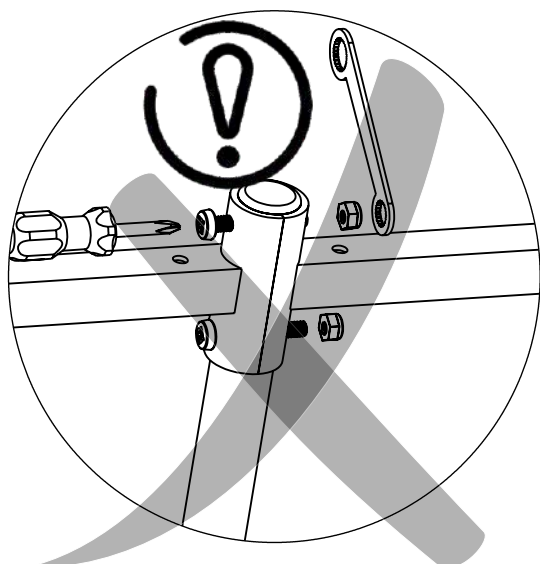





ШАГ 4

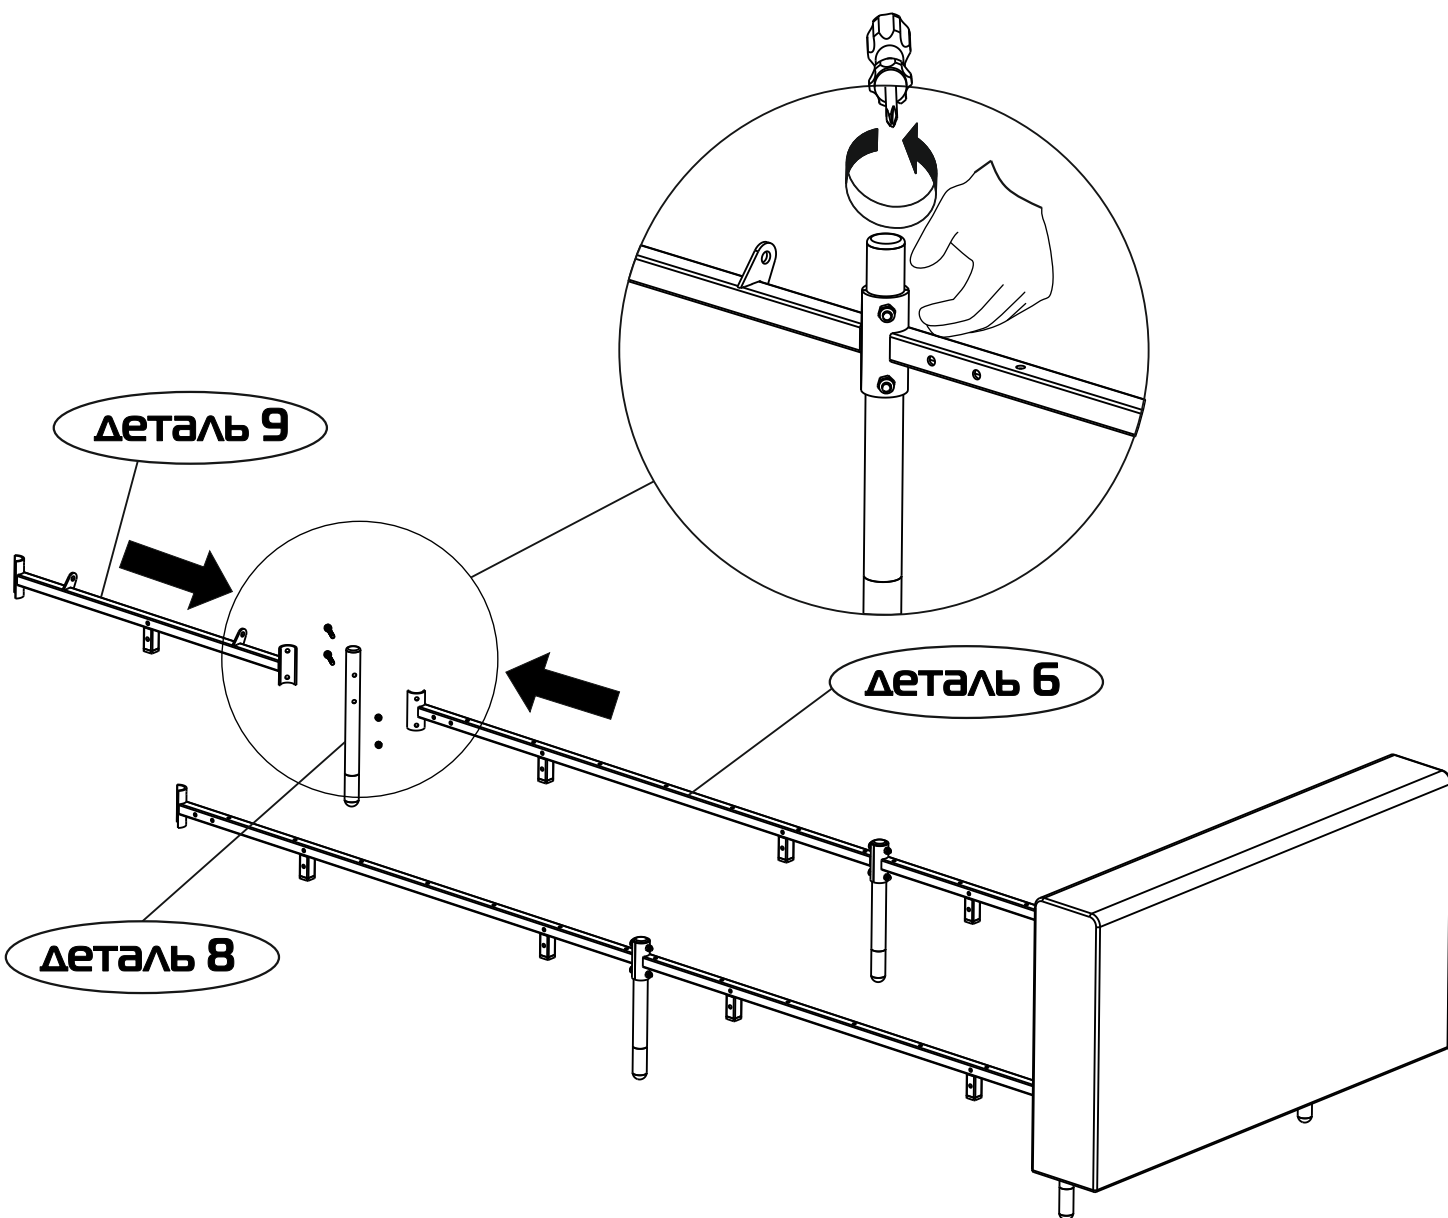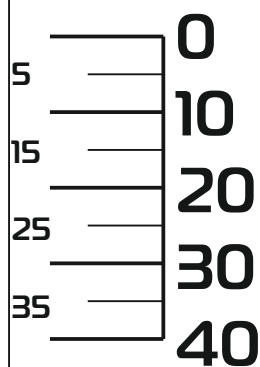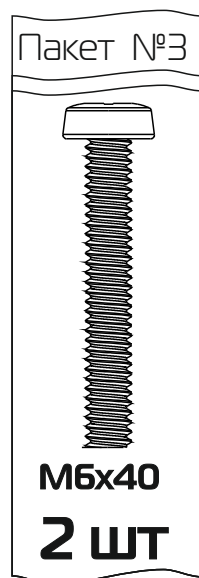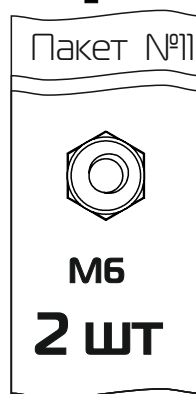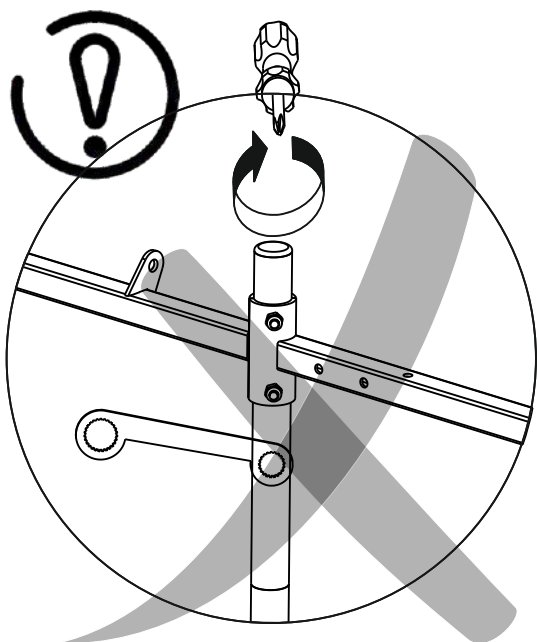

ШАГ 5


0
10
20
30
40

5
15
25
35

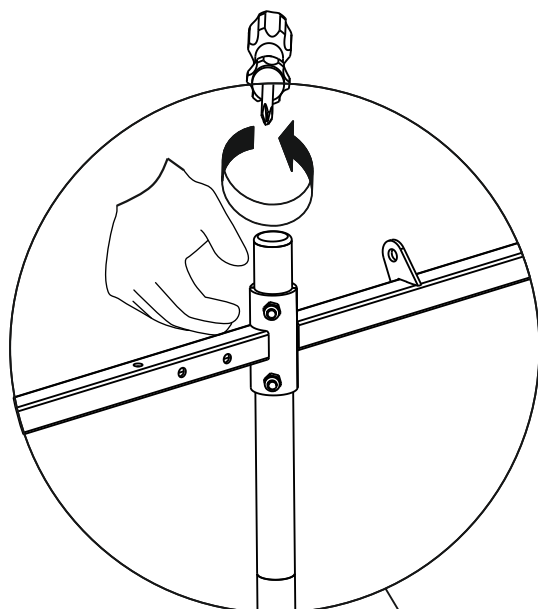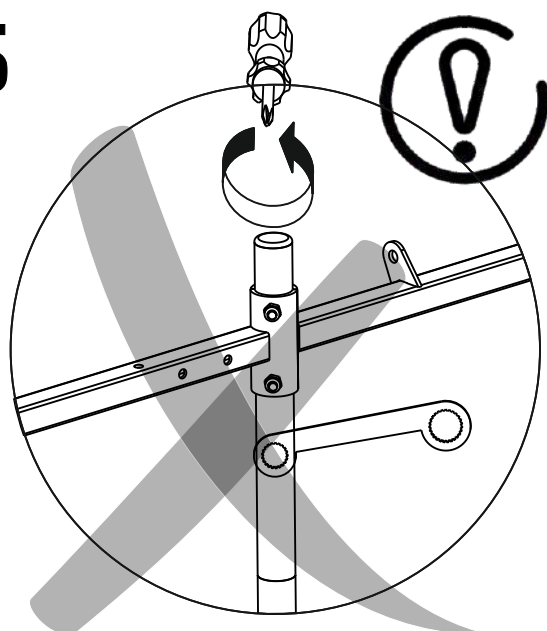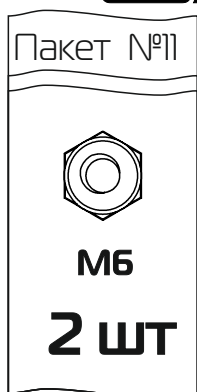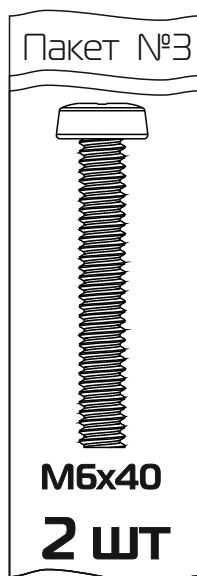

деталь 8

деталь 9





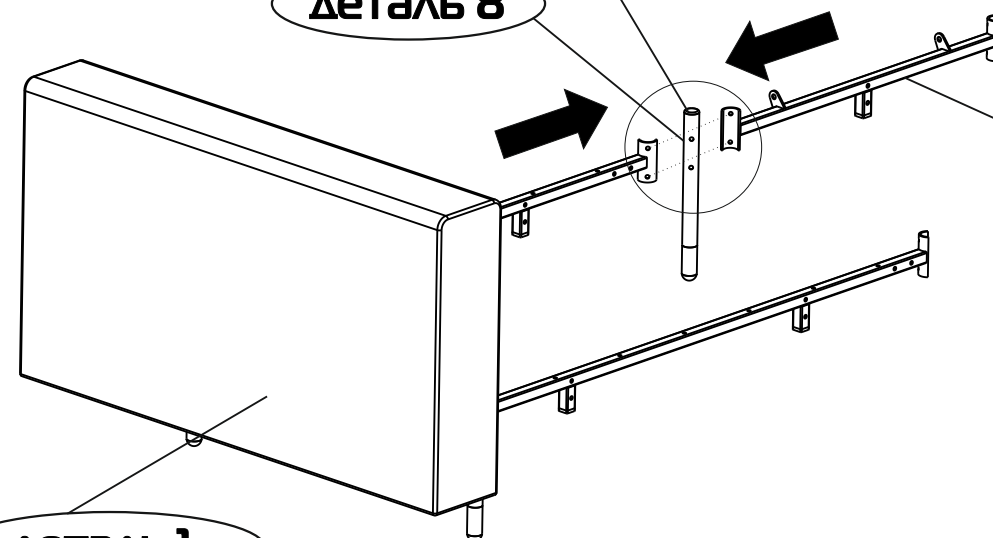


деталь 1

ШАГ 6



0
10
20
30
40

5
15
25
35

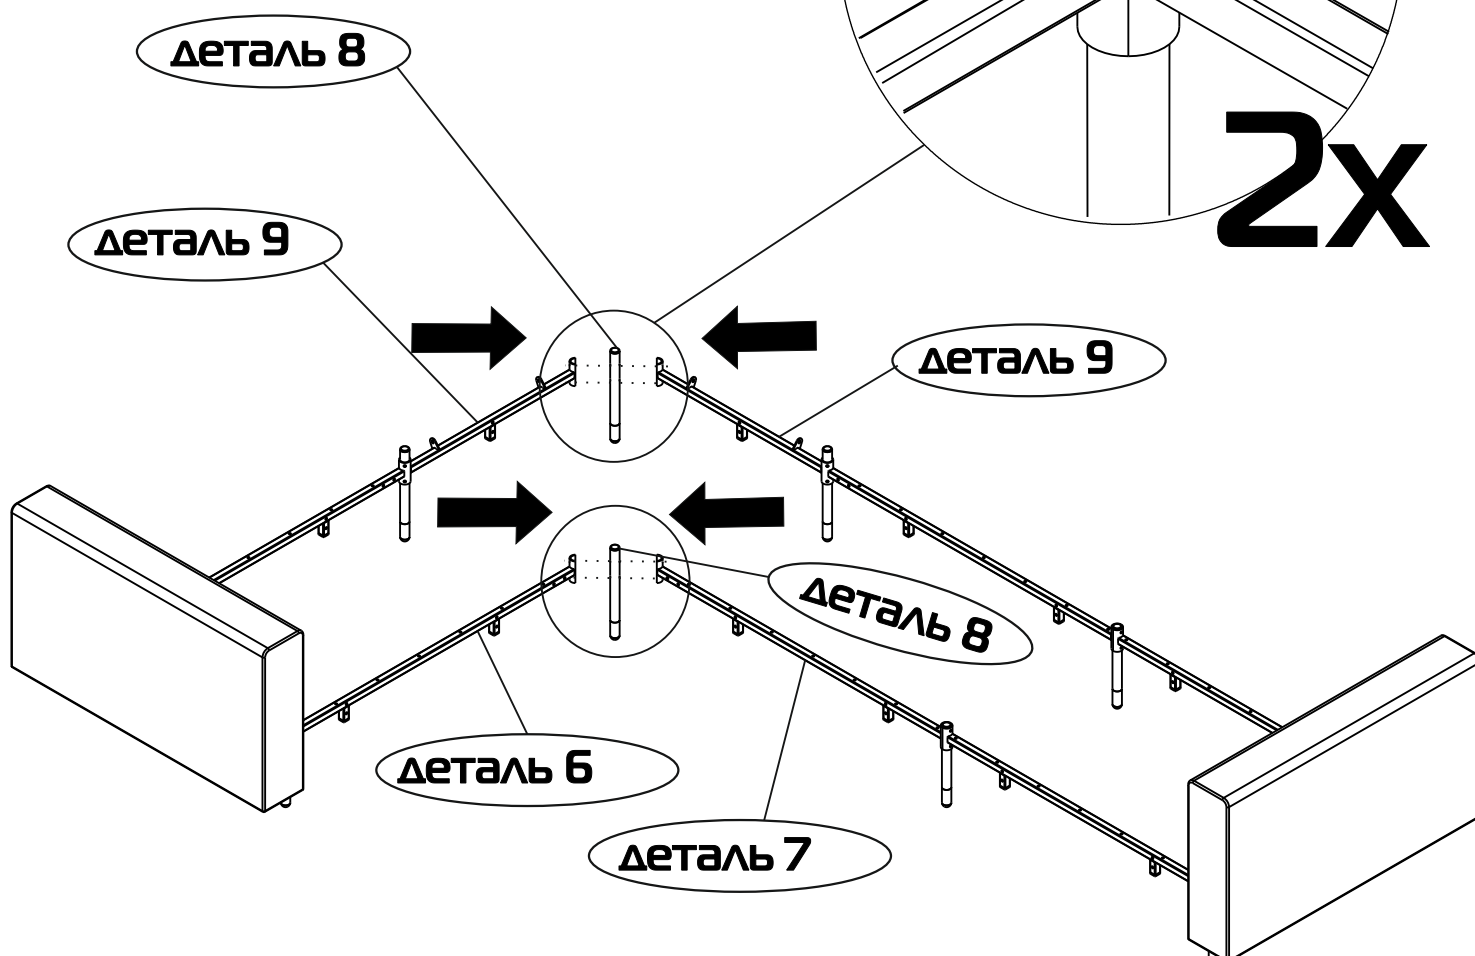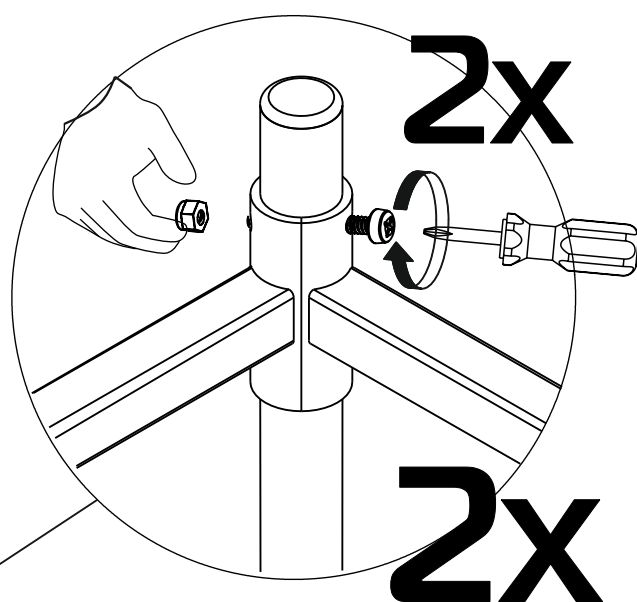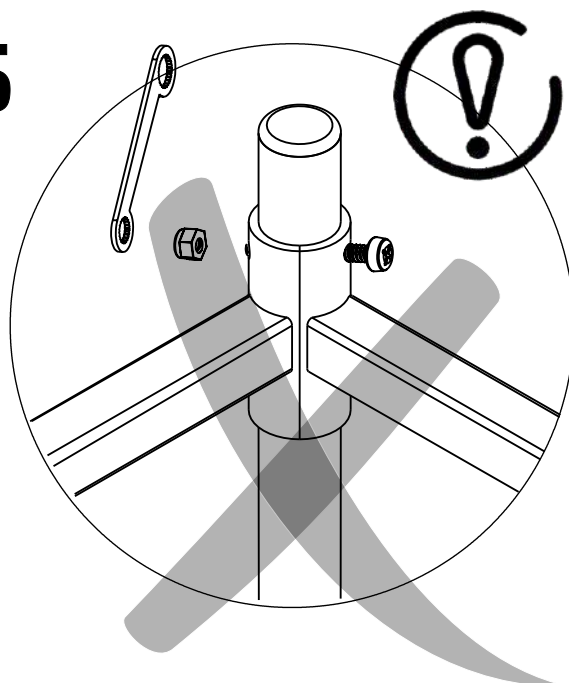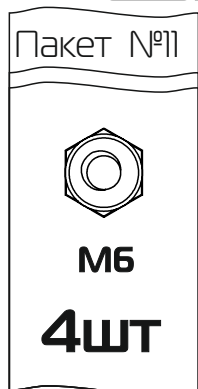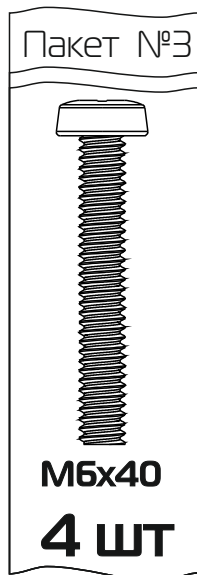


ШАГ 7



0
10
20

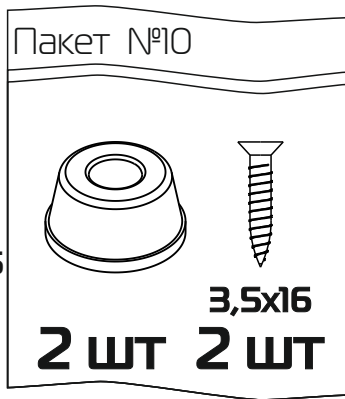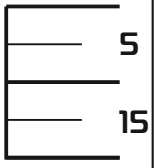

x2

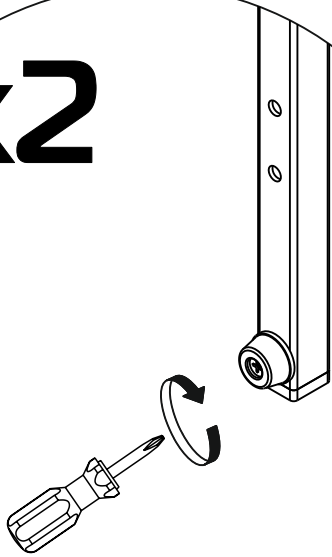


деталь 10

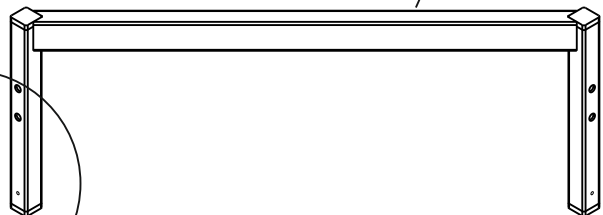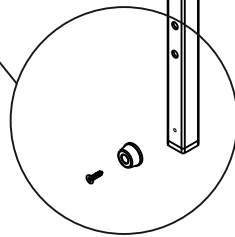

ШАГ 8

Пакет №4


Пакет №12





M6
8 шт

M6x45

8 шт

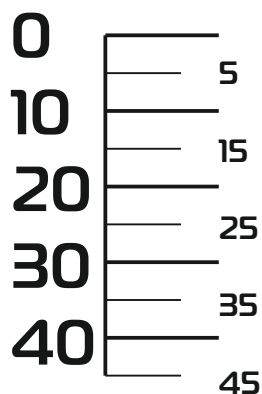


4x

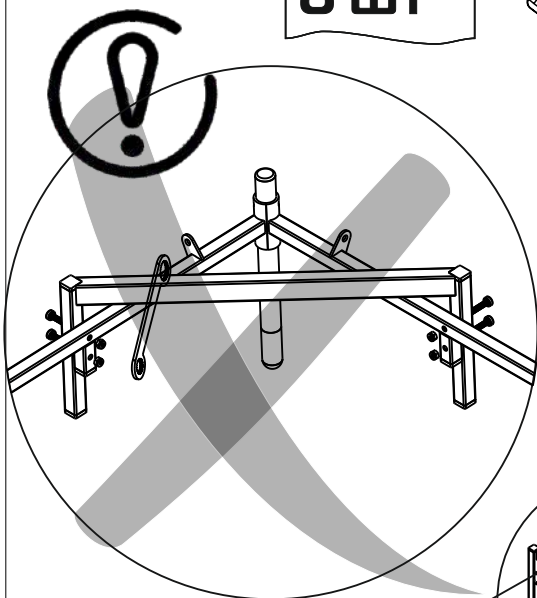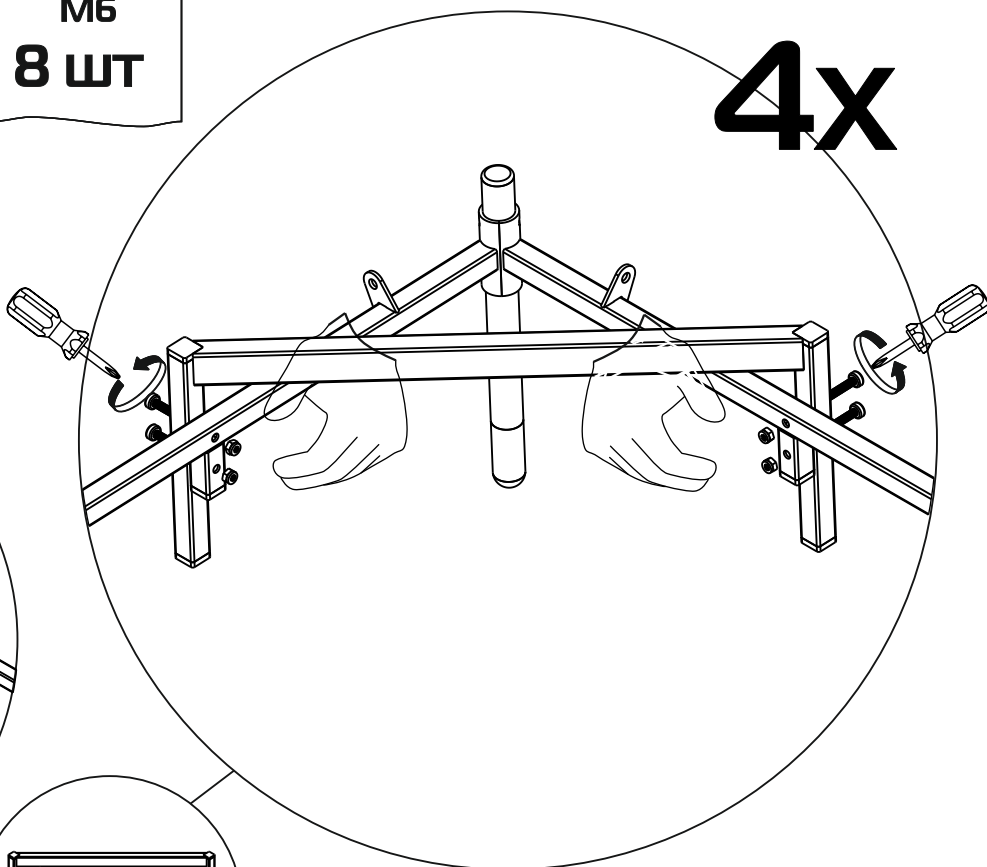






деталь 10

деталь 11

4x





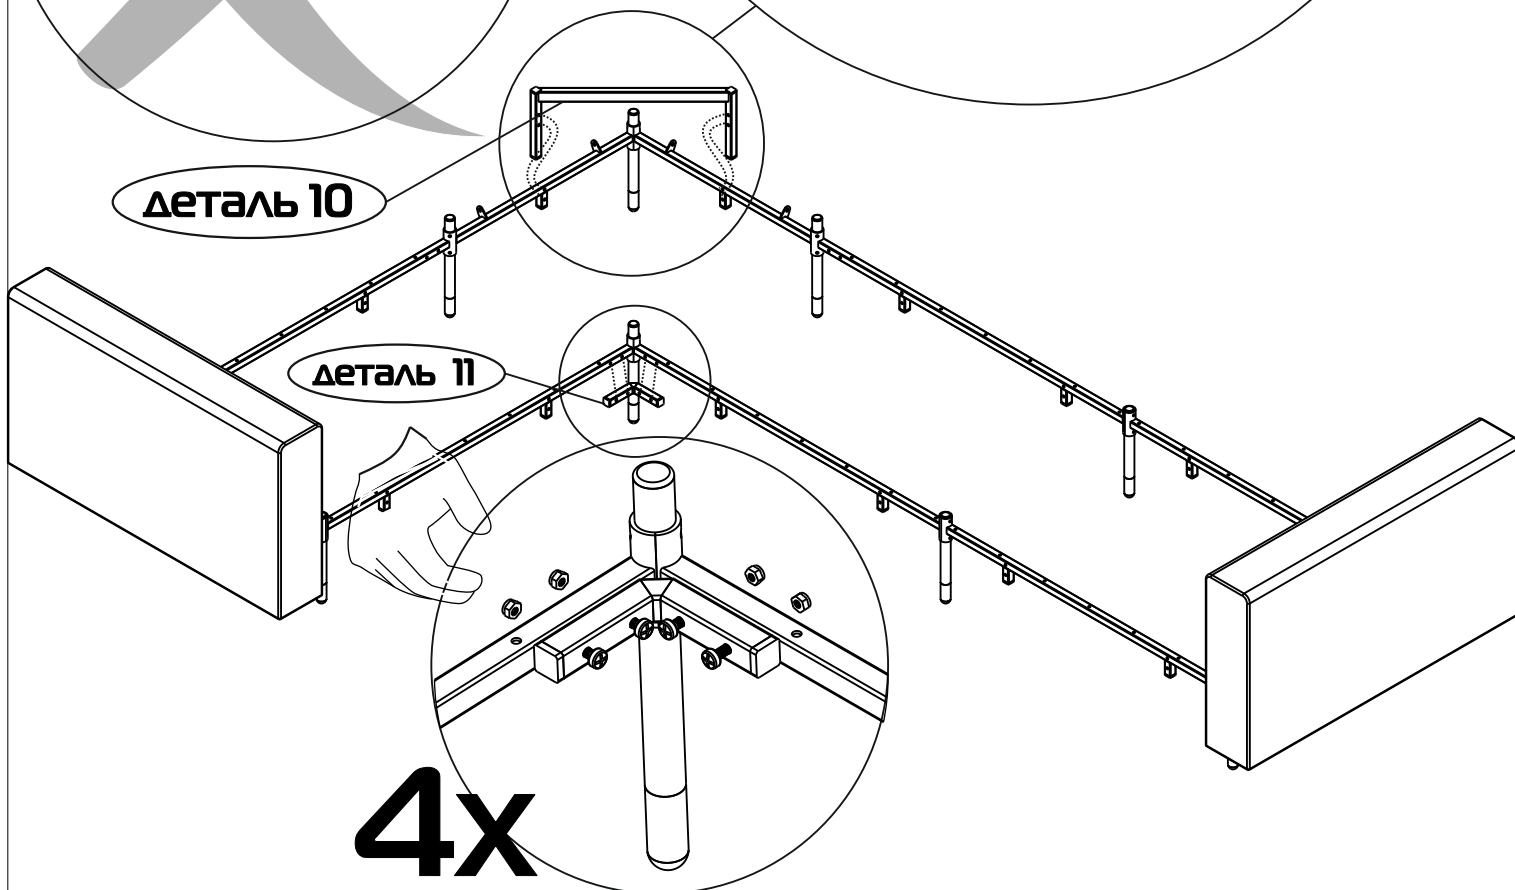


ШАГ 9

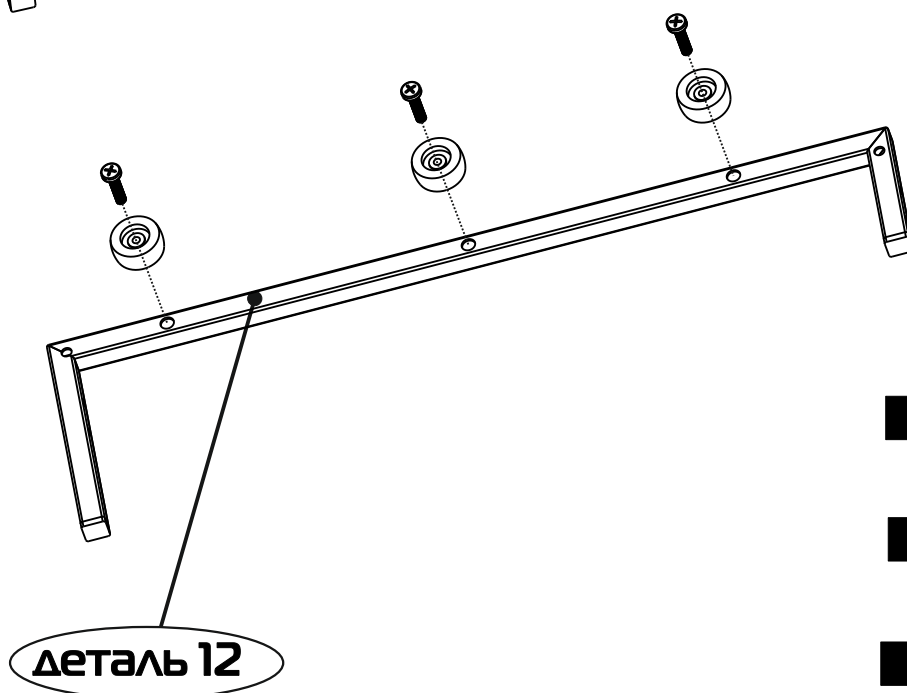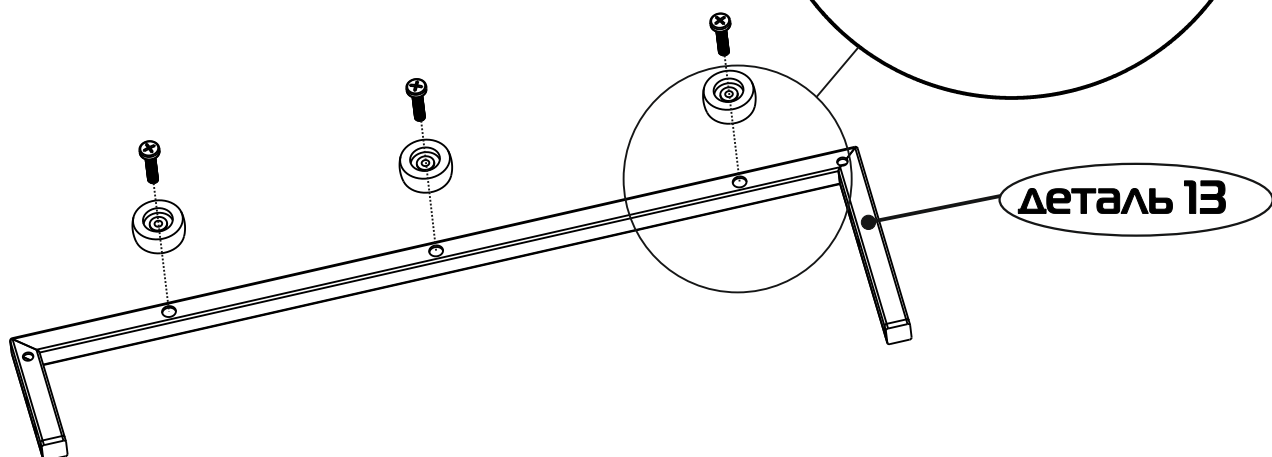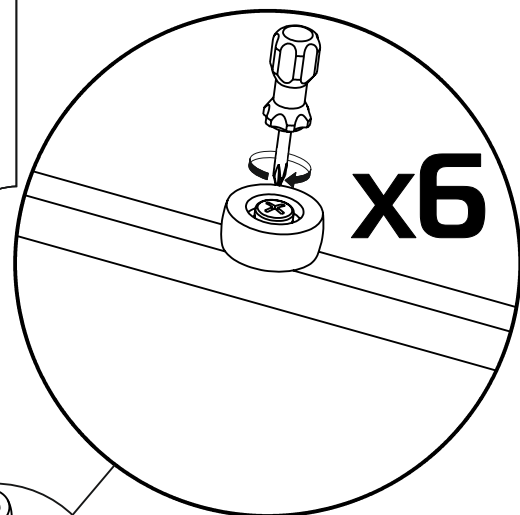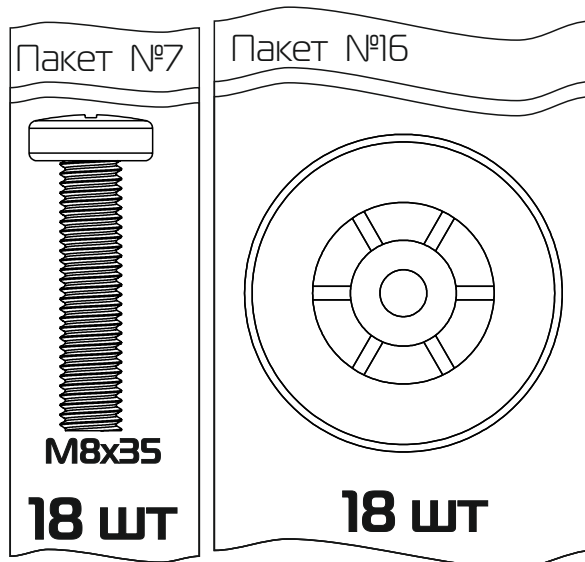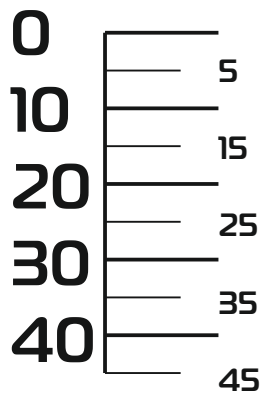

3x


ШАГ 10

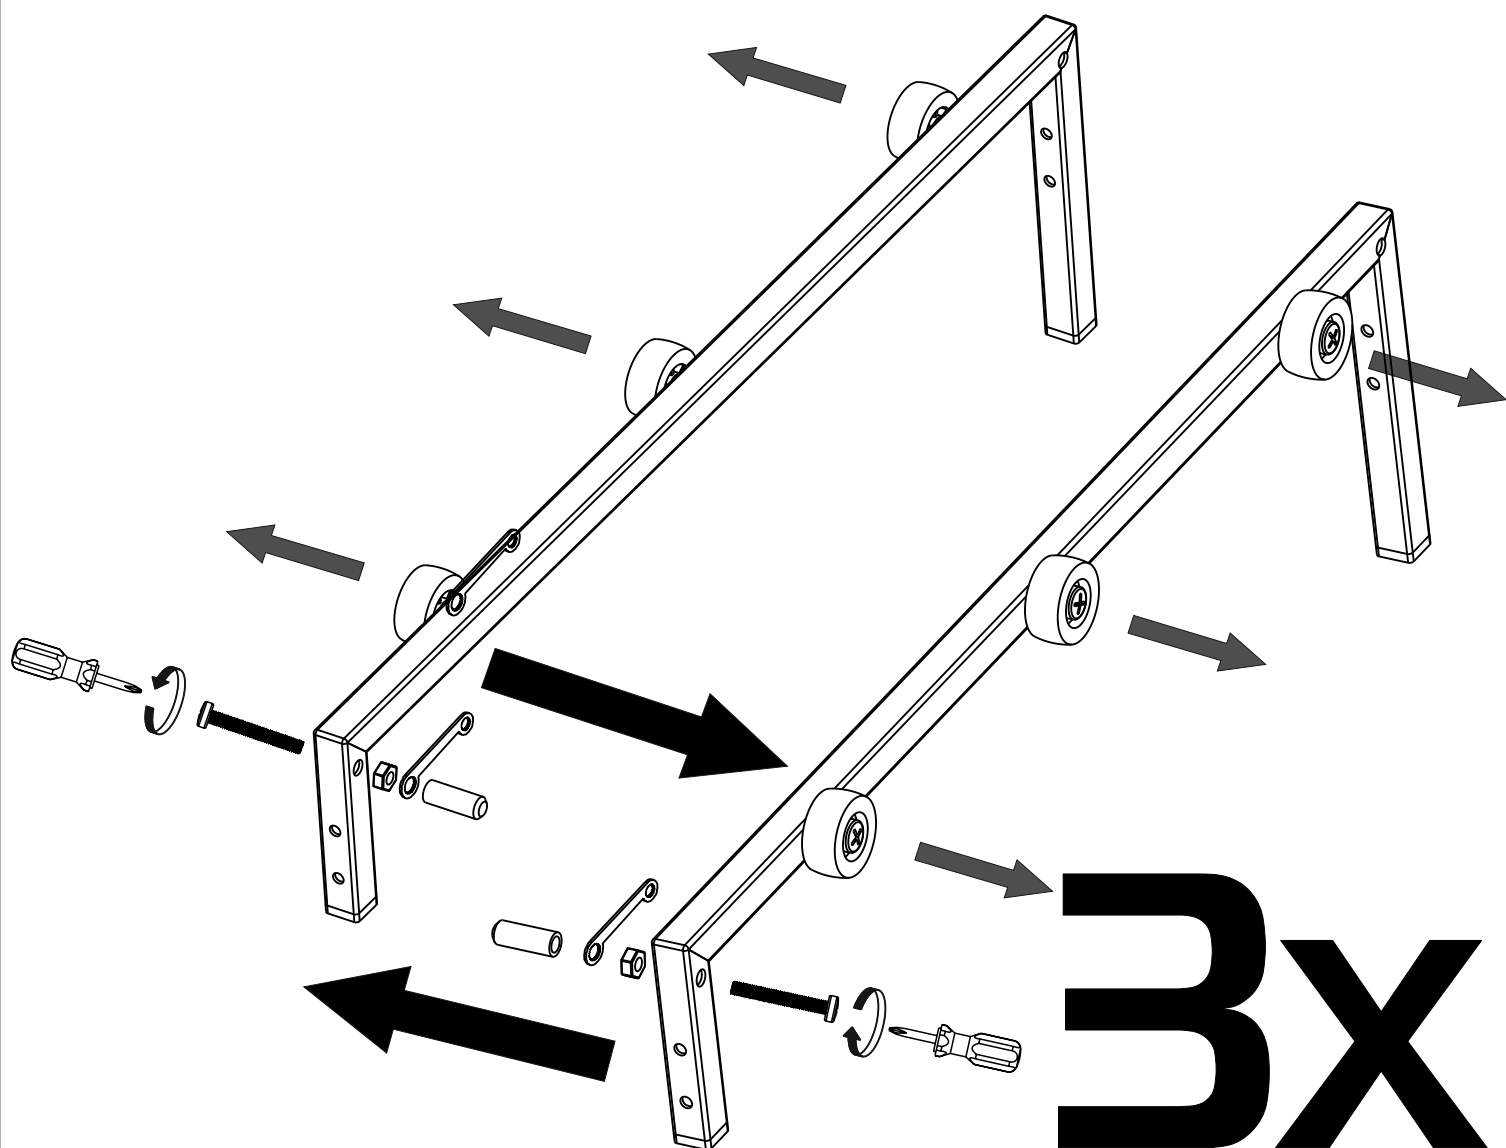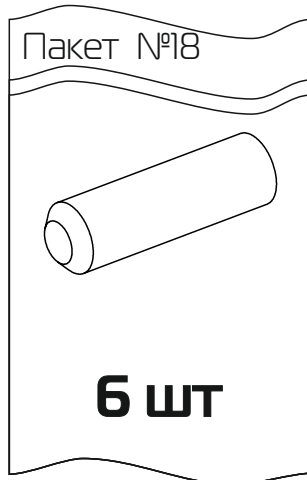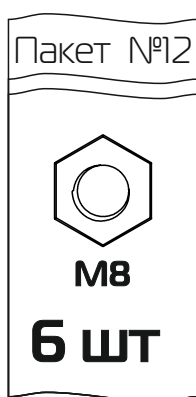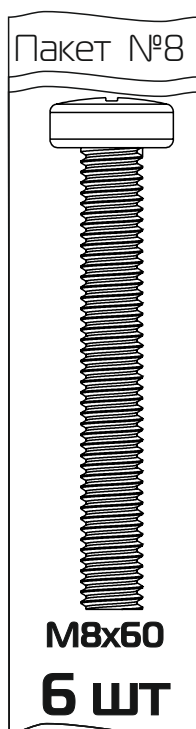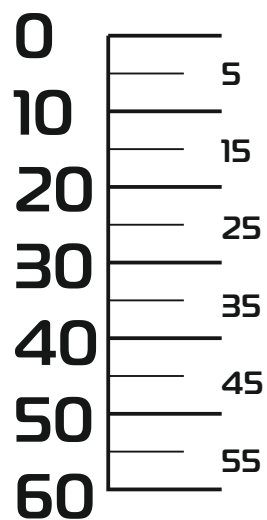

ШАГ 11

0
10
20

5
15

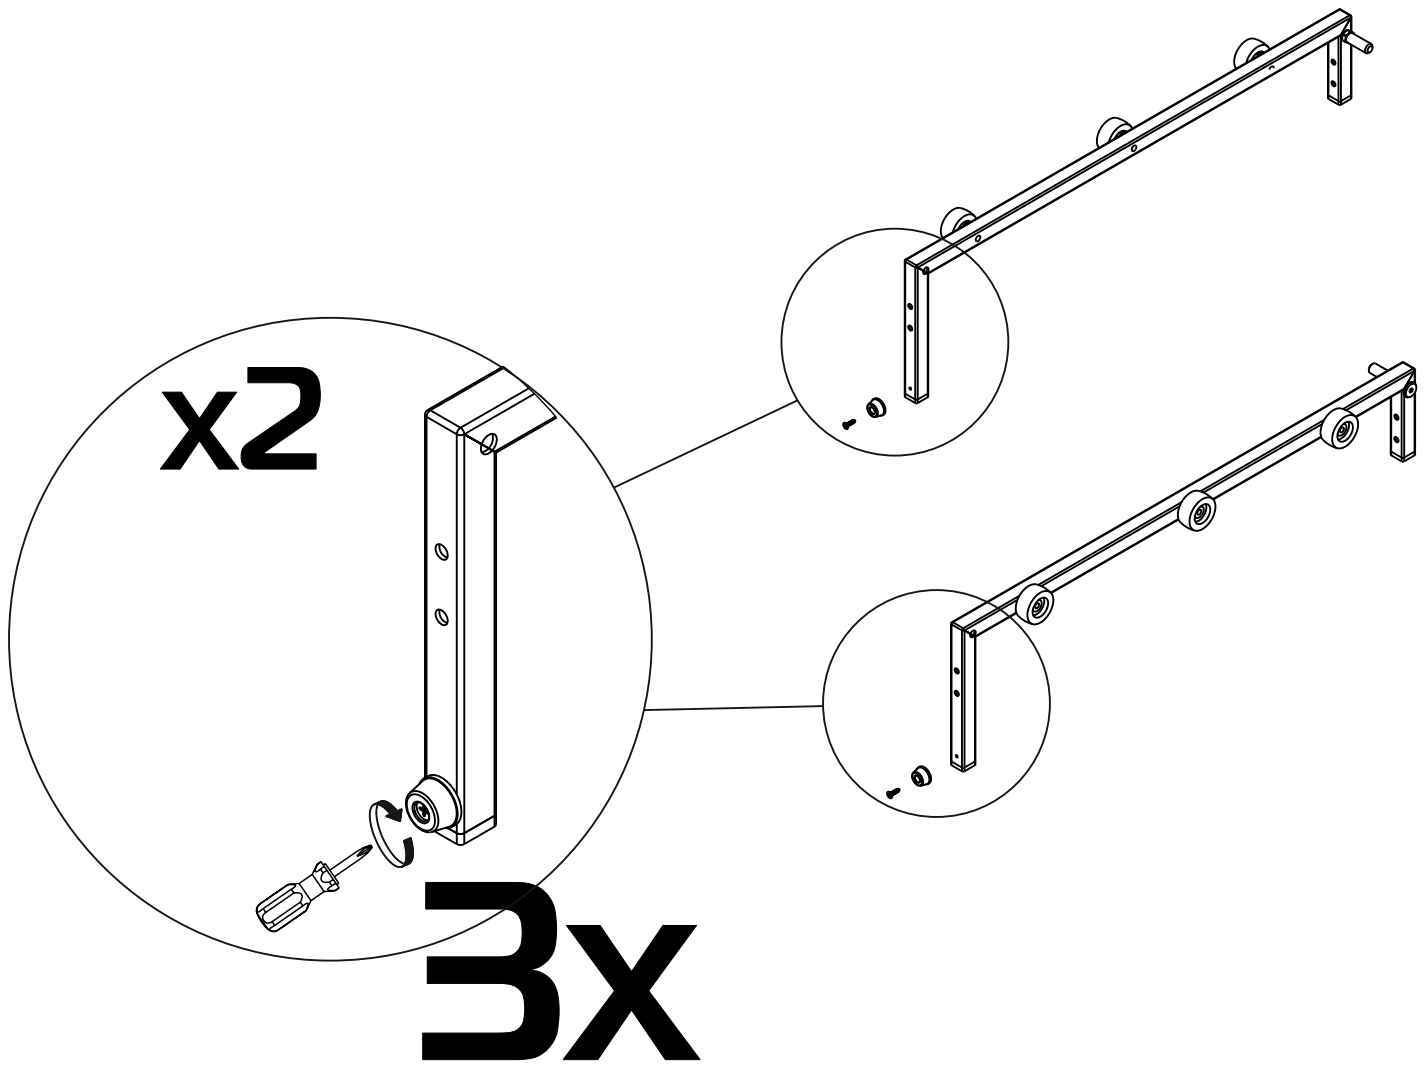

ШАГ 12

деталь 1

деталь 18

Сиденье

Спинка

деталь 18


деталь 1

Спинка

Сиденье

ШАГ 13


Пакет №12



M6


24 шт

Пакет №4




M6x45



24 шт

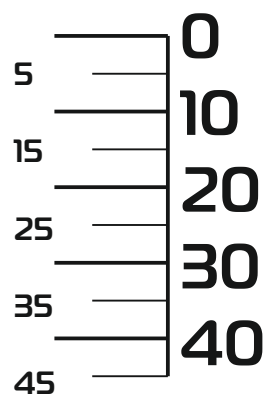


3x

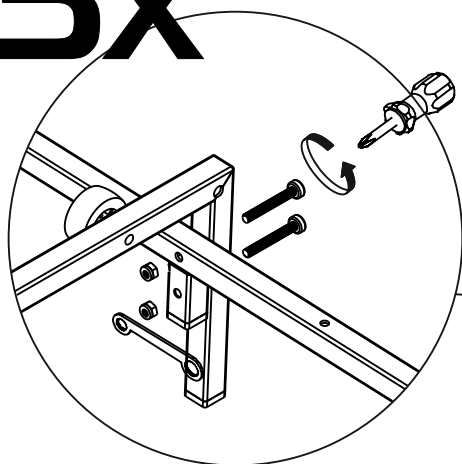


3x

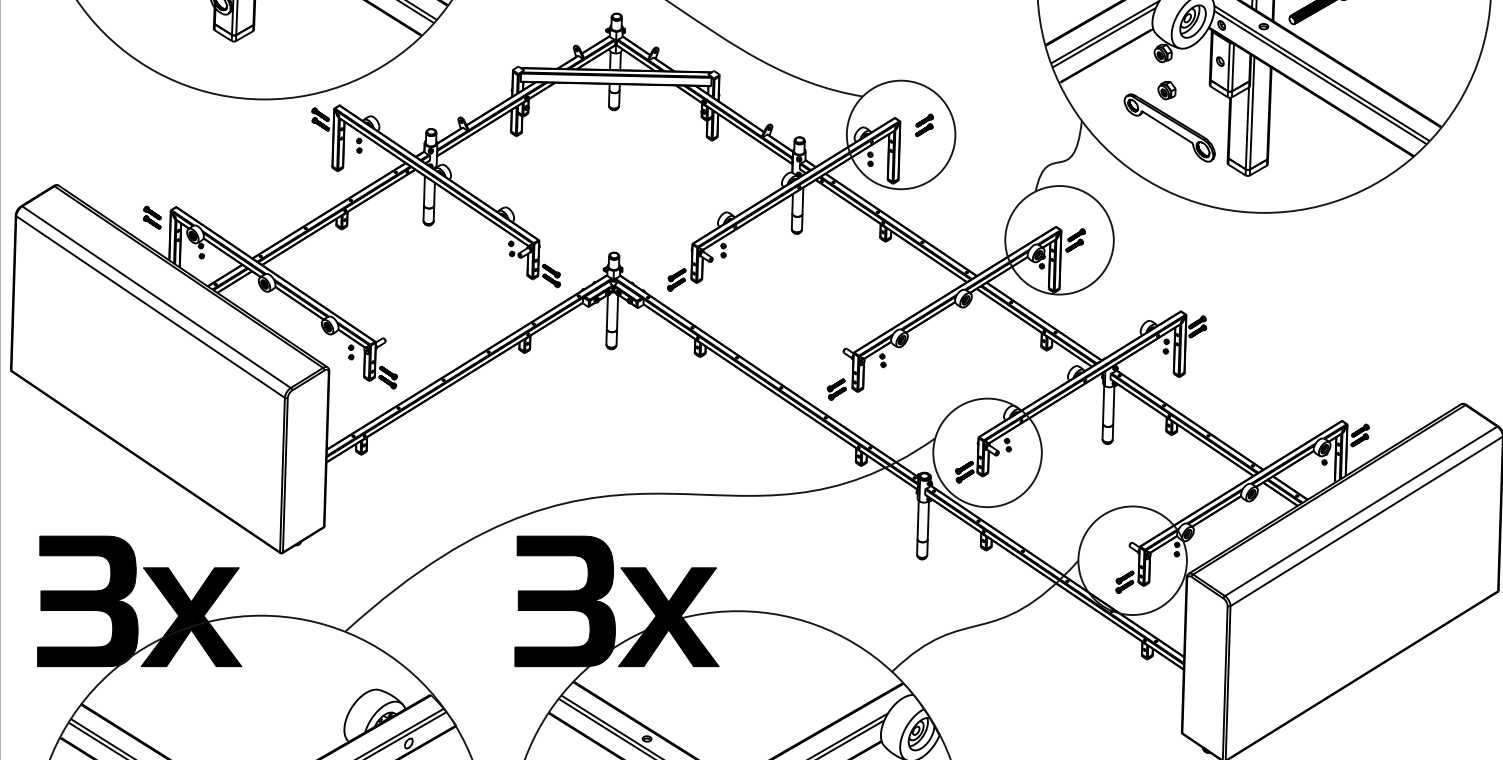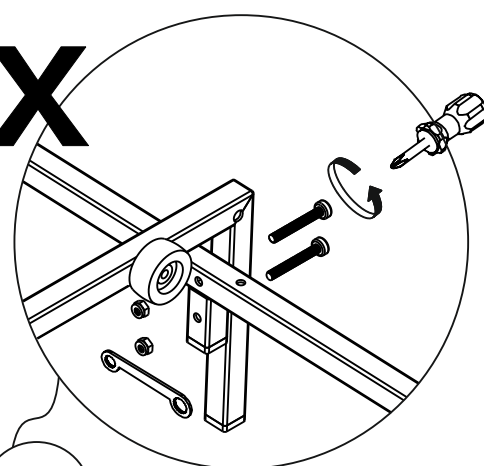



3x

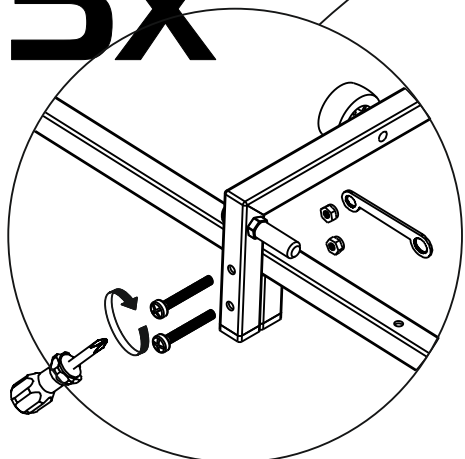

3x

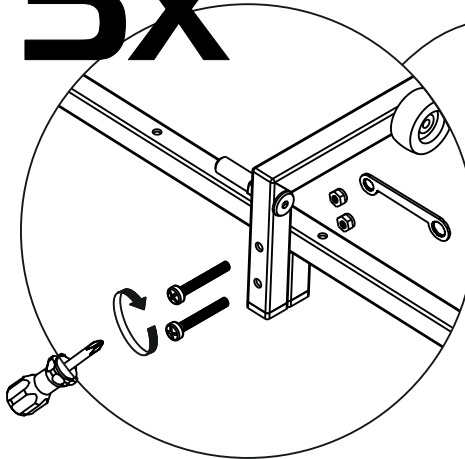




ШАГ 14

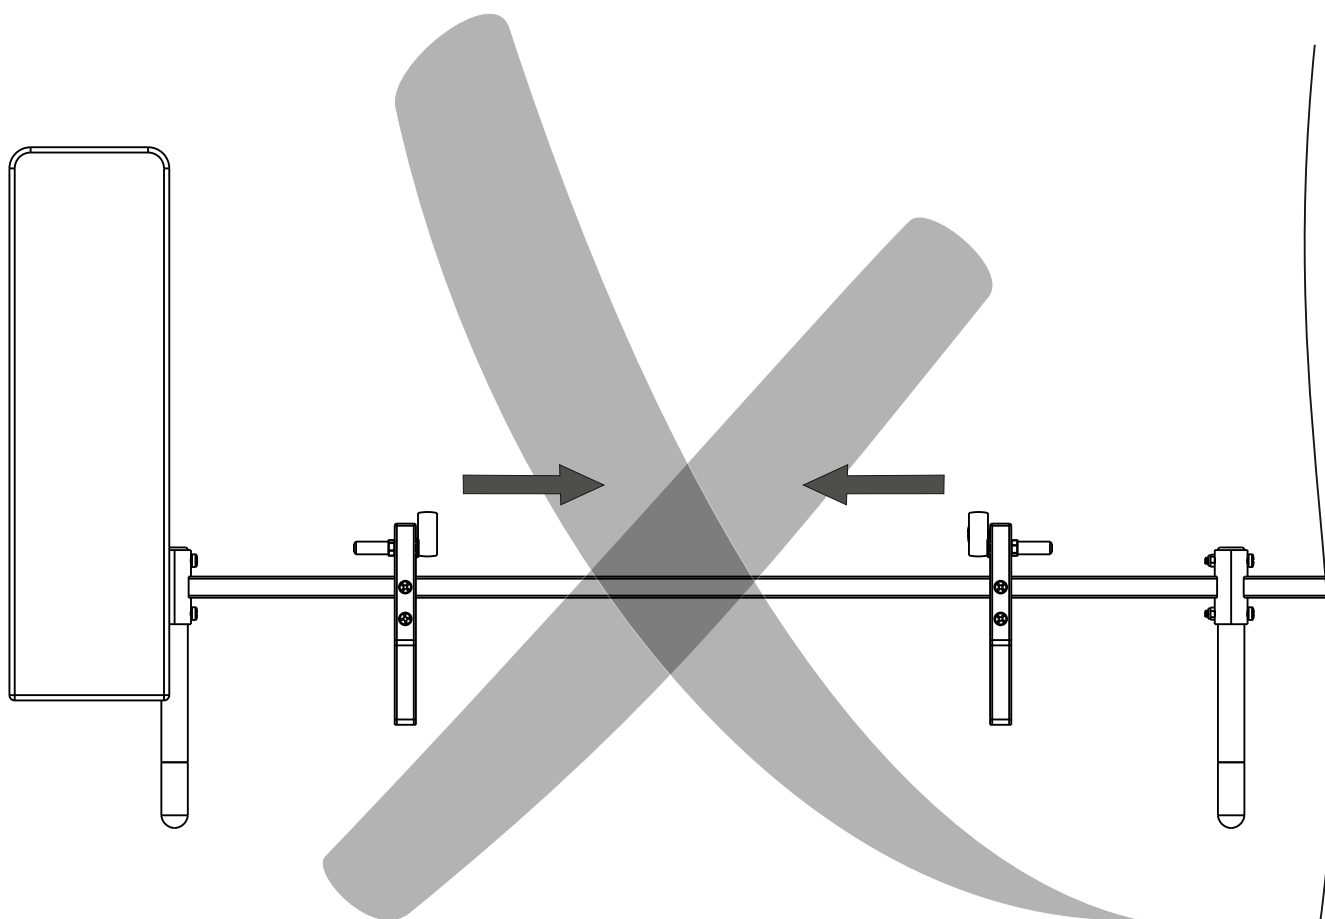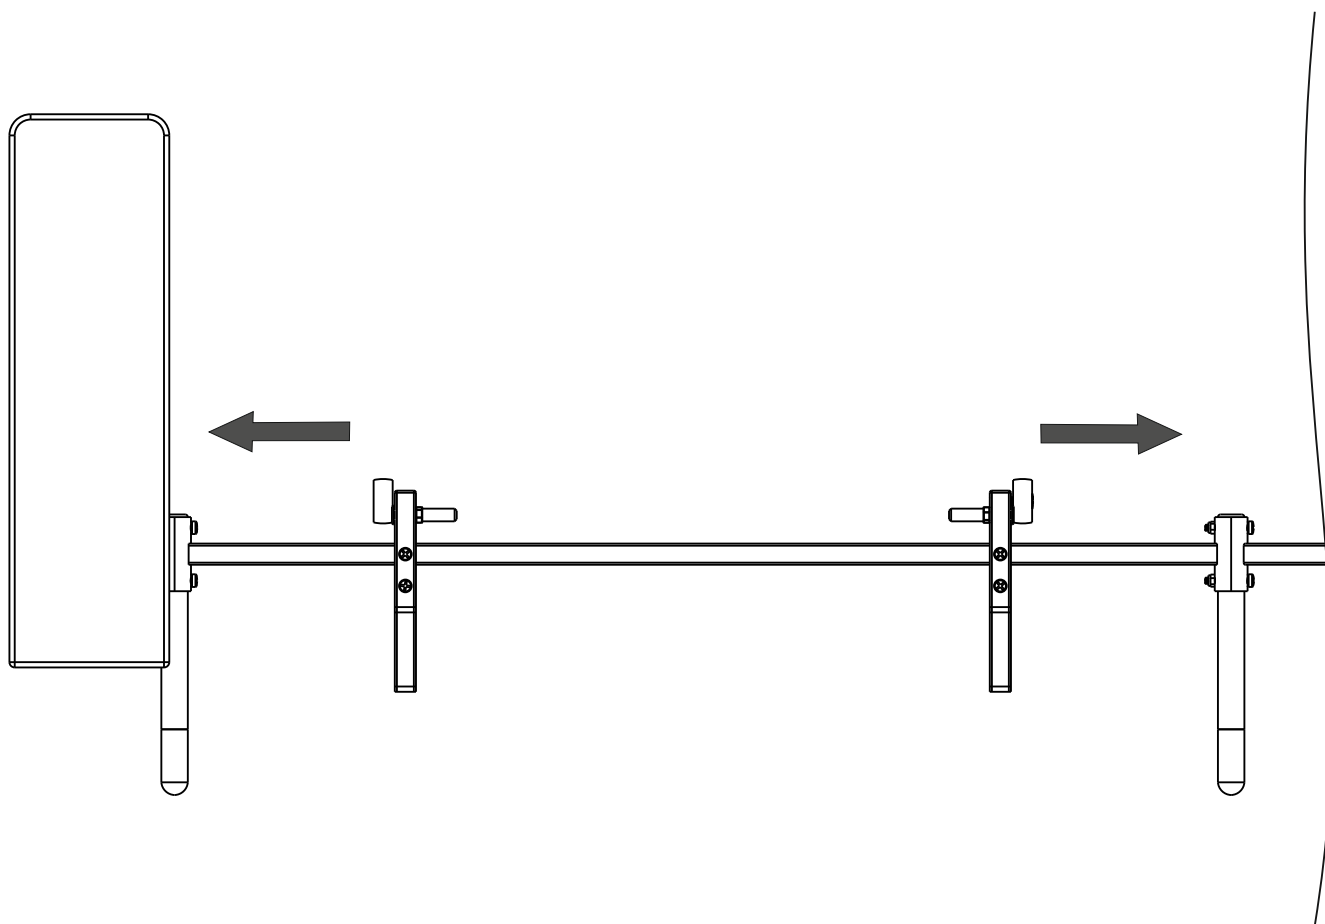


ШАГ 15



**Протянуть
с усилием!**

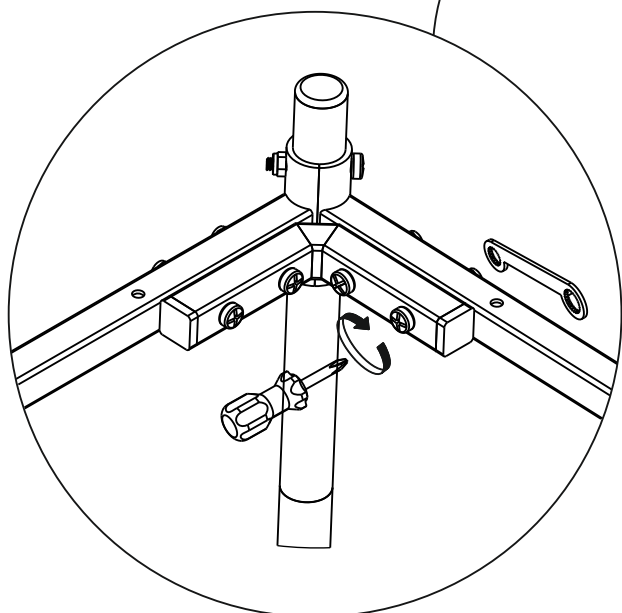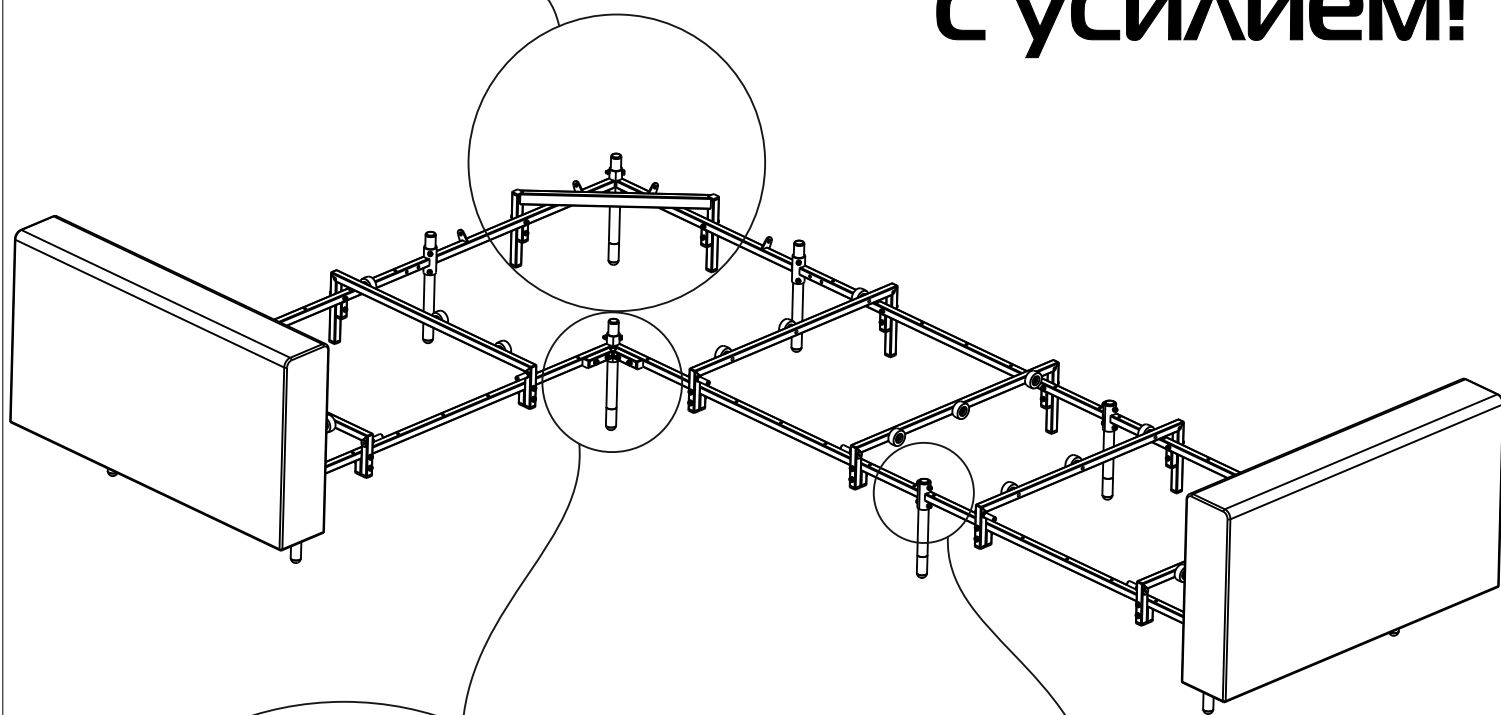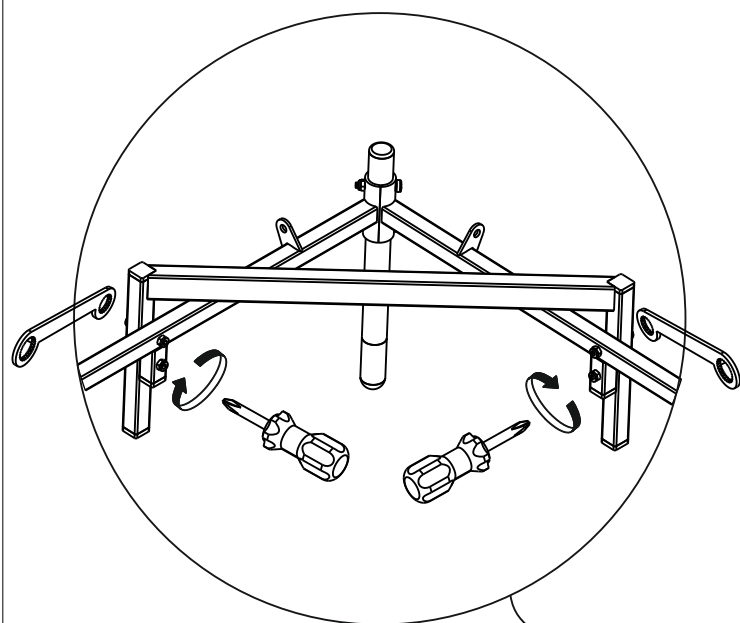


6x

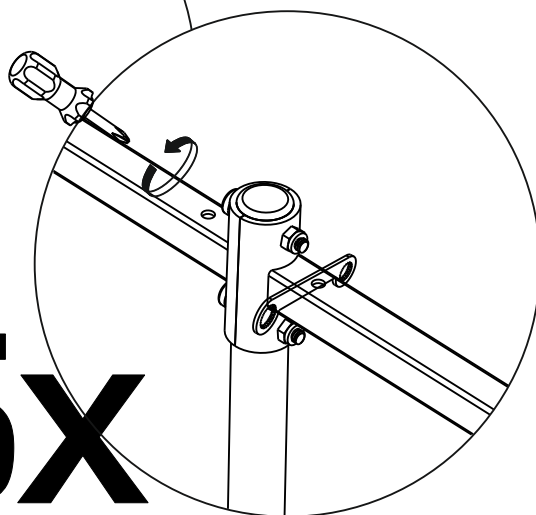

ШАГ 16


белый (окрашено)

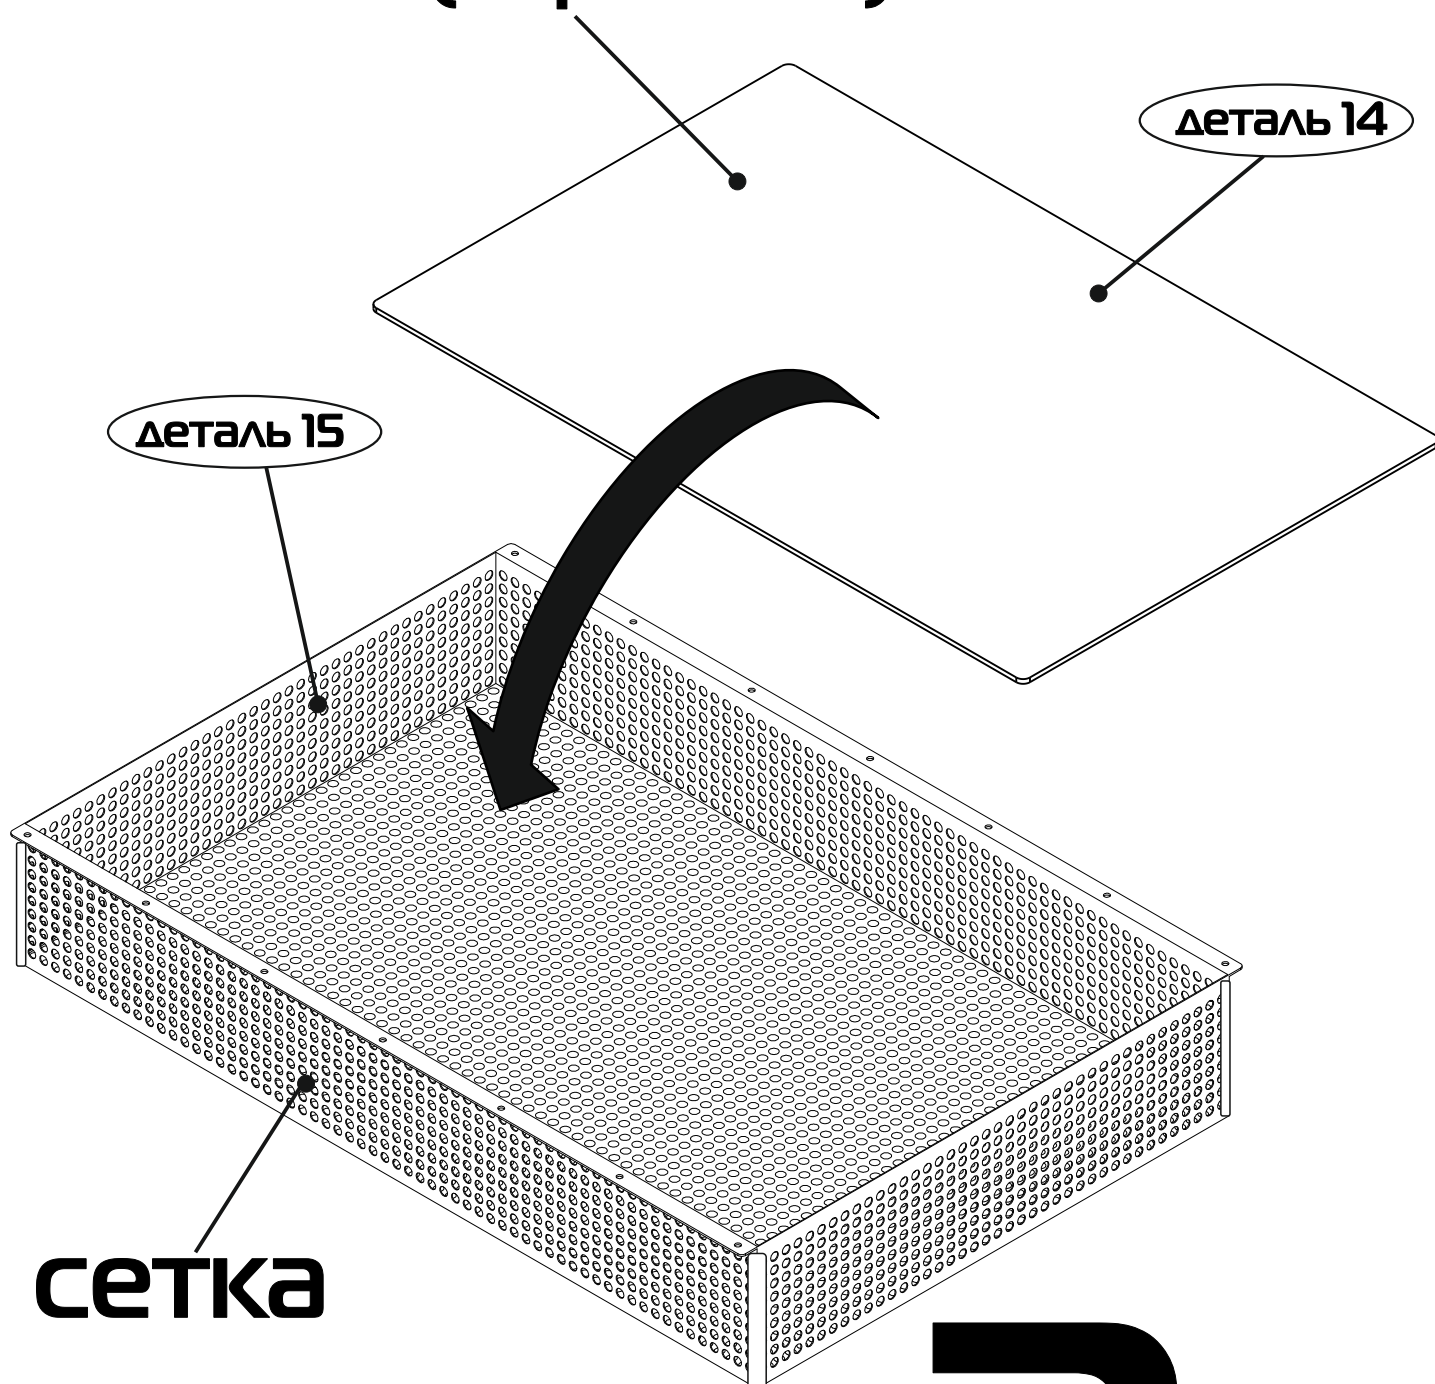


сетка

3x

ШАГ 17


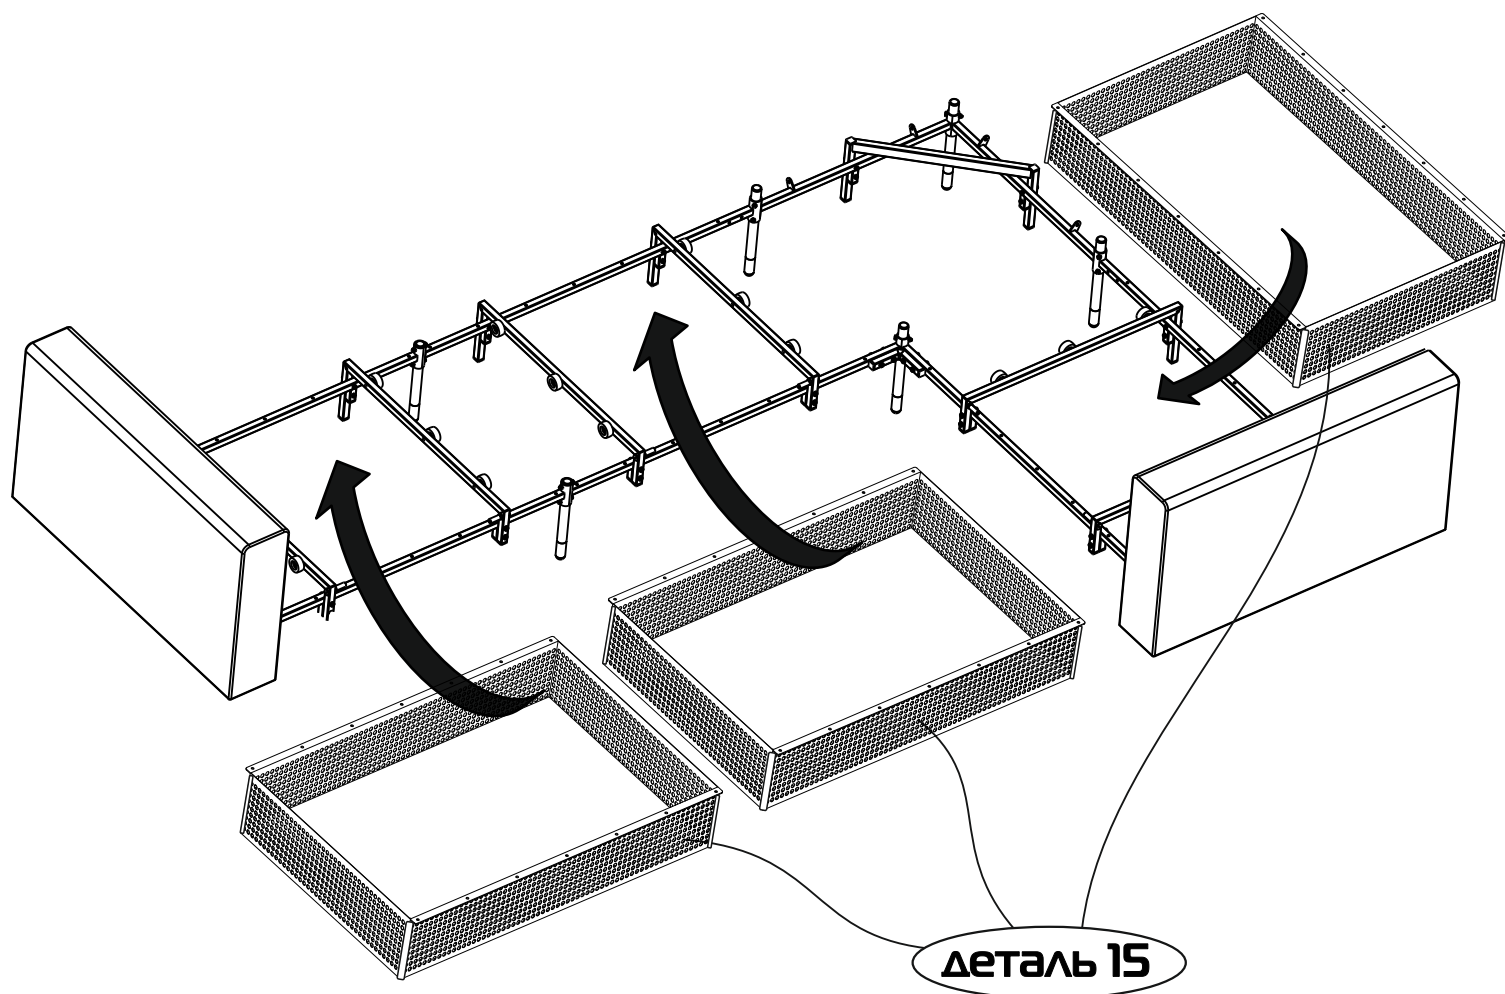


ШАГ 18

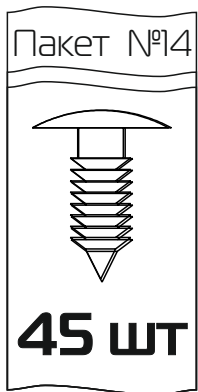


0
10
20

5
15


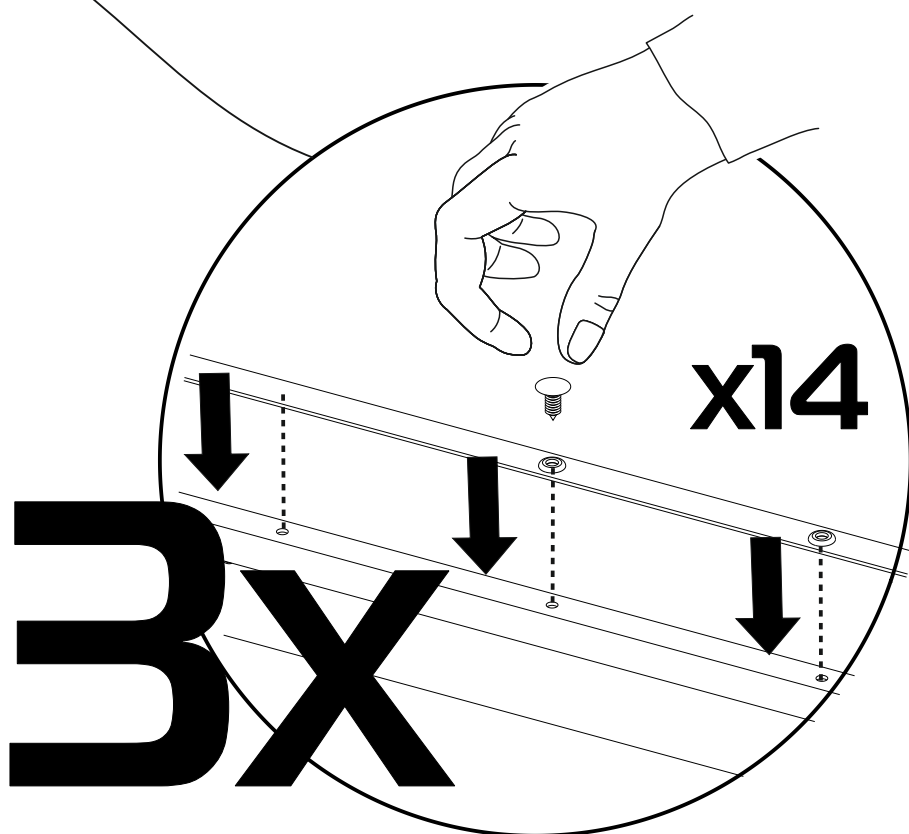
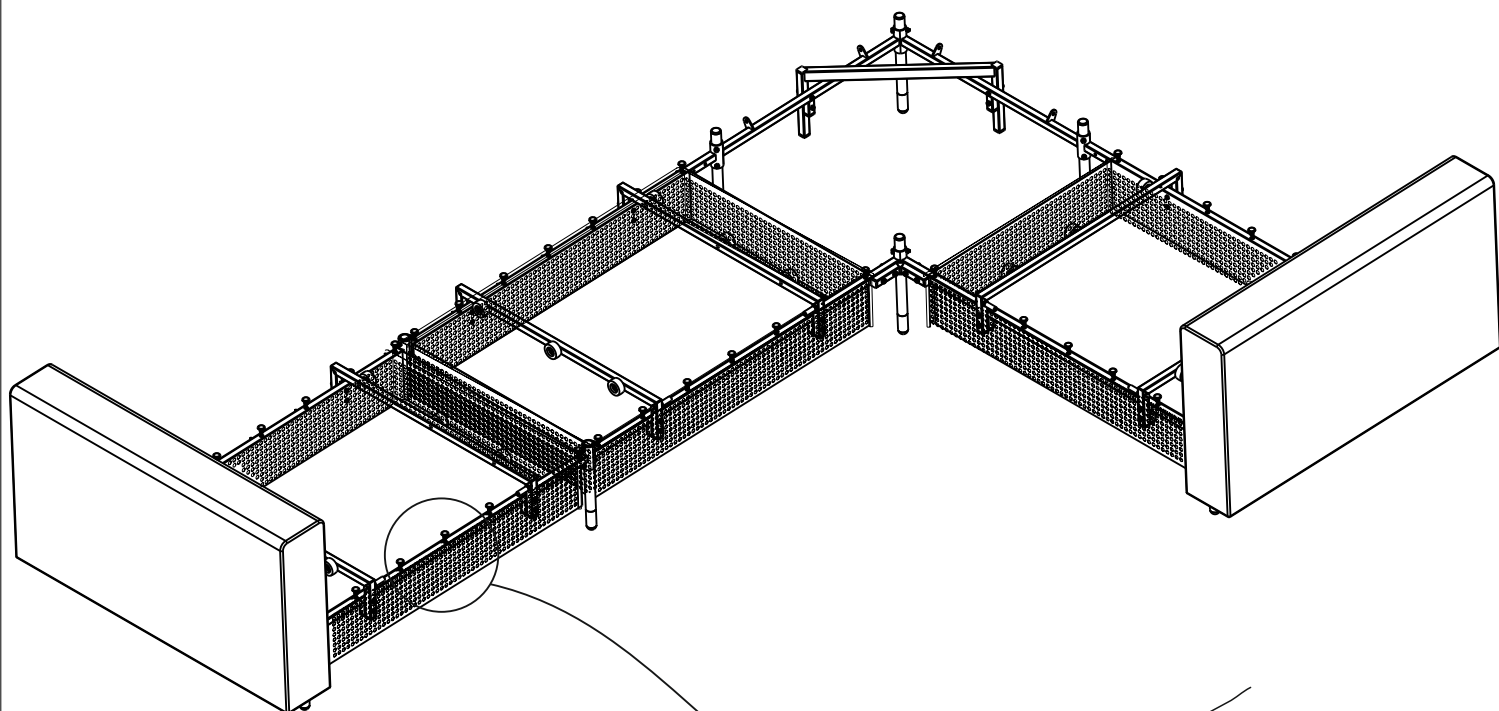


ШАГ 19

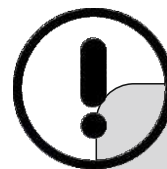


0
10
20


5
15

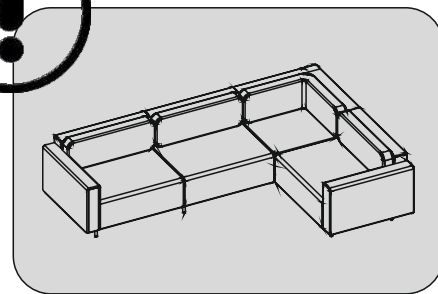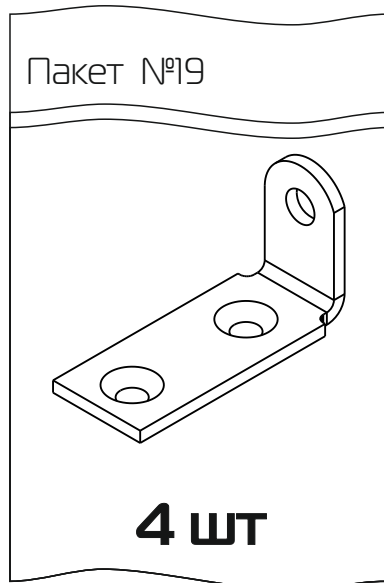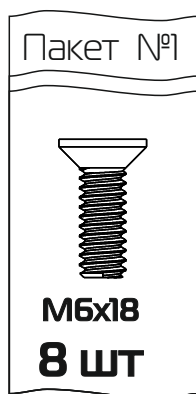


деталь 16

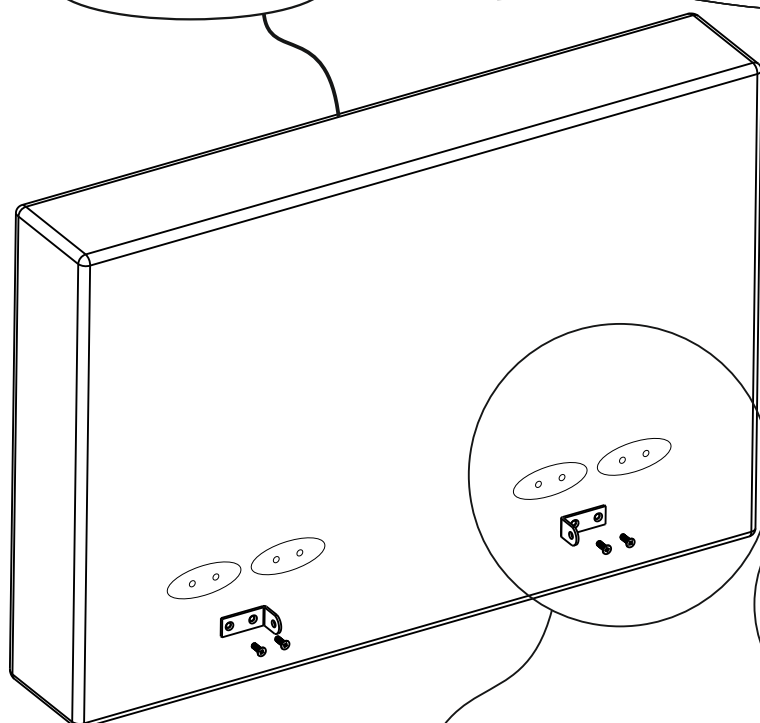


деталь 17

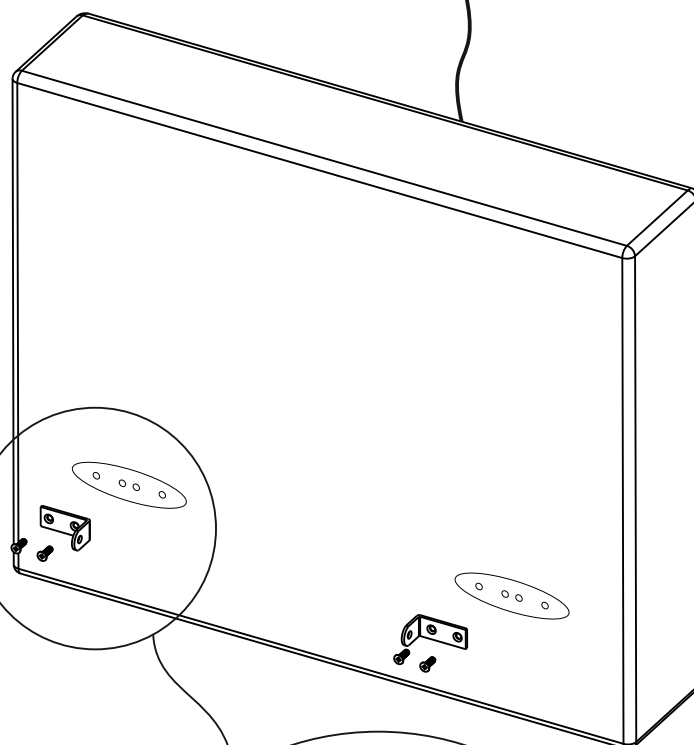

x2

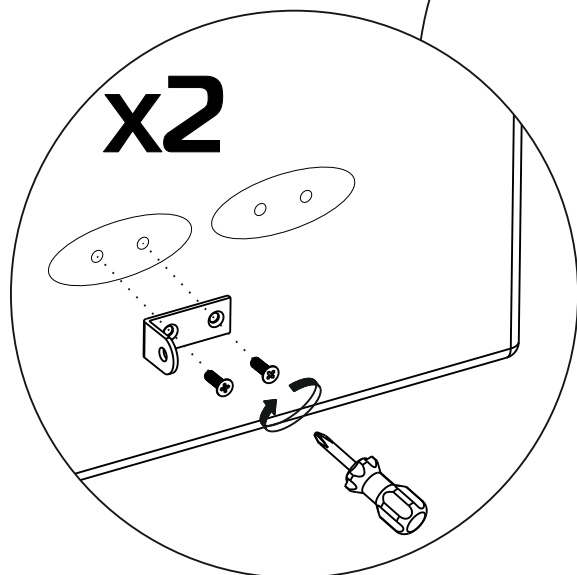




x2

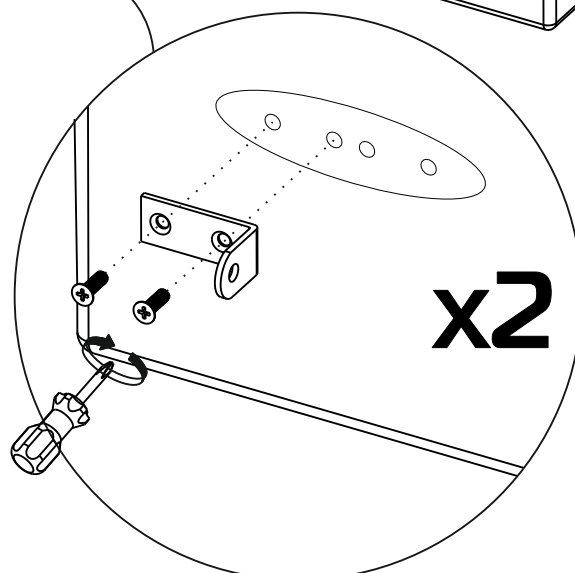

ШАГ 20




0
10
20

5
15


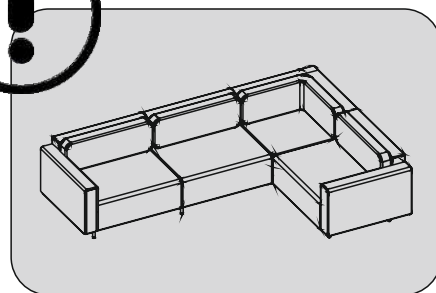
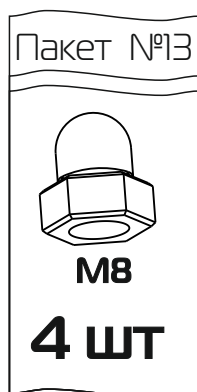
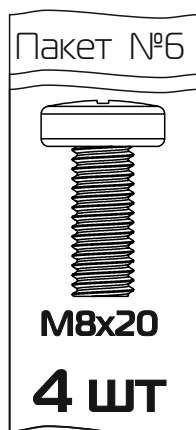


деталь 16


деталь 17

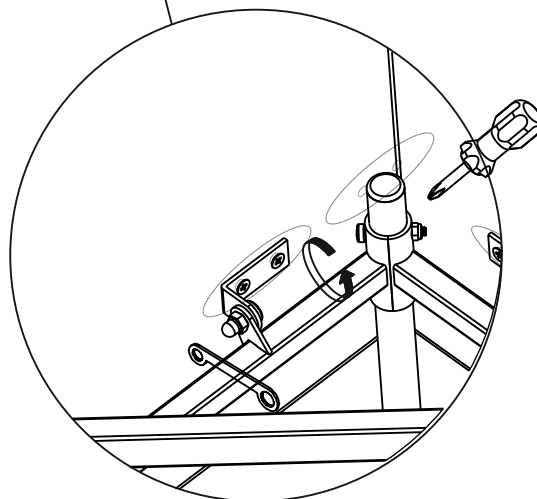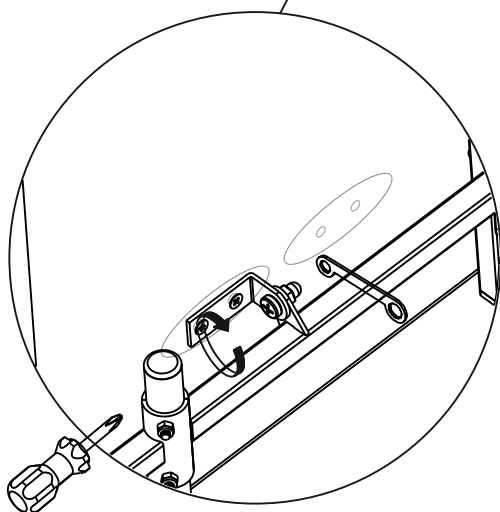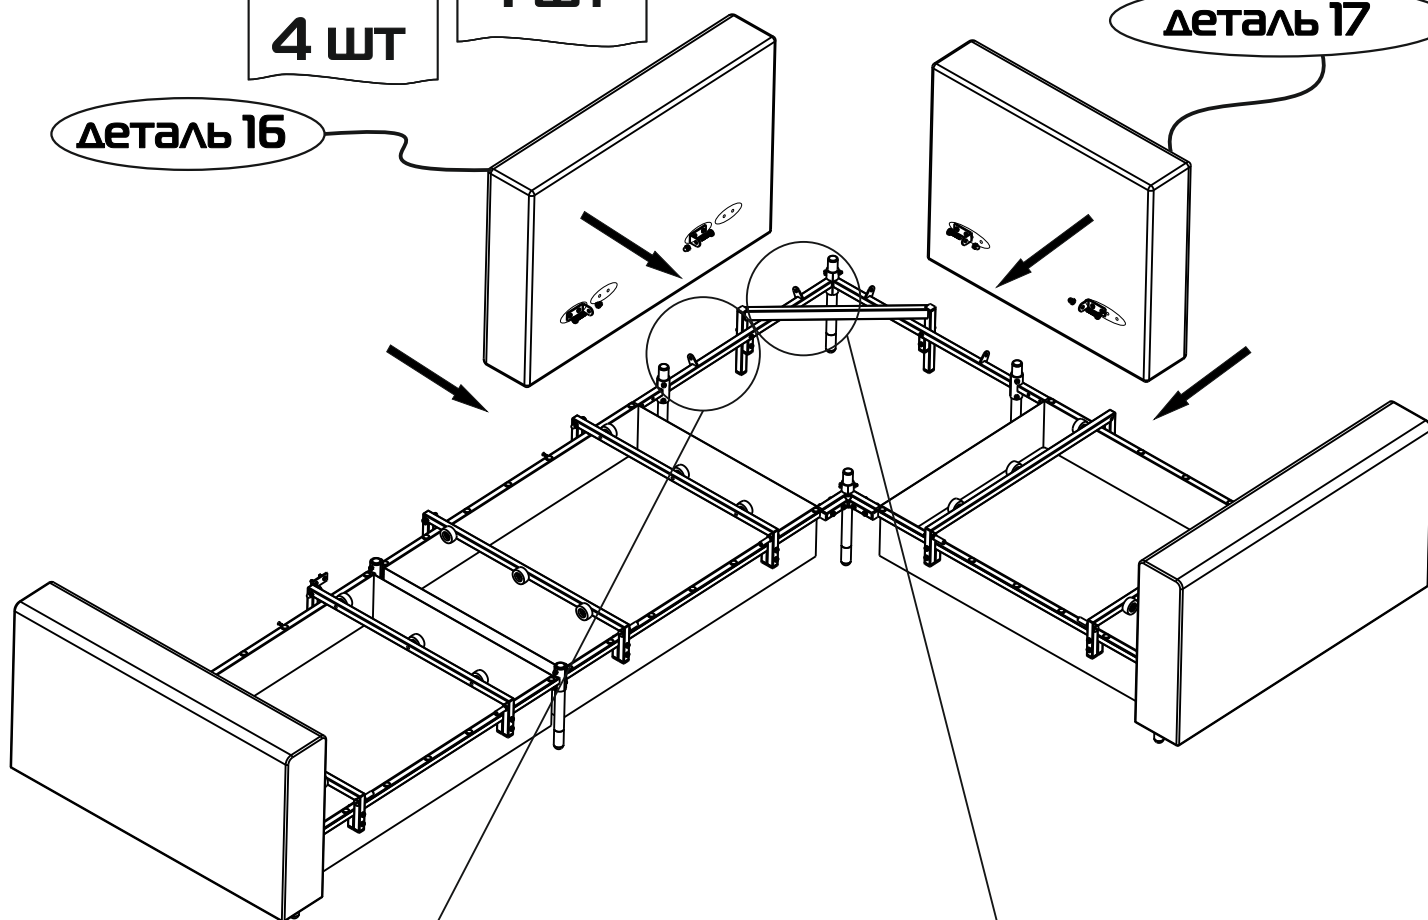


ШАГ 19

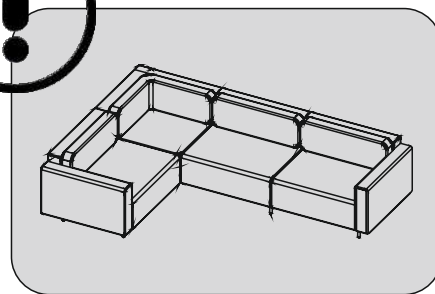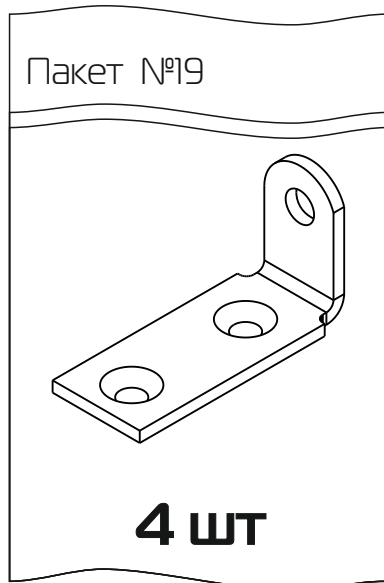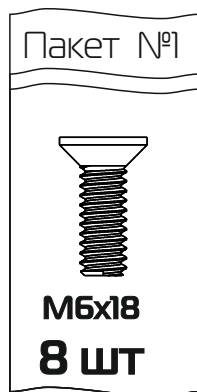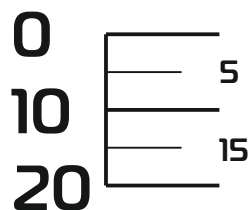


деталь 16

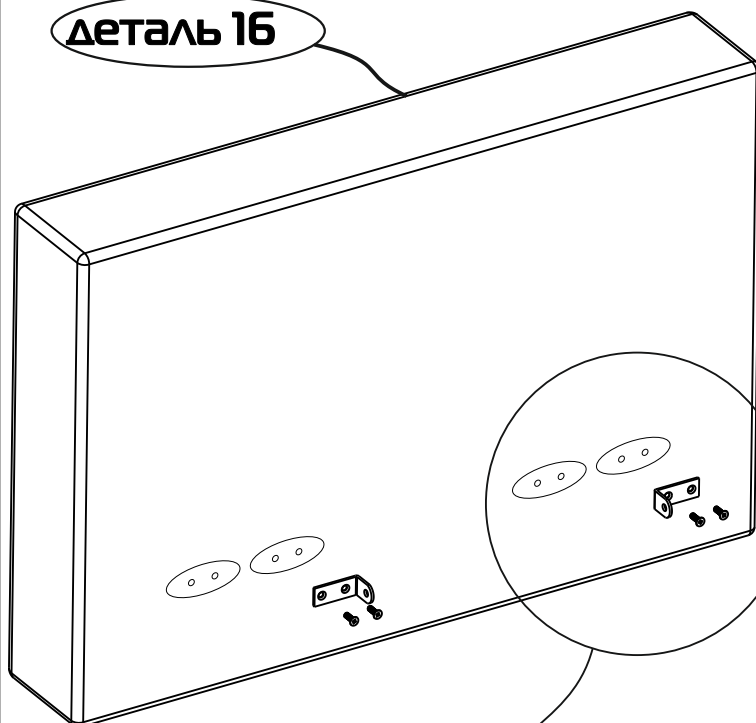


деталь 17

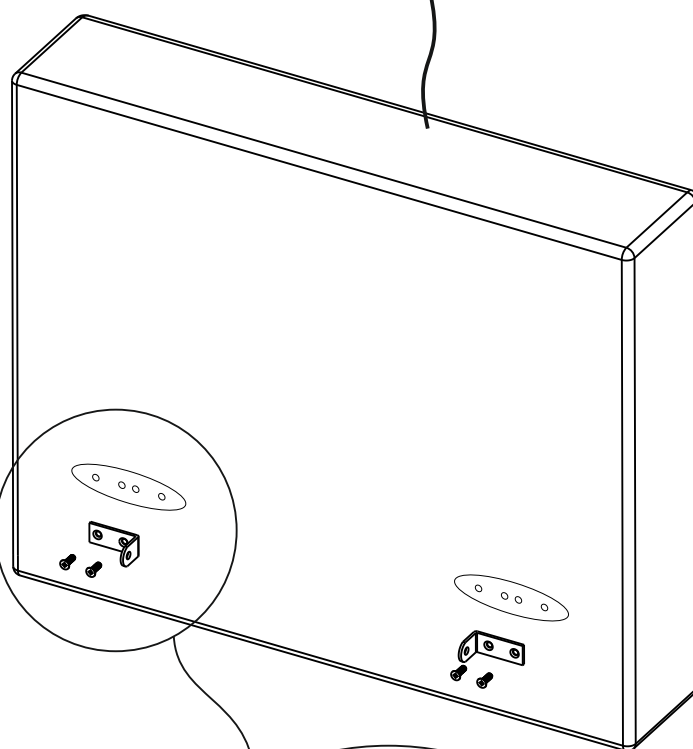

x2

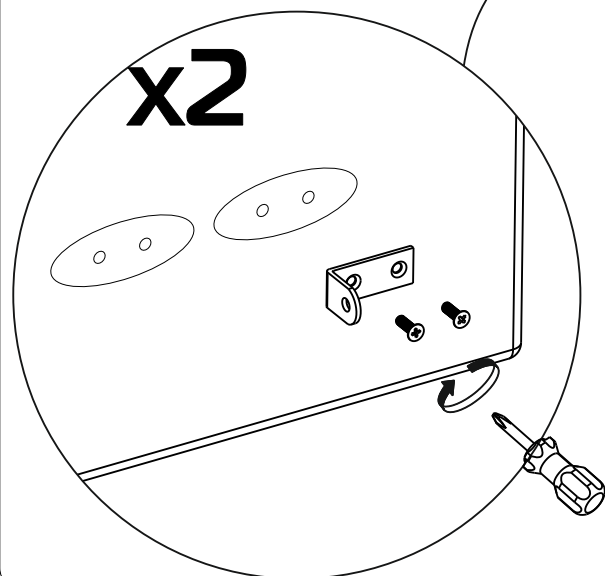




x2

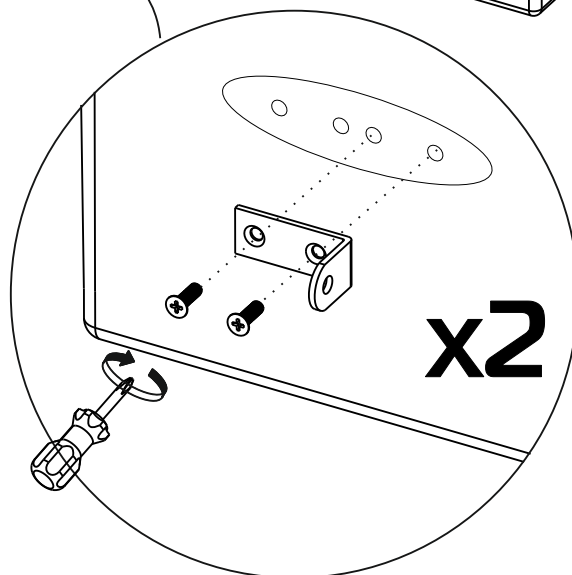

ШАГ 20 !




0
10
20

5
15

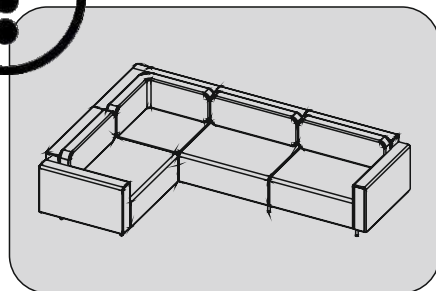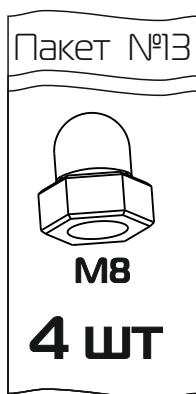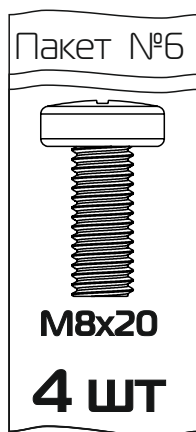

деталь 17



деталь 16

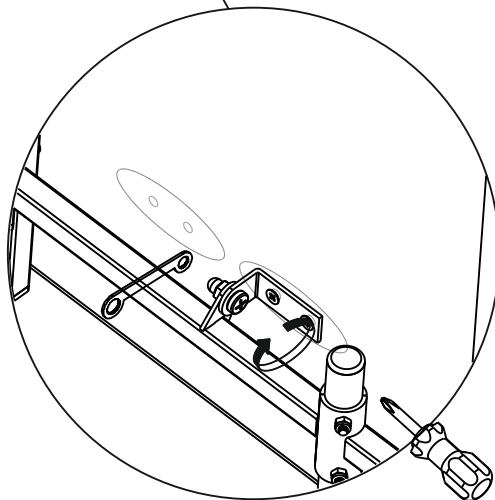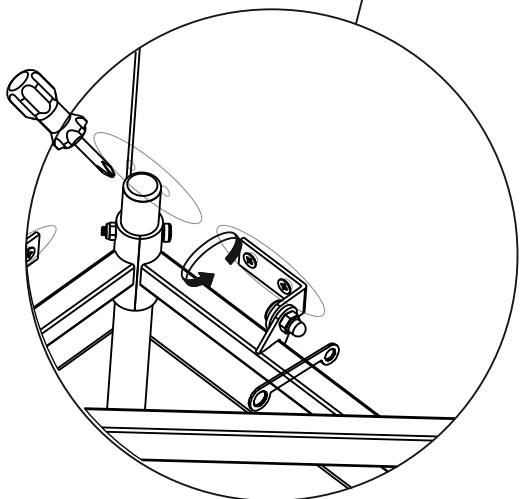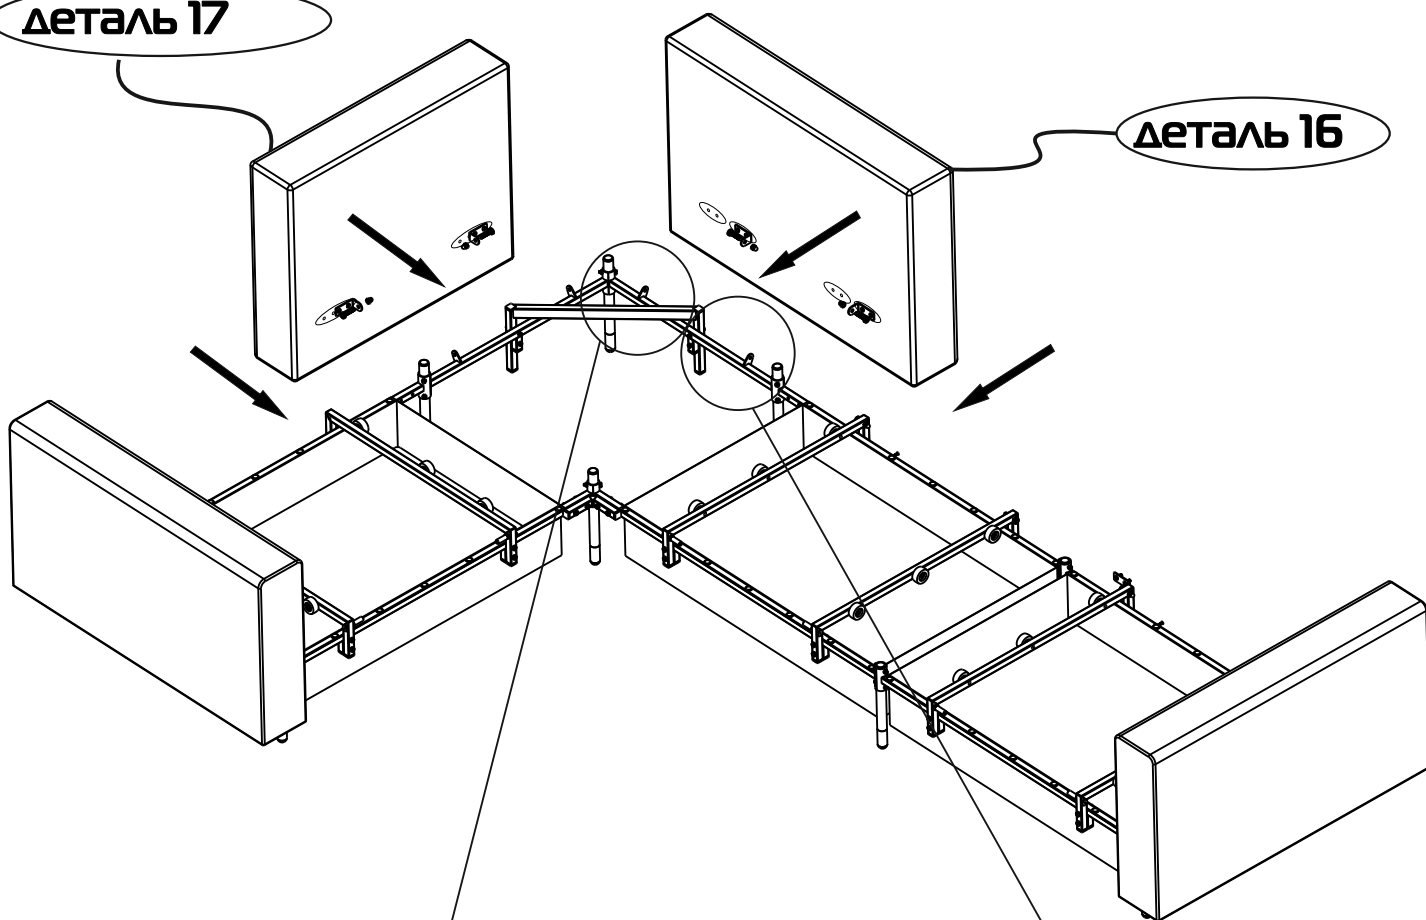


ШАГ 21

0
10
20

5
15

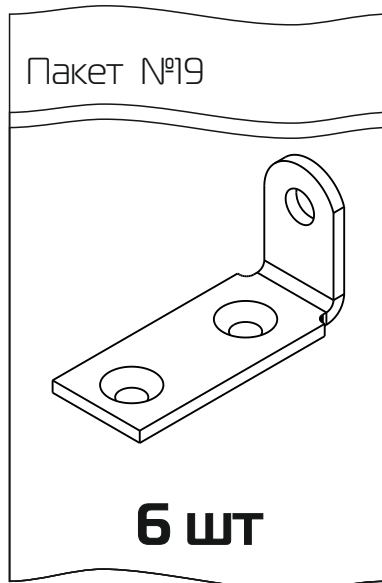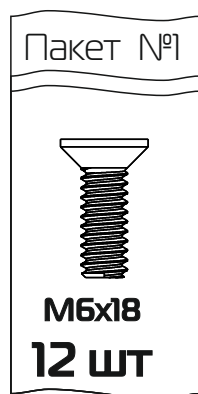



деталь 18

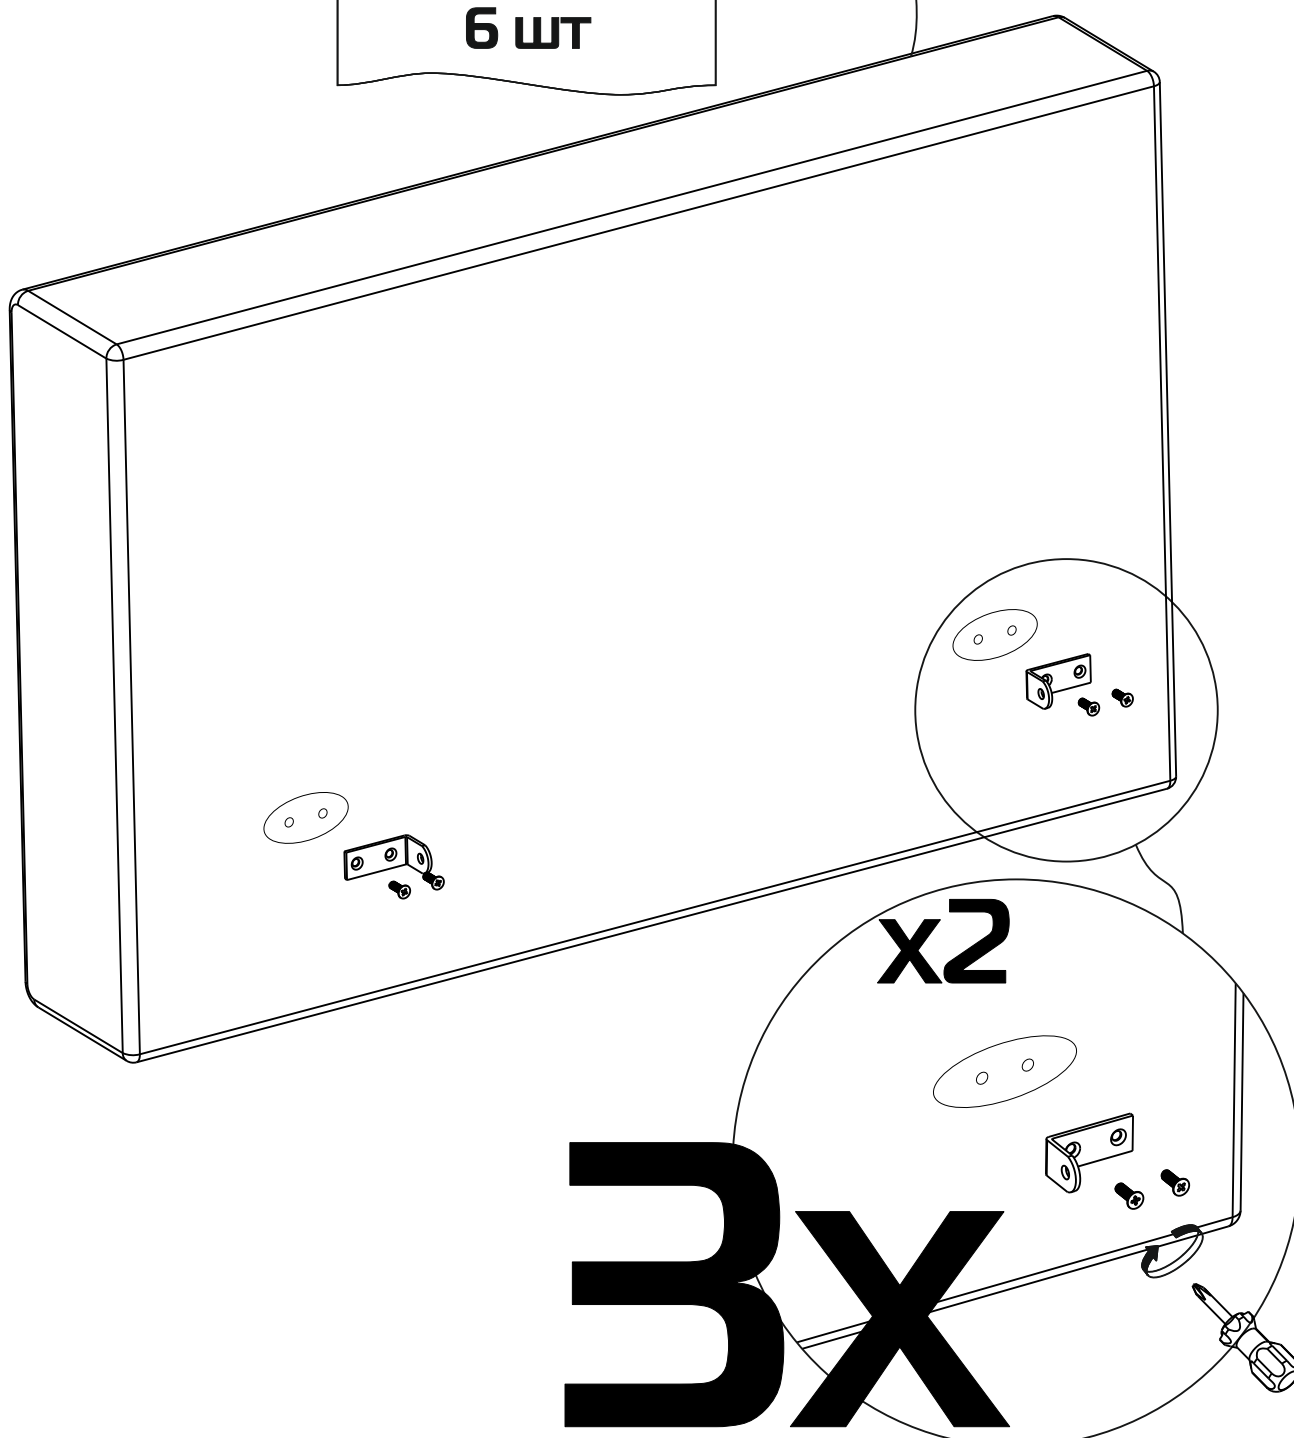




ШАГ 22

0
10
20
30
40


5
15
25
35

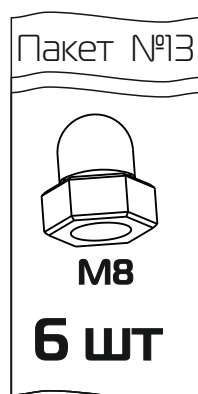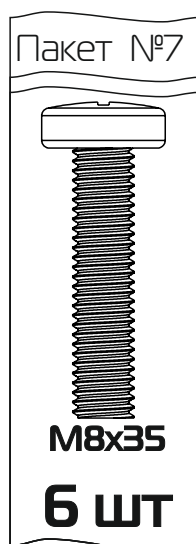

деталь 18

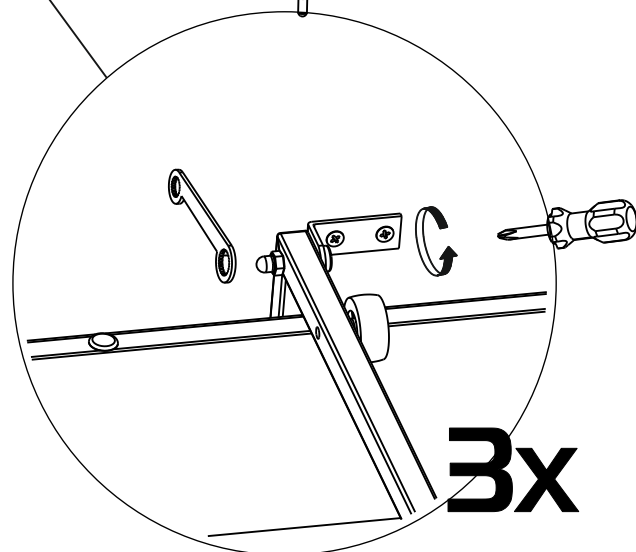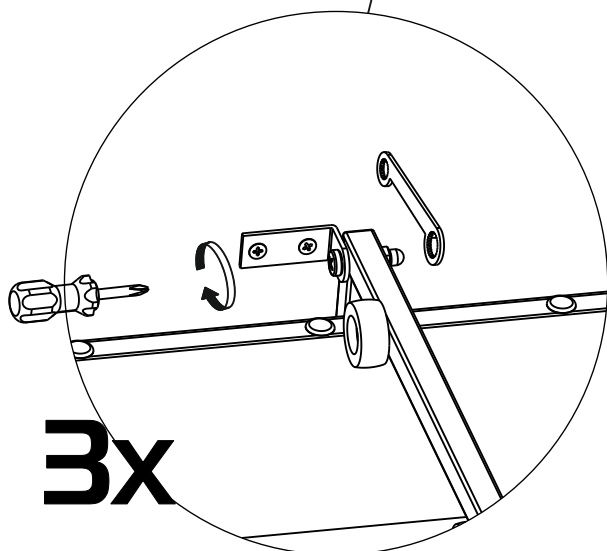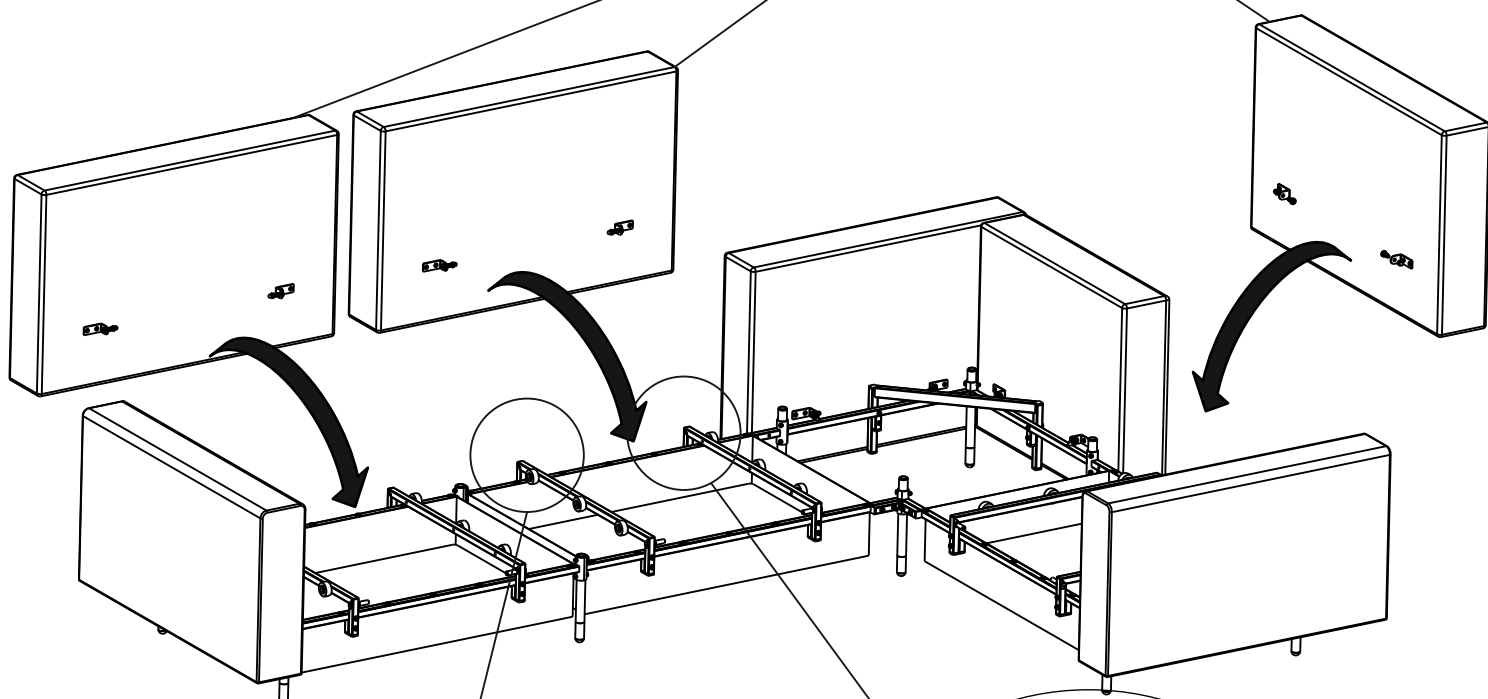


ШАГ 23







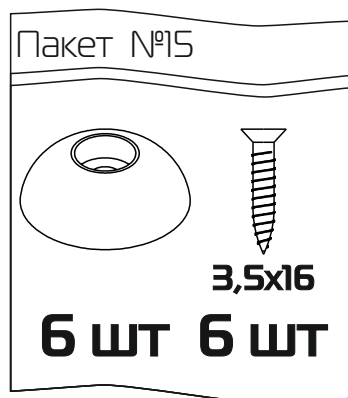


0
10
20


5
15

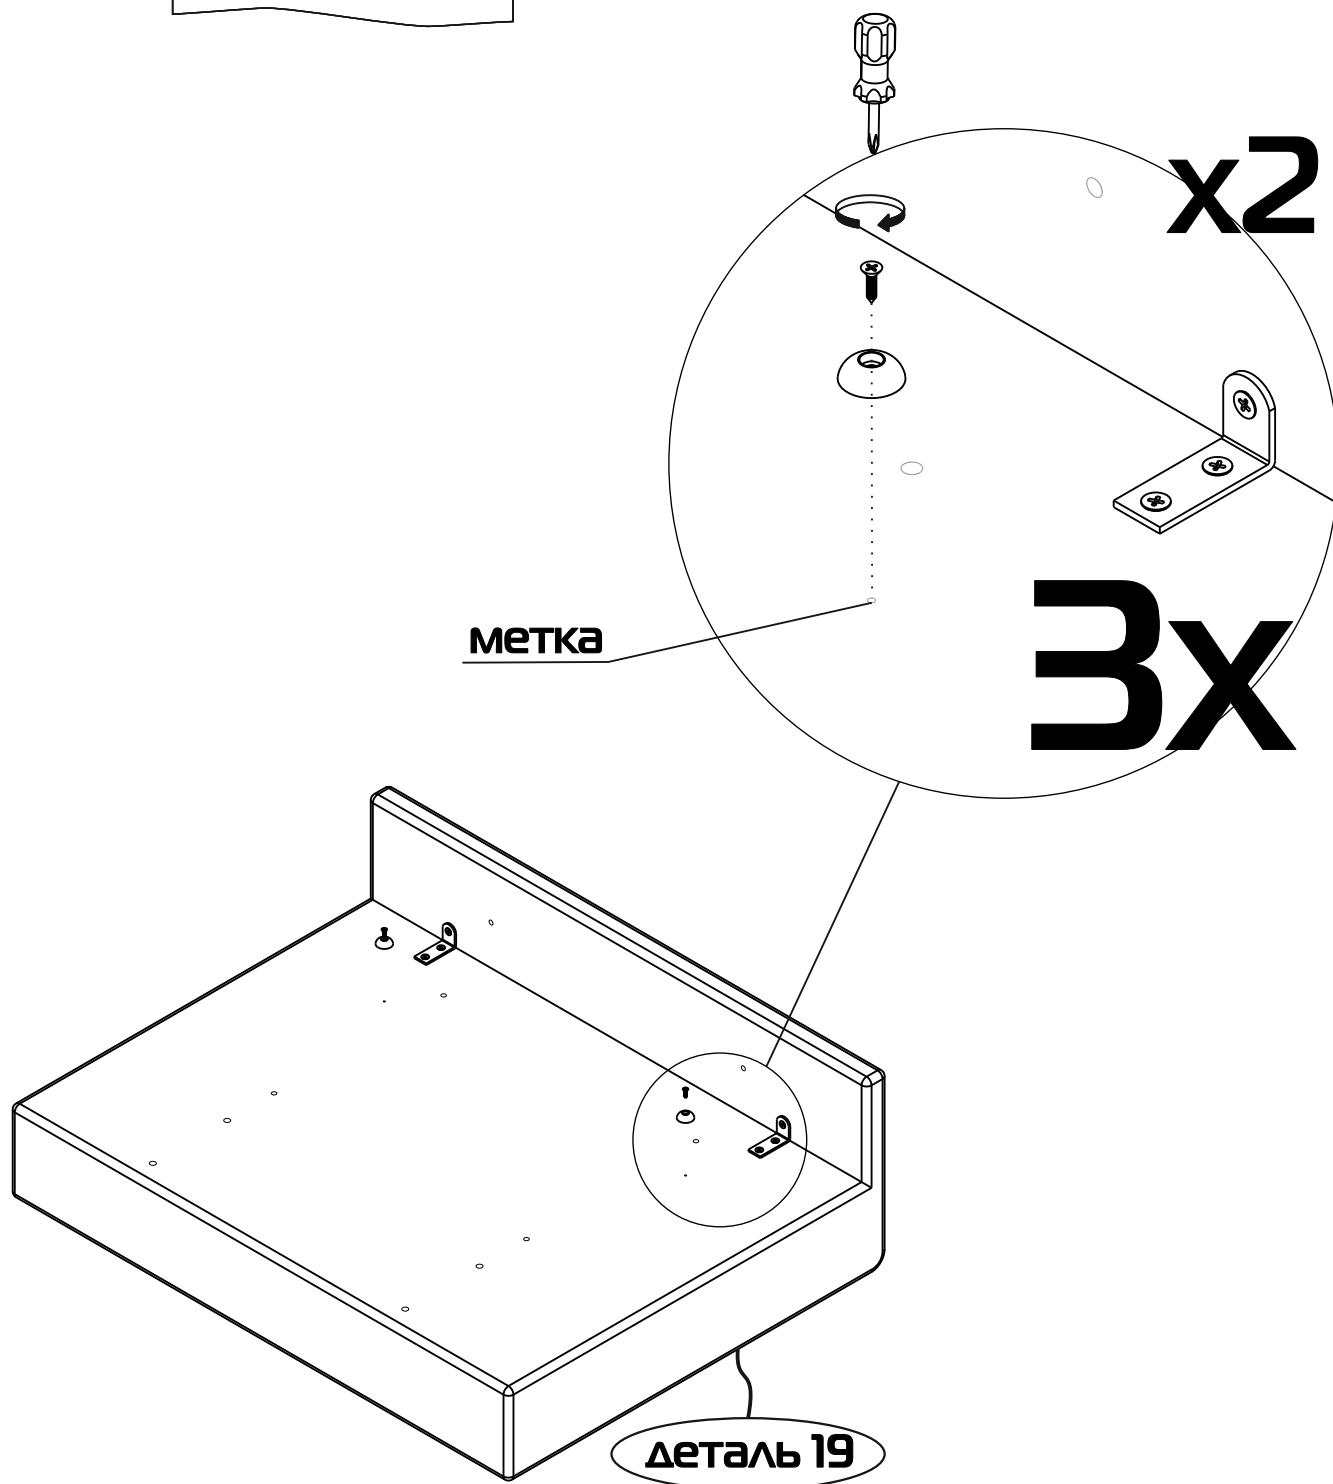


ШАГ 24

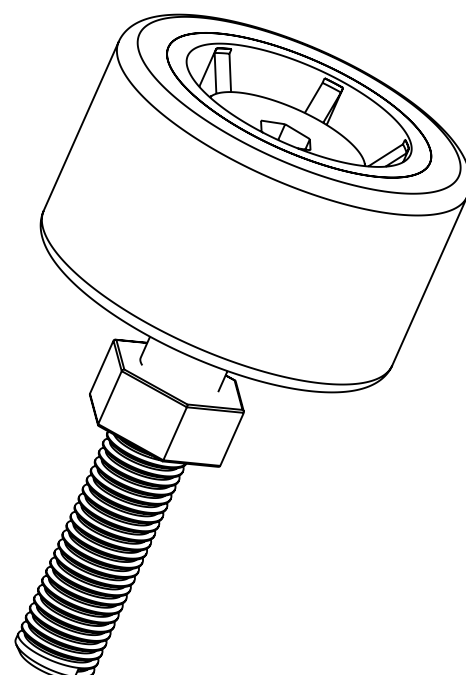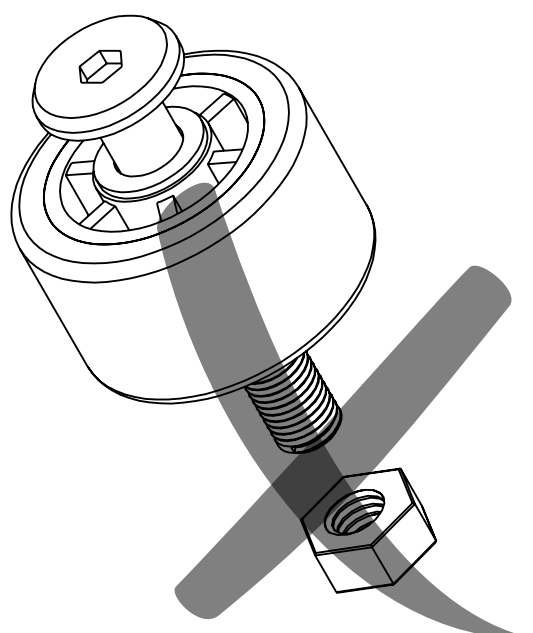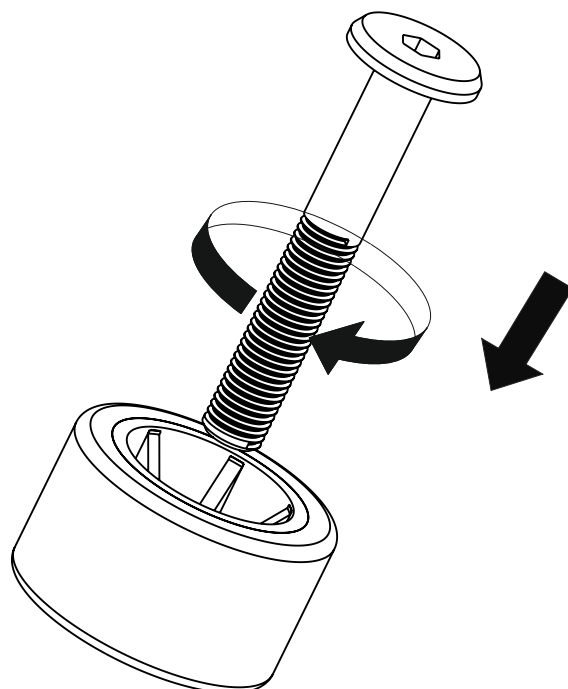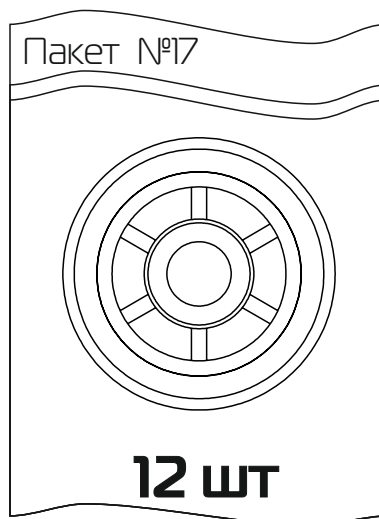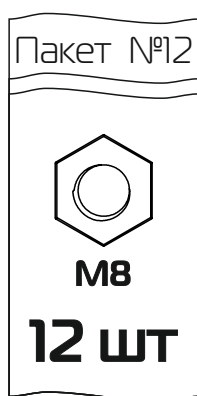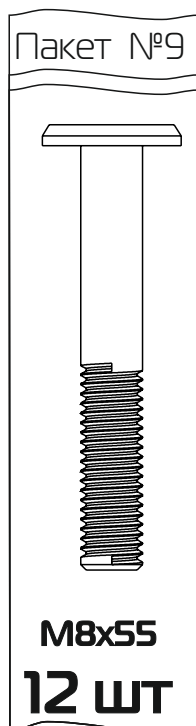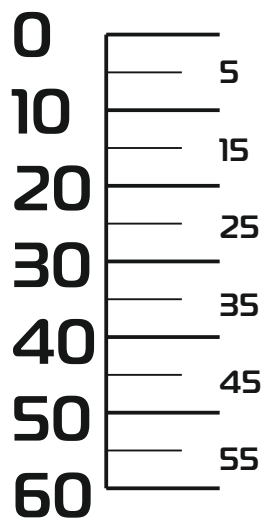


ШАГ 25

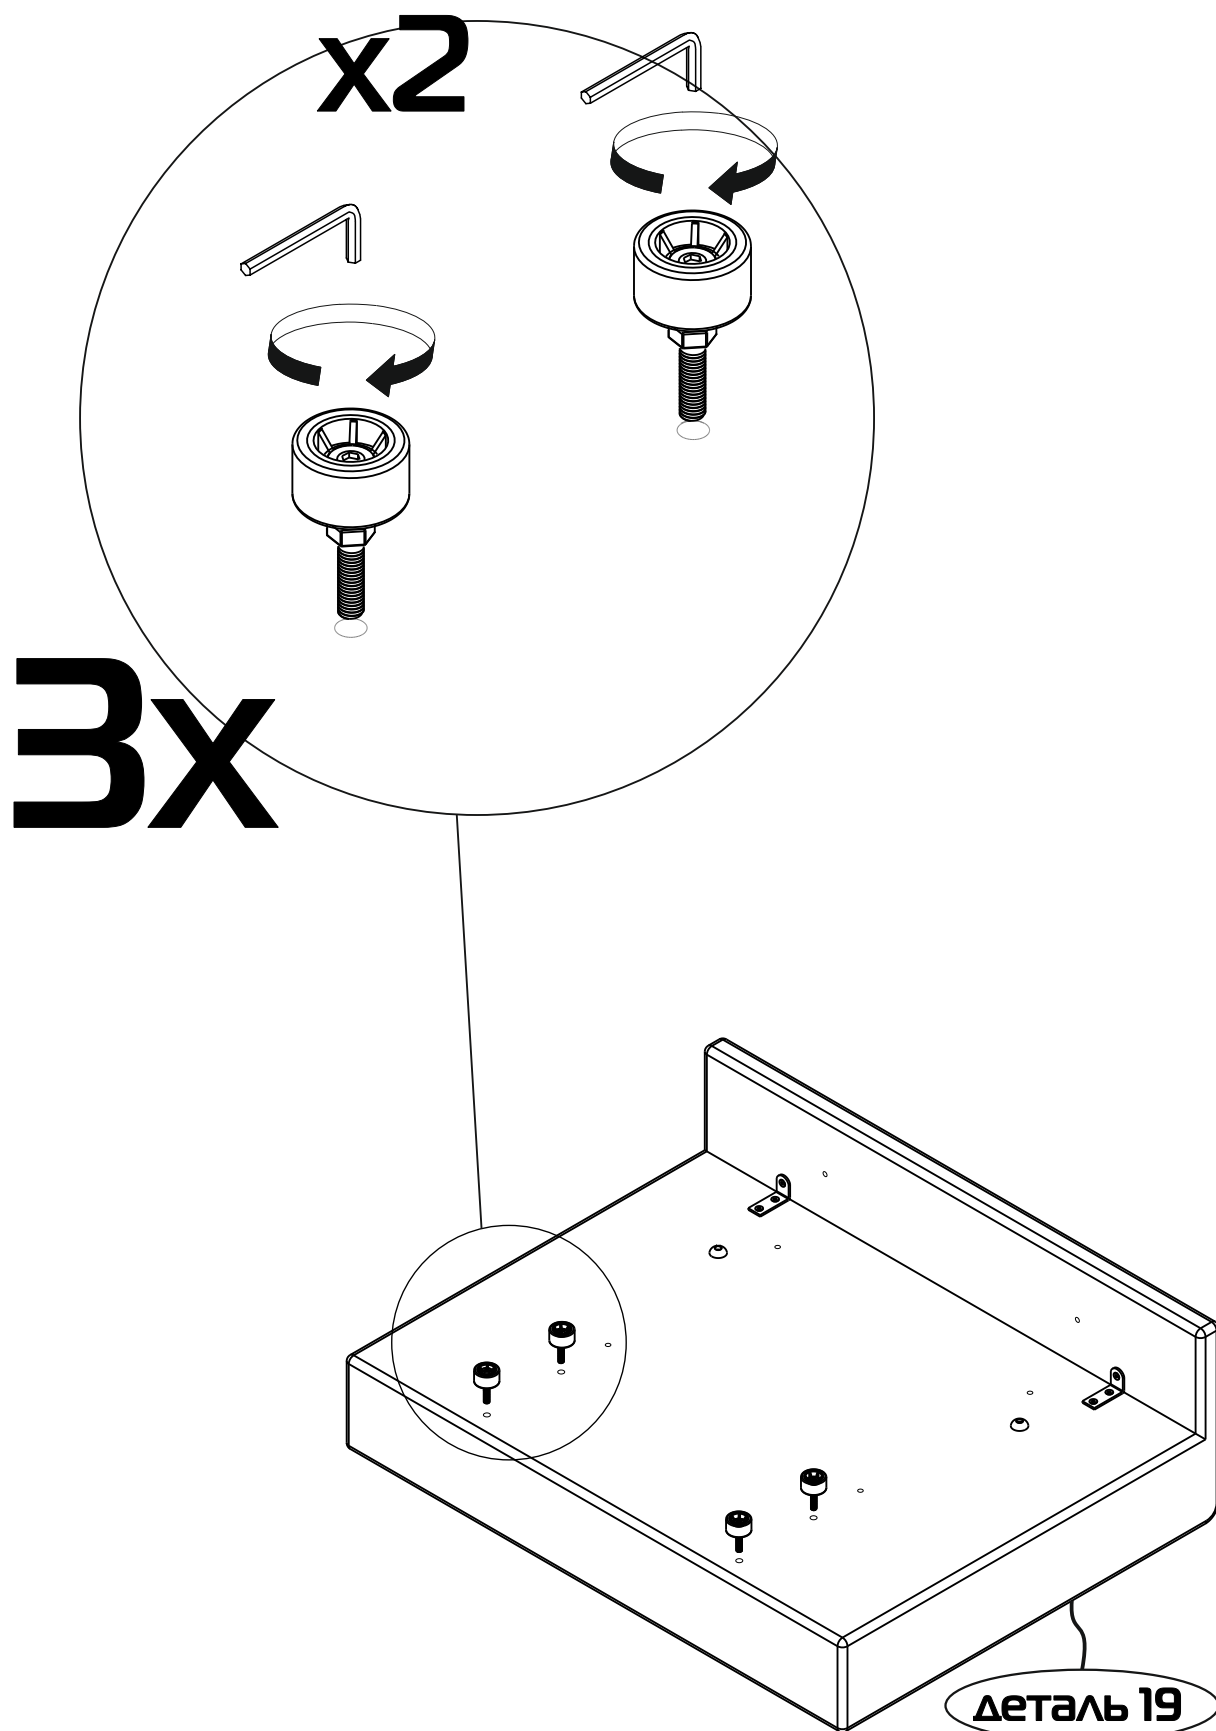


ШАГ 26

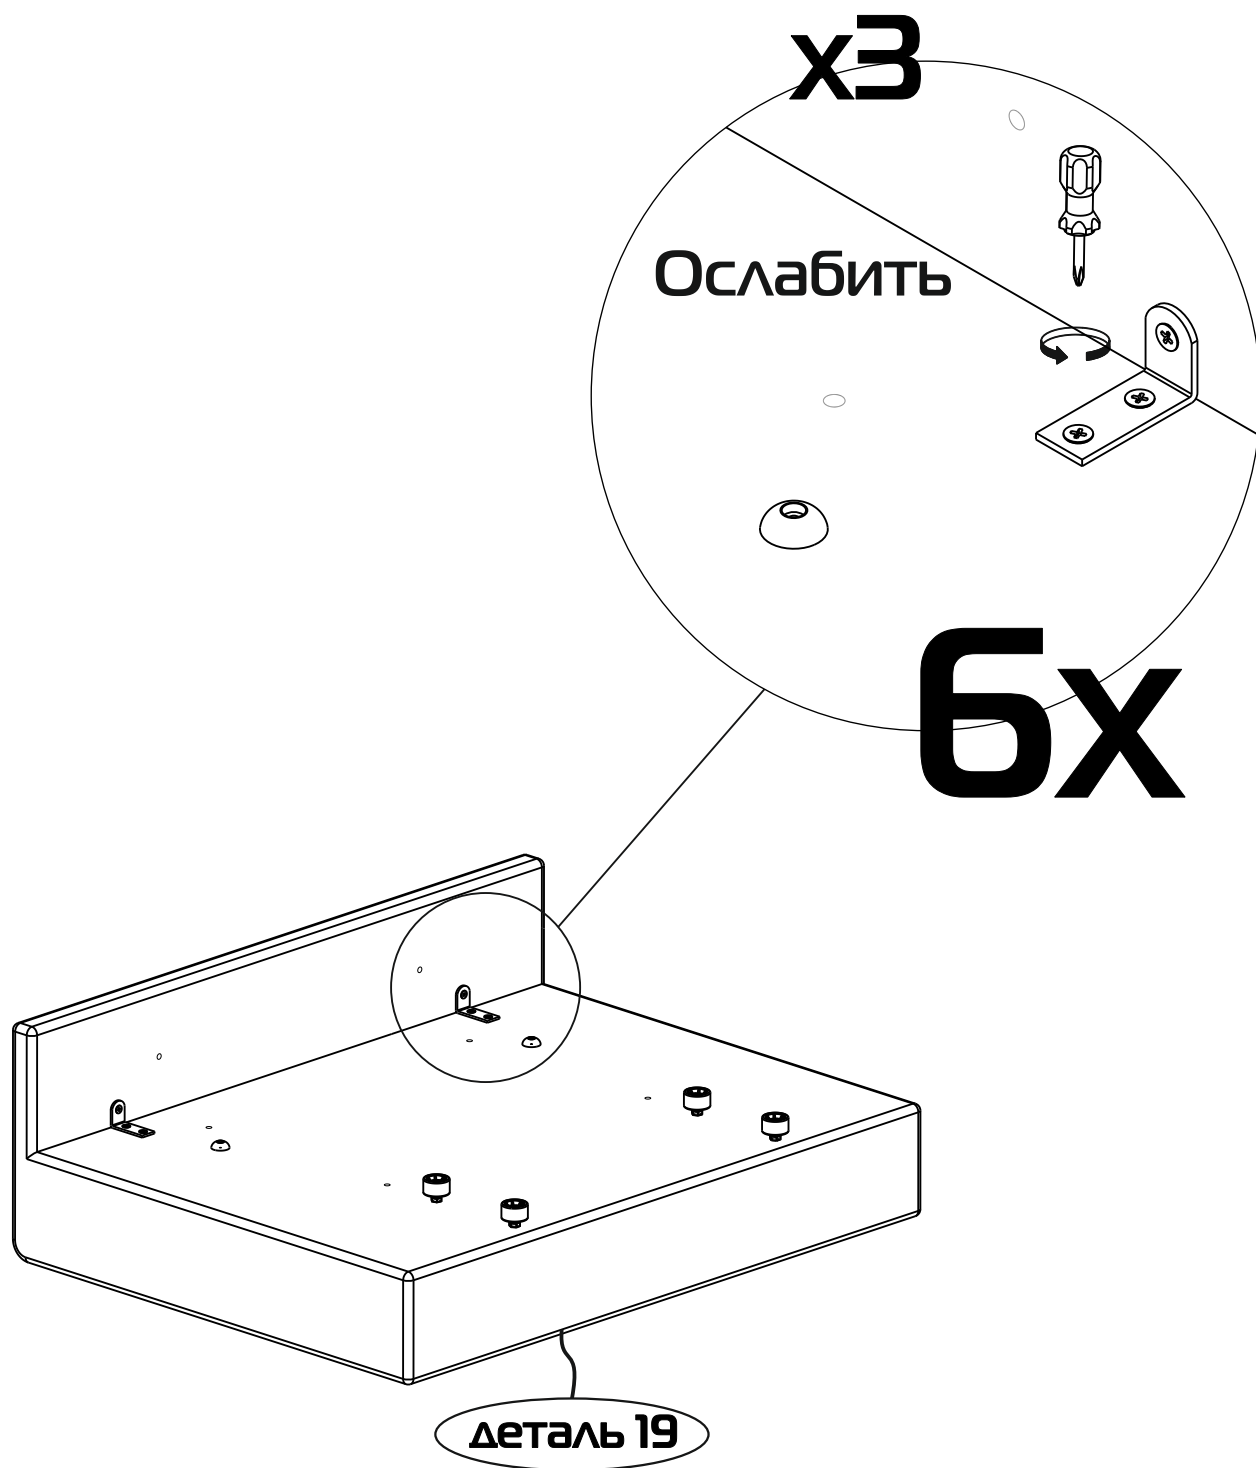


ШАГ 27

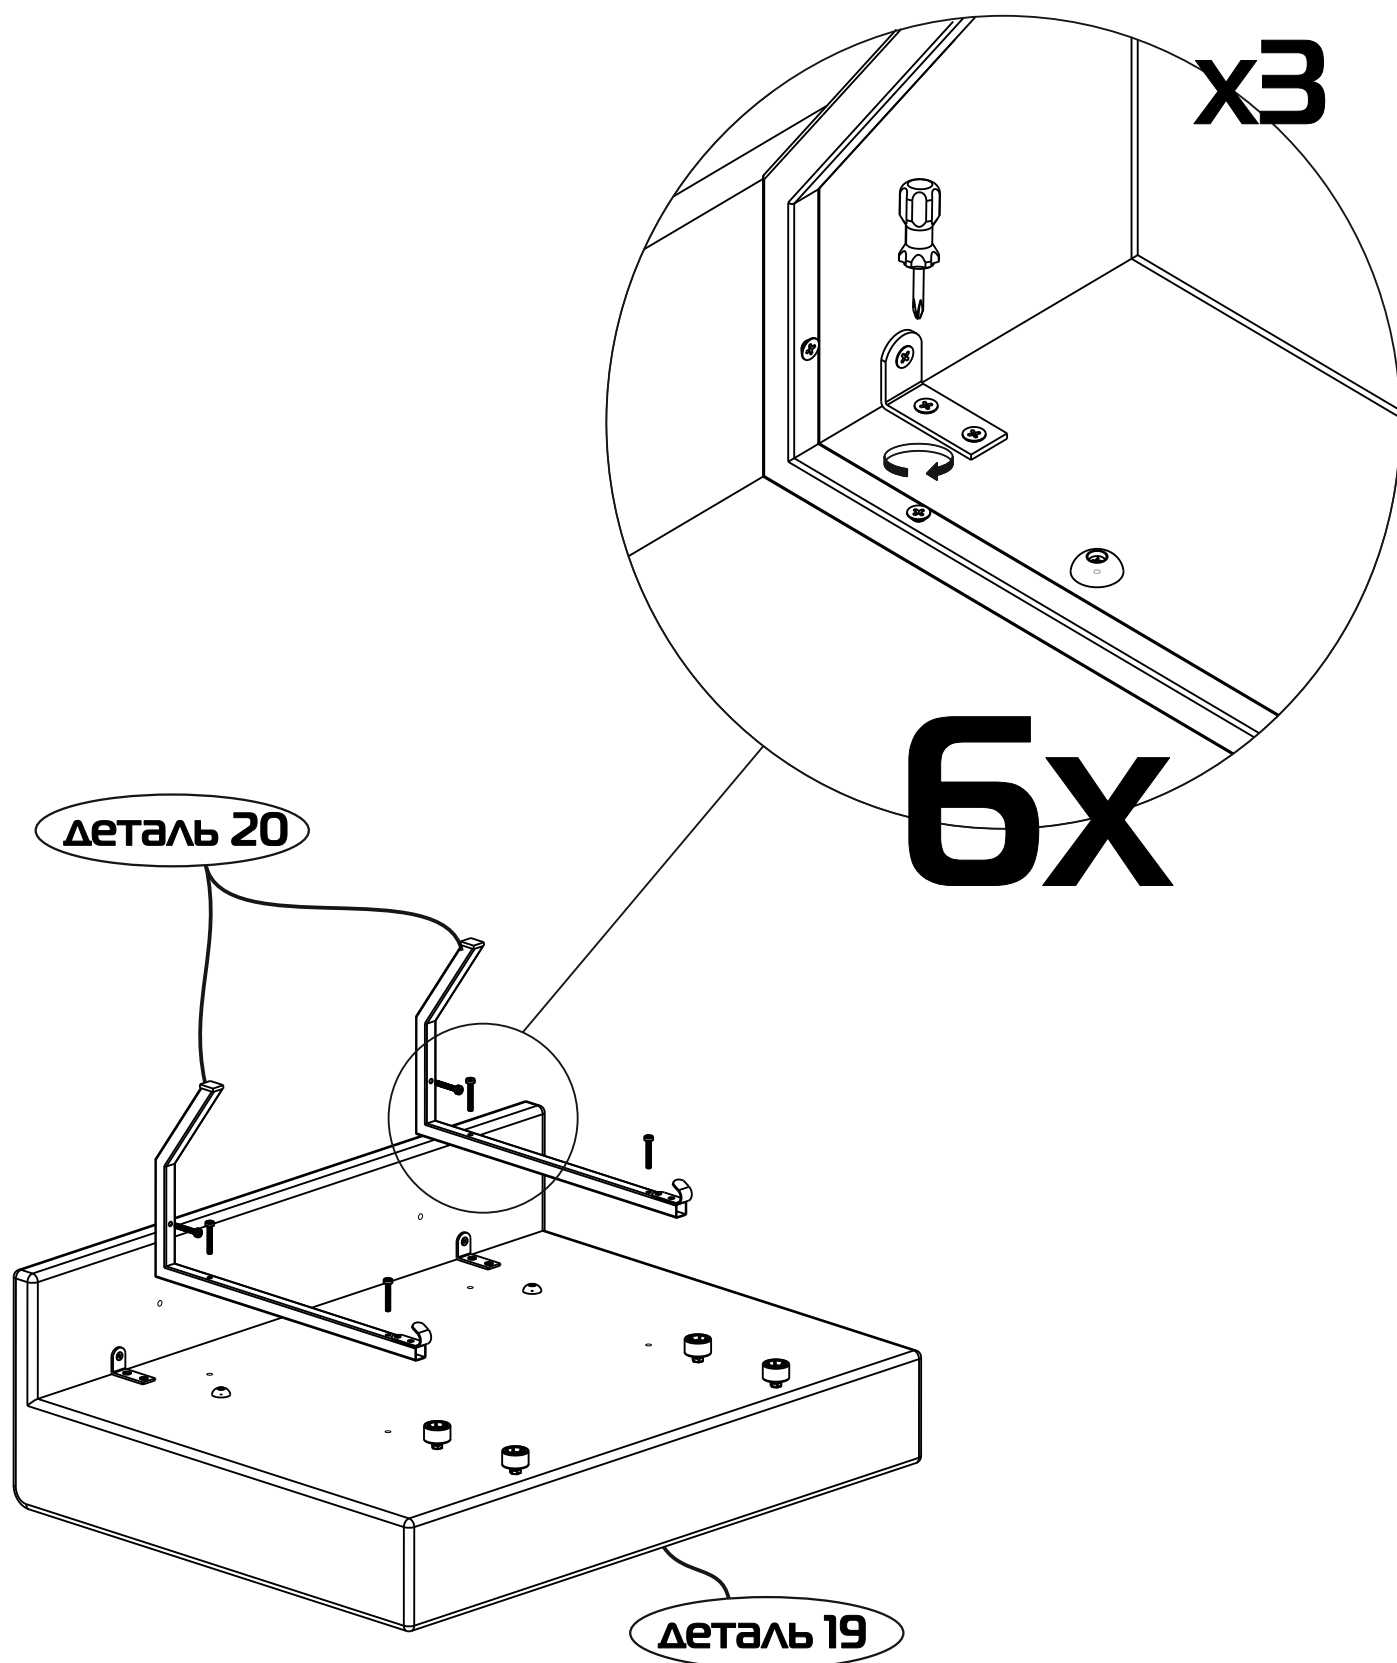


ШАГ 28

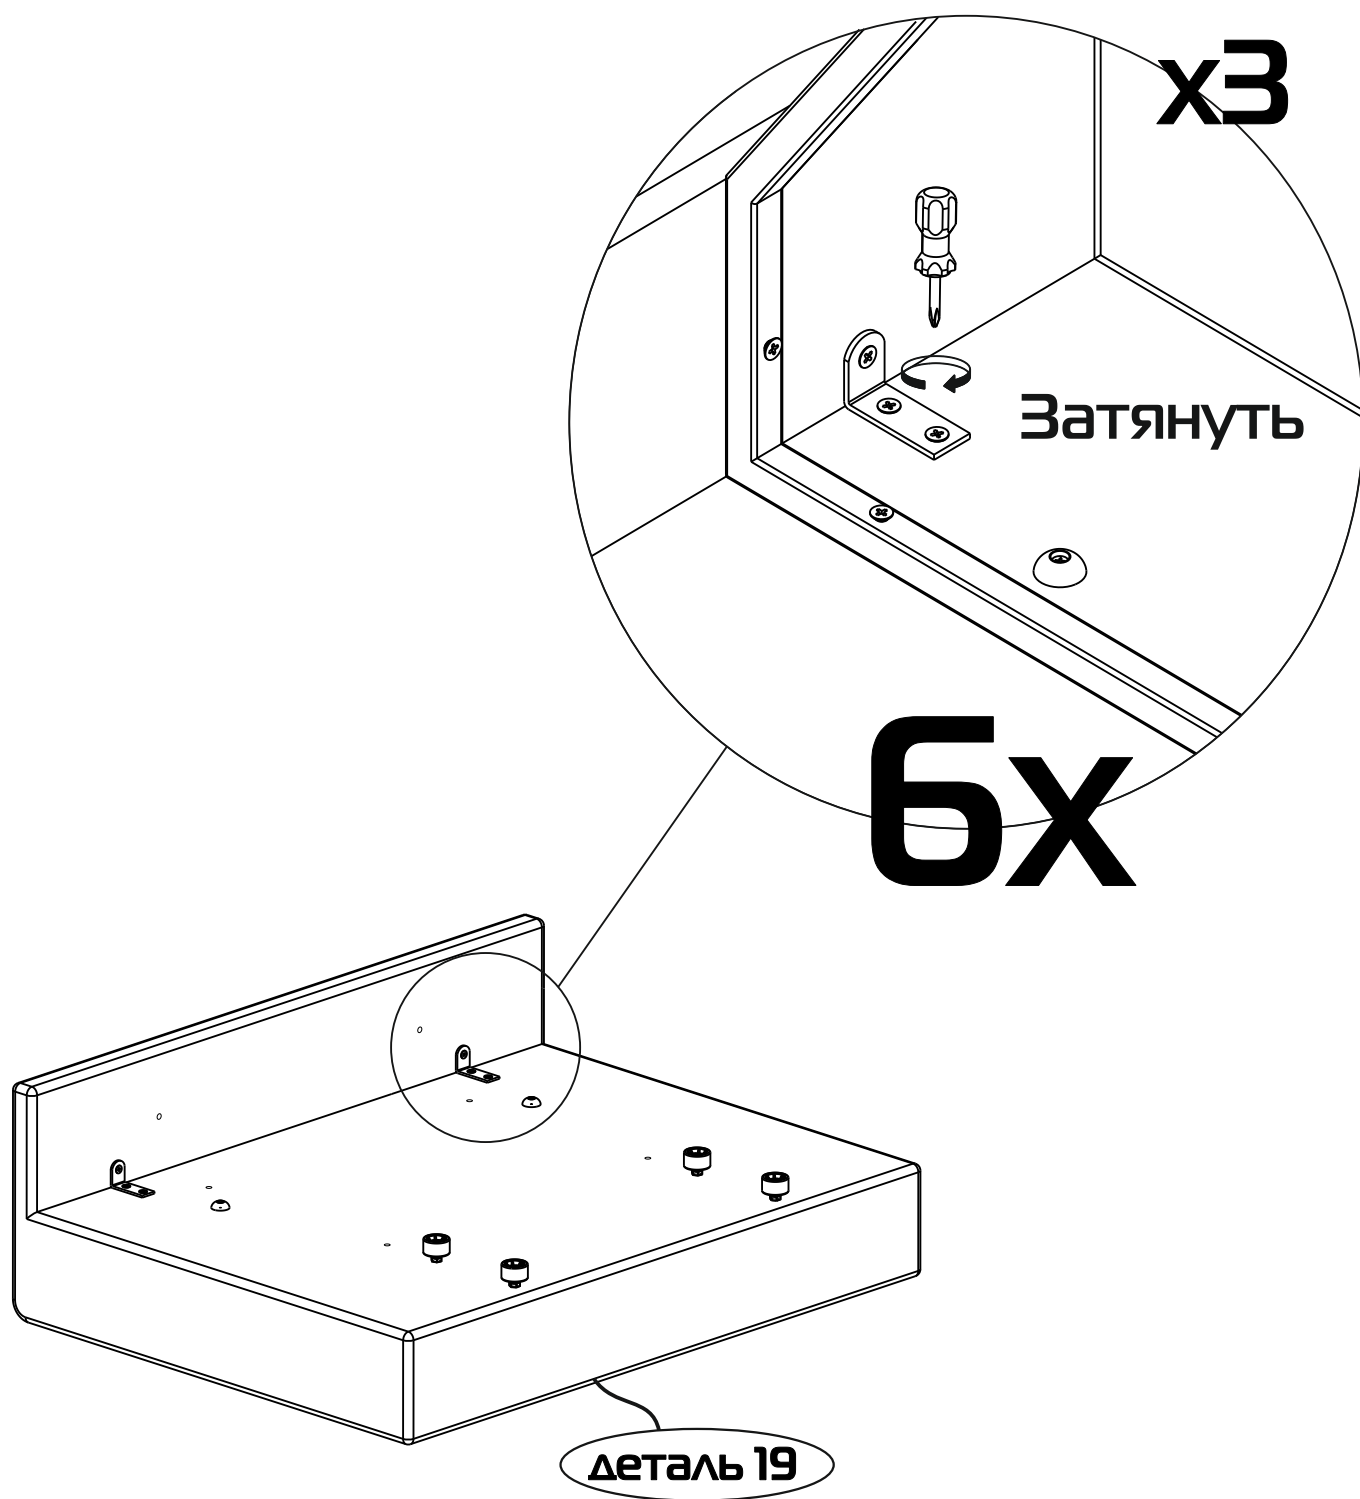


ШАГ 29

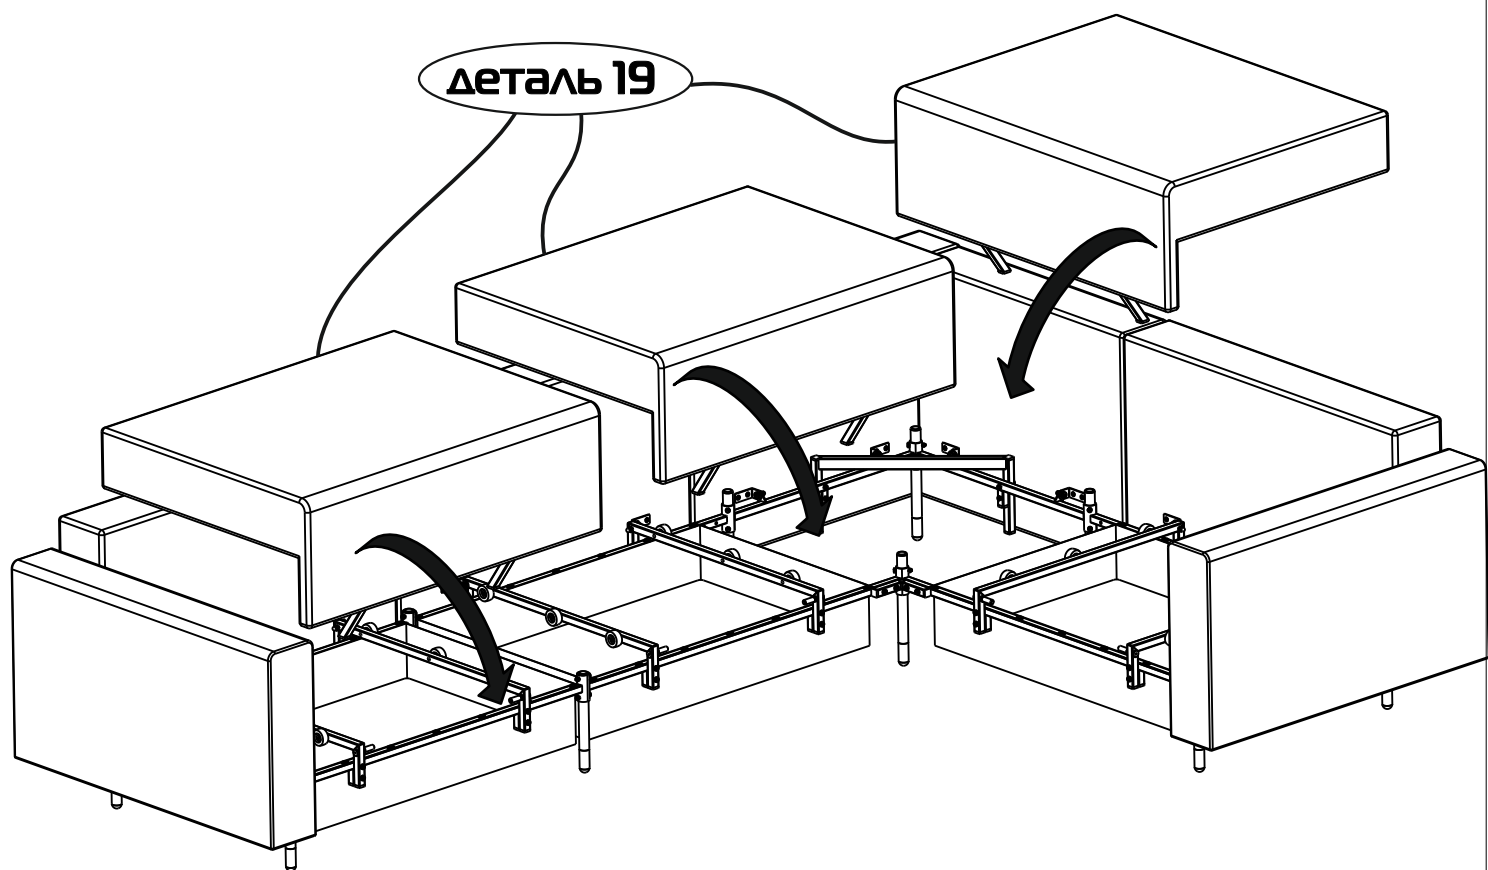


ШАГ 30

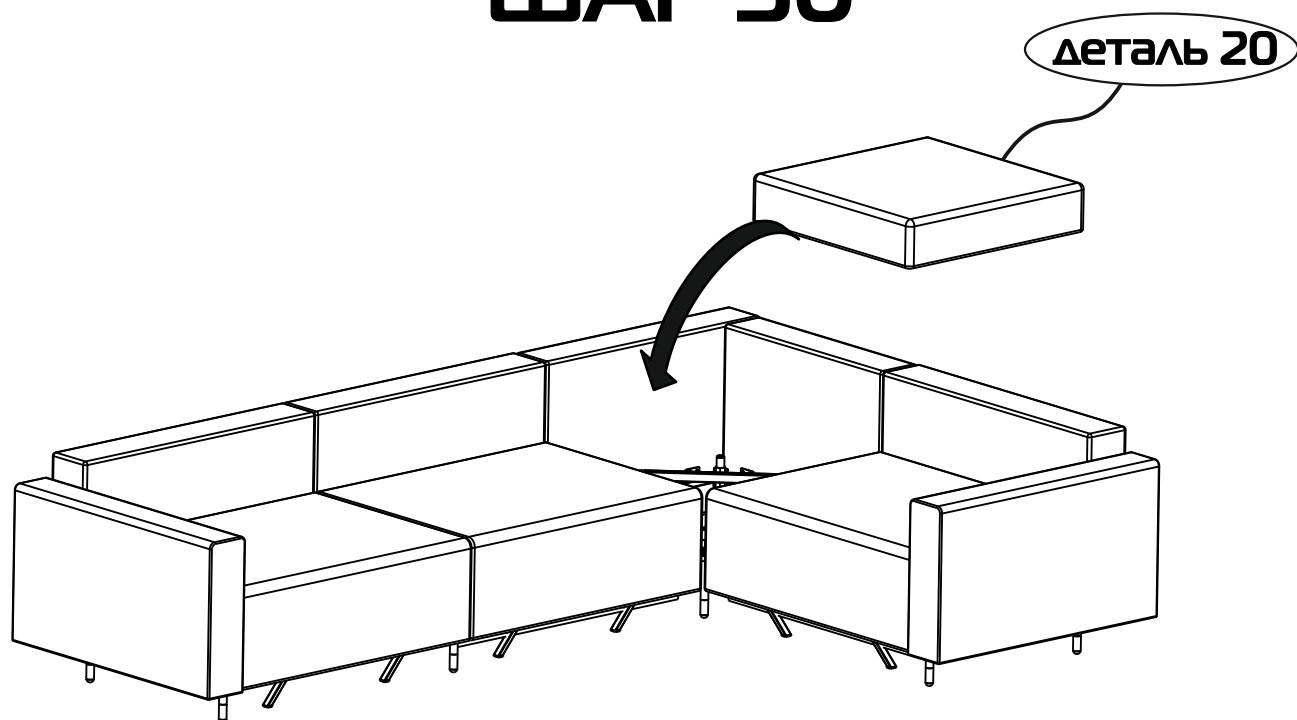


ШАГ 31

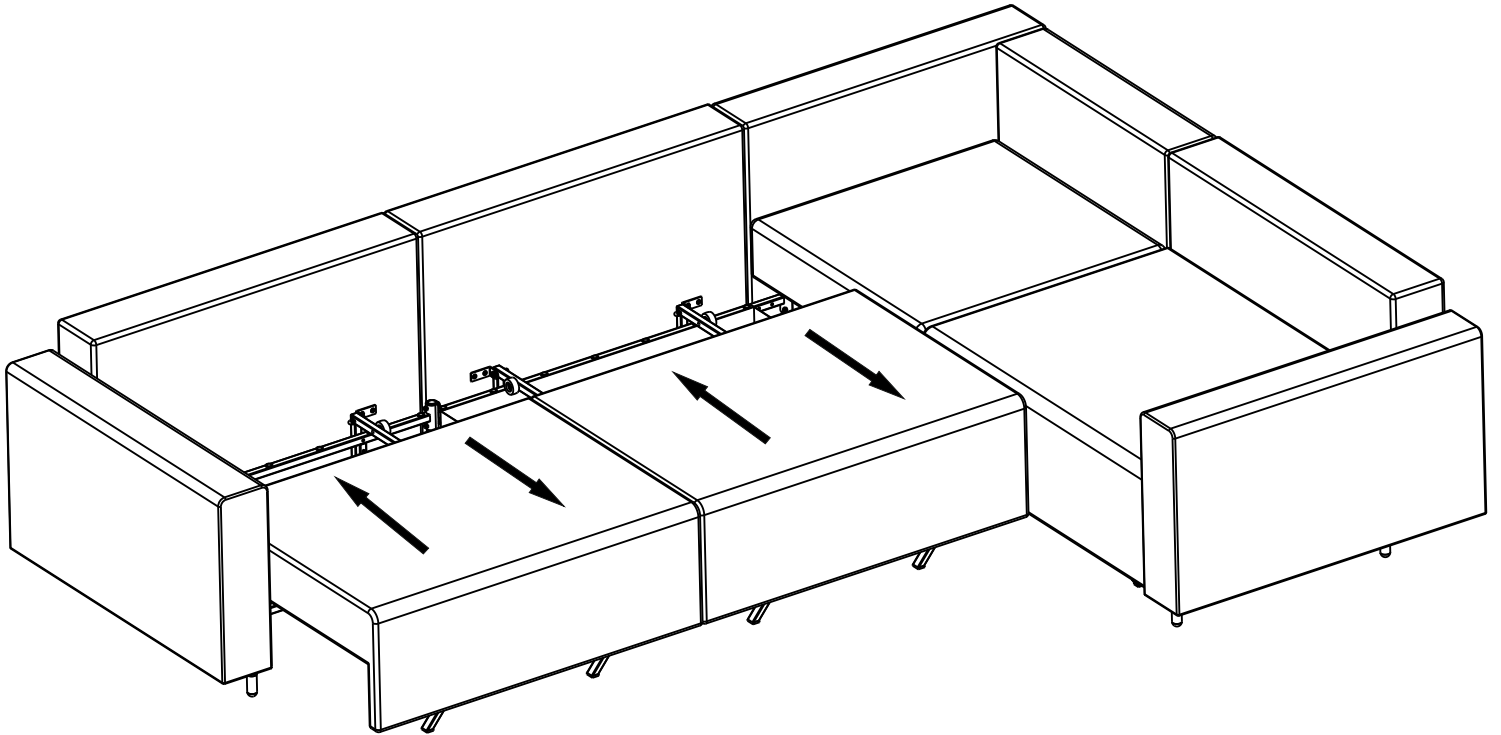


ШАГ 32

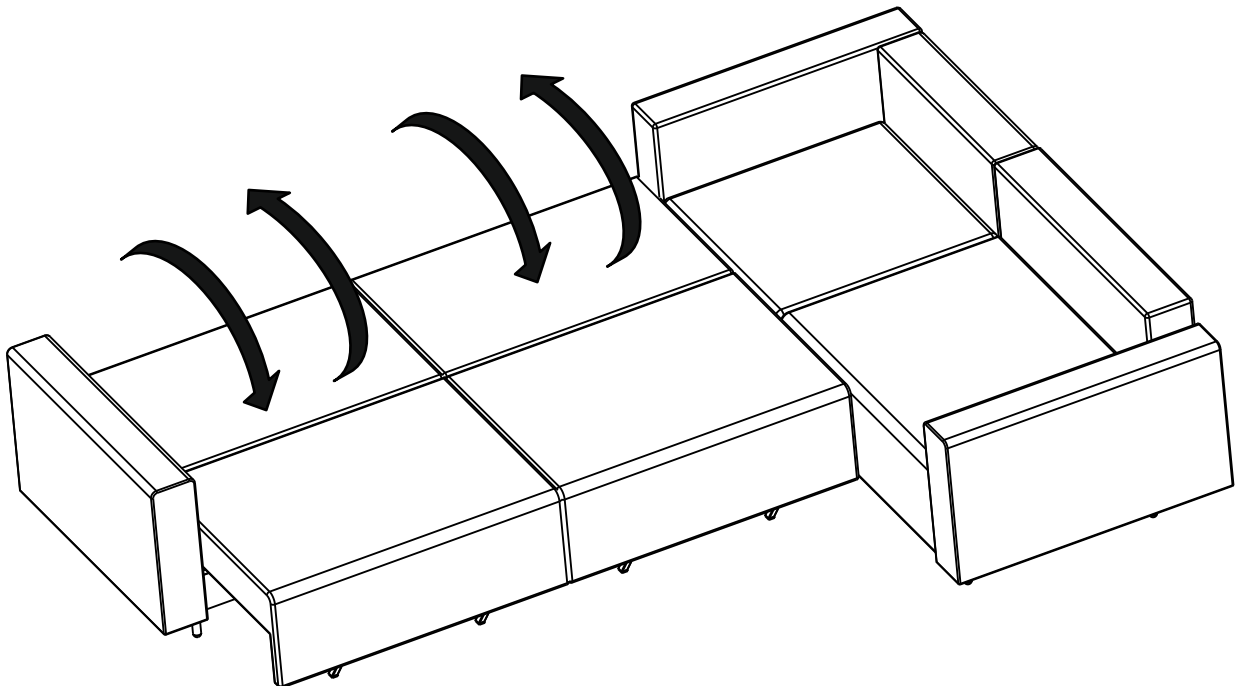


ШАГ 33

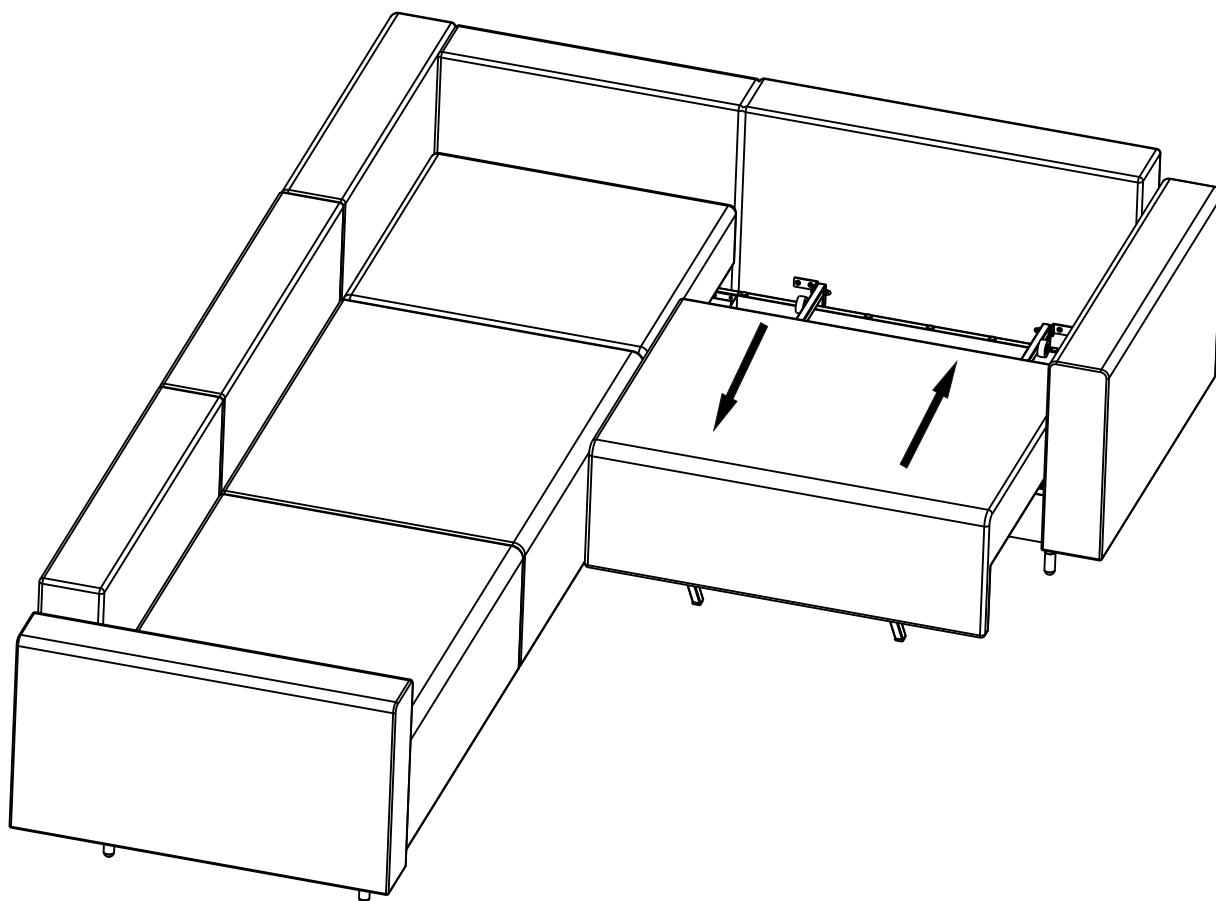

ШАГ 34

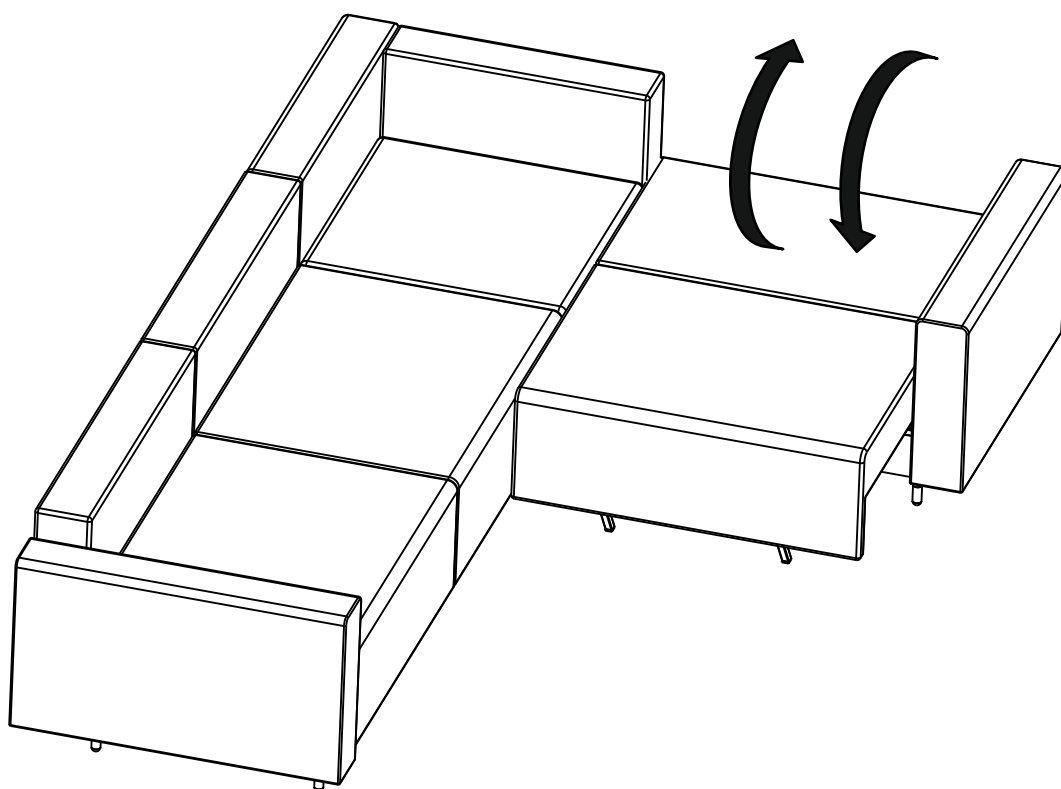

ШАГ 35

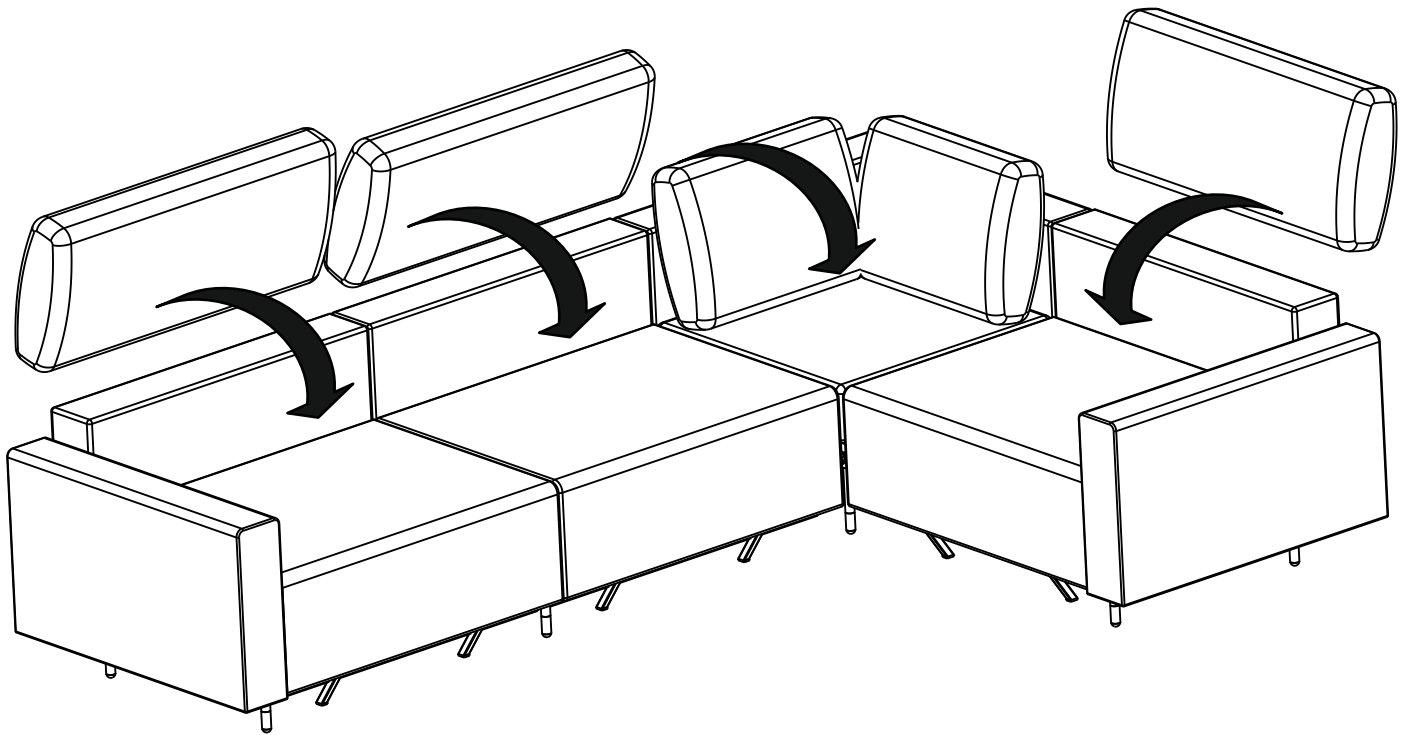

ШАГ 36

